

Type ES45P, MP, MPJ

4.5-Meter ESA



4.5-Meter Earth Station Antenna

Table of Contents

Introduction	Introduction	3
	Proprietary Data	4
	Information and Assistance	4
	Notice	4
	Technical Assistance	4
How to Use This Manual	Overview	5
	Content	5
Getting Started	Overview	6
	Warnings	6
	Recommended Tools	7
	Parts Verification	8
	Reporting Equipment Loss or Damage	8
	Installation Sequence Checklist	9
Installation Procedures	Overview	11
	Foundation Preparation	11
	A-325 Tensioning	12
	Pedestal Mount	13
	Unpacking	13
	Assembly (Using a Crane)	13
	Assembly (Without a Crane)	16
	Manual Pedestal Ground Mount Assembly	19
	Manual Actuator Assembly	27
	Manual Actuator Assembly Removal	28
	Motorizable Pedestal Ground Mount Assembly	28
	ES45P/MP Reflector	33
	Reflector Leveling Procedure	39
	Reflector Center Plate Assembly	41
	Feed Strut Assembly	42
	Back Structure	43
	Reflector-To-Mount Assembly	45
	Feed Support/Strut Assembly	46
	Polarization Adjustment	47
Operation	Overview	48
	Acquiring a Satellite	48
	Manual Actuator Assembly Removal	52
Preventive Maintenance	Overview	53
	Preservation of Component Parts	59

Introduction

Like all Andrew earth station antennas, the 4.5-meter earth station antenna provides high gain and exceptional pattern characteristics. The electrical performance and exceptional versatility provides the ability to configure the antenna with your choice of transmit/receive as well as receive-only, and for either linearly- or circularly-polarized C-Band, linearly-polarized Ku-Band, Hybrid C-/Ku-Band or X-Band operation. Both pedestal and tripod mount types are available (motorization for pedestal only). The versatility is provided at the time of initial purchase, as well as in the future, as your satellite communications requirements evolve.

The segmented aluminum reflector panels are precision formed for accuracy and strength. The 6-piece reflector panel design ensures that the assembled reflector will maintain the extremely accurate surface contour and guaranteed performance without reflector alignment.

The versatile tripod mount features 164° of coarse azimuth coverage in four overlapping ranges, and 90° coarse elevation adjustment. This large range of adjustment provides the ability to view geostationary satellites from horizon-to-horizon, from any location within the continental United States. The broad mount leg spacing enable efficient load transfer to the foundation, providing additional mount rigidity.

The motorizable pedestal mount features self-aligning bearings for the elevation pivots, resulting in “zero” backlash. This mount can be operated manually, but has the potential to be upgraded for motorized operation, including steptracking/Smartrack™ applications. The motorizable mount type is indicated by the ES45MP or ES45MPJ letters within the antenna type number. The addition of the letter “J” within the antenna type number indicates that the mount includes azimuth/elevation machine jackscrews, instead of corresponding azimuth and elevation strut assemblies. The azimuth/elevation jackscrews are equipped for integration with the optional motor drive systems.

A manual pedestal mount is also available. It provides the same strong and versatile combination of mechanical features as the motorizable version; except that the elevation and azimuth axes are locking types, instead of bearing mounted types. This mount type is always equipped with manual struts and a fixed mount for the separately ordered combining network. This mount has been designed for manual applications only and cannot be upgraded to a motorizable mount.

The aluminum back structure and hot-dipped galvanized steel mount maintains pointing accuracy and ensures durability and reliability. The antenna and mount will survive 125 mph (200 km/h) wind, in any position of operation, without damage or permanent deformation.

Andrew provides a complete line of available options, including field-installable electrical anti-icing heaters, pressurization equipment and interconnecting HELIAX cables and waveguide.

An optional hoisting kit, which precludes the use of a crane, is available from Andrew and can be utilized as an installation tool for multiple installation purposes.

Proprietary Data

The technical data contained herein is proprietary to Andrew Corporation. It is intended for use in installation, operation, and maintenance of Andrew equipment. This data shall not be disclosed or duplicated in whole or in part without express written consent of Andrew Corporation.

Information and Assistance

Andrew corporation provides a world-wide technical support network.

Notice

The installation, maintenance, or removal of antenna systems requires qualified, experienced personnel. Andrew installation instruction have been written for such personnel. Antenna systems should be inspected once a year by qualified personnel to verify proper installation, maintenance, and condition of equipment.

Andrew disclaims any liability or responsibility for the results of improper or unsafe installation practices.

All designs, specifications, and availabilities of products and services presented in this manual are subject to change without notice.

Technical Assistance

24-hour Technical Assistance

For technical assistance, call the following numbers at anytime.

Call From	Call To	Telephone	Fax
North America (toll free)	U. S. A.	1-(800)-255-1479	(800)-349-5444
Any Location (International)	U. S. A.	(708)-349-3300	(708)-349-5410

Customer Service Center

The Andrew Customer Service Center gives you direct access to the information and personnel service you need, such as the following:

- Place or change orders
- Check price and delivery information
- Request technical literature

You can call from any of the following:

Call From	Telephone	Fax
North America	1-800-255-1479 (toll free)	1-(800)-349-5444 (toll free)
United Kingdom	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
Australia	0011-800-0-255-1479 (toll free)	0011-800-0-349-5444 (toll free)
China	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
New Zealand	00-800-0-255-1479 (toll free)	00-800-0-349-5444 (toll free)
Hong Kong	001-800-0-255-1479 (toll free)	001-800-0-349-5444 (toll free)

How to Use This Manual

Overview

The scope of this manual is intended to provide station personnel with the base installation (ie: mount, reflector and enclosure), operation and maintenance requirements necessary for a 4.5-Meter Earth Station Antenna.

Note: All antenna option instructions are included in the individual kit shipped with the part. This manual provides a convenient reference for authorized operator/service personnel requiring technical information on general system or specific subsystem equipment.

The tables and figures presented in this manual are used as communication aids for the installation, operation and maintenance of the 4.5-Meter Earth Station Antenna. These tables and figures instantly convey messages, as well as make the procedures easier to understand. This manual uses tables and figures for the following references:

- **Tables** The tables allow you to locate information quickly and easily.
- **Drawings** The drawings supplement the installation instructions by using a combination of graphics and verbiage to assist you in simplifying complex procedures and clarifying components
- **Photographs** The photographs complement the installation instructions by providing actual examples of the steps being performed, which allow you to view the installation in process.

Content

The manual is divided into five distinct sections, each dealing with a specific technical topic relating to either system or component subsystem information. The sections contained in this manual are described and listed under the following technical headings:

- **How to Use This Manual** Describes the manual's purpose, content, and communications aids. Additionally, this section lists the related documentation for the 4.5-Meter Earth Station Antenna.
- **Getting Started** Provides the preliminary information needed to perform a successful installation. This section should be reviewed prior to the installation. The warnings, recommended tools, parts verification, instructions on reporting lost or damaged equipment and installation checklist are located in this section.
- **Installation Procedures** Provides the procedures for the different phases of a 4.5-Meter Earth Station Antenna base installation. This section will help you easily find requirements for an individual task, as well as display the sequence for each tasks execution.
- **Operation** Describes the controls, functions, and general operating procedures required for proper operation of the 4.5-Meter Earth Station Antenna
- **Maintenance** Describes preventative maintenance procedures that are required to maintain proper functional operation of your new Andrew Earth Station Antenna.

Getting Started

Overview

The installation, operation and maintenance of the 4.5-Meter Earth Station Antenna requires qualified personnel. Andrew installation, operation and maintenance instructions are illustrated for such personnel. Additionally, the antenna should be inspected by qualified personnel to verify proper installation, maintenance and condition of equipment as described in Preventative Maintenance. The basic equipment and accessories are either manufactured or design controlled by Andrew Corporation.

The prerequisite information necessary for the 4.5-Meter Earth Station Antenna can be found in this section. Furthermore, this section should be reviewed before performing the installation, operation or maintenance. Warnings, recommended tools and the antenna parts can be verified and/or determined with such a review.

Warnings

When installing the 4.5-Meter Earth Station Antenna, be conscious of the warnings presented below. For further information or clarification of this information, contact the Customer Service Center at one of the phone numbers listed. The warnings are as follows:

1. Electrical shock from voltages used in this antenna system may cause personal injury or death. Prior to making any electrical connections or performing maintenance or repair, ensure that the power is removed. Electrical connections should only be made by qualified personnel in accordance with local regulations.
2. Installation of antenna may require persons to work at elevated work stations. Whenever persons are working at eight or more feet above the ground and not on a guarded platform, they should wear safety belts with at least one (preferably two) lanyards.
3. Never stand underneath any object while it is being lifted.
4. Always wear a hard hat, especially if someone is above you.
5. Make sure no person is in or under the reflector while it is being lifted or positioned; personal injury can result if the reflector assembly falls.
6. Personnel should never be hoisted in or out of the reflector by crane; personal injury may result.
7. Andrew earth station antennae supplied to standard product specifications will survive 125 mph winds in any operational position in moderate coastal/industrial areas. Severe conditions require additional protection. Should it be expected that winds will exceed 125 mph, it is recommended that Andrew antennae be steered to specific azimuth and elevation orientations to minimize wind forces upon the structure and thereby increase the probability of survival.
8. It is recommended that all cross axis-waveguide and coaxial cables are secure such that high winds will not cause excessive flexing. Position the antenna to an elevation of 90 degrees. The azimuth jackscrew should be placed in the center of its travel.
9. When the antenna is transmitting, severe eye injury or injury to other parts of the body can result from exposure to radio frequency (RF) energy. The antenna must be turned off before entering the area in front of the reflector and near the feed.

Note: Failure to follow an installation procedure could result in damage to equipment or personal injury.

Additional warnings will be displayed throughout this manual for your awareness. These warnings can be identified in warning boxes as shown in the following sample.



Andrew disclaims any liability or responsibility for the results of improper or unsafe installation, operation or maintenance practices.

Recommended Tools

Andrew supplies all appropriate hardware/parts required for the installation of your 4.5-Meter Earth Station Antenna. All tools necessary for the installation process should be provided by the installation crew. Andrew recommends that the following tools be used for a proper installation of the 4.5-Meter Earth Station Antenna.

Table 1. Recommended Tools

Tool	Size	Qty.
Open End Wrench	1/4"	2
	3/8"	2
	1/2"	2
	9/16"	2
	5/8"	2
	3/4"	2
	7/8"	2
	1-1/4"	1
Drive Sockets	7/16"	2
	9/16"	1
	3/4"	1
	7/8"	1
	1-1/16"	1
	1-1/4"	1
Spud Wrench	1-1/16"	1
Breaker Bar	1/2"	1
Screw Driver	Standard	1
	Phillips	1
Allen Wrench	1/2"	1
Tape Measure	Standard	1
Felt-tip Marker	Standard	1
Hammer	Standard	1
Rubber Mallet	Standard	1
Pry Bar	Standard	1
Tin Snips	Standard	1
Crane	1 Ton Minimum Capacity	1
Rope/Cord (2000 lb breaking strength)	50 ft	1
Shackles	5/8"	2
Ladder	10 Foot Extension	1
Nylon Web Sling	3" x 3'	2

Parts Verification

Upon receipt of your order, the shipment should be verified to ensure that all parts have reached your site. This process should occur before the installation process begins.

Andrew Corporation thoroughly inspects and carefully packs all equipment before shipment. If you find that there are missing components, please refer to step-by-step instructions on how to properly report the equipment loss.

When you have received your order, verify that all parts contained in the shipment correspond to the parts listed on your packing list.

Reporting Equipment Loss or Damage Reporting Visible Loss or Damage

If you find that the equipment was damaged during the shipping process, you should file a claim with the carrier. Follow the "Reporting Visible Loss or Damage" or "Reporting Concealed Damage" procedures when filing a claim with a carrier.

Make a note of any loss or evidence of external damage on the freight bill or receipt, and have it signed by the carrier's agent. Failure to adequately describe such external evidence of loss or damage may result in the carrier refusing to honor a damage claim. The form required to file such a claim will be supplied by the carrier.

Reporting Concealed Damage

Concealed damage means damage which does not become apparent until the unit has been unpacked. The contents may be damaged in transit due to rough handling, even though the carton may not show external damage. If you discover damage after unpacking the unit, make a written request for an inspection by the carrier's agent, then file a claim with the carrier since such damage is most likely the carrier's responsibility.

Inventory Equipment Received

After opening your shipment, you should take inventory of the parts immediately. Check each item received in your shipment against the packing slip included with the shipment. If any items are missing, please notify Andrew Corporation immediately by contacting the Customer Service Center at one of the phone numbers listed.

Returning Equipment

Andrew Corporation tries to ensure that all items arrive safe and in working order. Occasionally, despite these efforts, equipment is received that is not in proper working condition. When this occurs, and it is necessary to return the equipment to Andrew Corporation for either repair or replacement, return can be expedited by using the following procedure:

Step 1

Call the Andrew Customer Service Center and request a Return Material Authorization (RM) number, as well as the address to which you should forward the material(s).

Step 2

Tag or identify the defective equipment, noting the defect or circumstances. Also, be sure to write the RM number on the outside of the carton. It would be helpful to reference the Andrew sales order and purchase order number, as well as the date the equipment was received.

Step 3

Pack the equipment in the original container with protective packing material. If the original container and packing material are no longer available, pack the equipment in a sturdy corrugated box and cushion it with appropriate packing material.

Step 4

Be sure to include the following information when returning the equipment:

- Your Company Name
- Your Company Address City, State and Zip Code
- Telephone Number
- RM Number
- Problem Description
- Contact Name

Note: Absence of the RM number will cause a delay in processing your equipment for repair. Be sure to include the RM number on all correspondence.

Step 5

Ship the equipment to Andrew Corporation using UPS, U.S. Postal Service, or other appropriate carrier, freight prepaid and insured. The material should be forwarded to the address given by the Andrew contact in Step 1.

Installation Sequence Checklist

The 4.5-Meter Earth Station Antenna requires the installation team to perform the assembly in the sequence presented below. Moreover, this sequence should be reviewed beforehand to ensure a smooth installation. Use the following checklist to verify and/or determine the installation sequence. Throughout the checklist certain part numbers will be used. Those part numbers describe the antenna currently being installed. The ES45P is a transmit/receive 4.5-Meter ESA with a manual pedestal mount. The ES45MP is a transmit/receive 4.5-Meter ESA with a motorizable pedestal mount. The ES45MPJ is a transmit/receive 4.5-Meter ESA with a motorizable pedestal mount and jackscrews.

Site Preparation

Refer to Foundation Specifications for guidance in preparing the location and the installation of the 4.5-Meter Earth Station Antenna foundation.

Pedestal Ground Mount Assembly

- ☐ Unpack ground mount assembly
- ☐ Attach ground mount assembly to foundation
- ☐ Organize ground mount hardware
- ☐ Wax galvanized hardware in hardware kit
- ☐ Tighten ground mount hardware to foundation
- ☐ Attach azimuth strut weldment to ground mount assembly

For ES45MP/ES45P Types Only

- ☐ Assemble azimuth strut
- ☐ Mount azimuth strut to ground mount assembly
- ☐ Bolt elevation strut brackets to elevation strut
- ☐ Mount elevation strut to ground mount assembly
- ☐ Assemble manual actuator
- ☐ Remove manual actuator (after elevation/azimuth adjustment)

For ES45MPJ Types Only

- ☐ Mount azimuth pivot assembly to ground mount assembly
- ☐ Bolt one jack to azimuth pivot assembly
- ☐ Unscrew jack
- ☐ Tighten galvanized hardware using A-325 hardware procedure
- ☐ Lubricate jackscrews
- ☐ Pull protective boot over jackscrew
- ☐ Bolt elevation pivot assembly brackets to ground mount assembly
- ☐ Bolt second jack to elevation pivot assembly
- ☐ Unscrew jack
- ☐ Tighten galvanized hardware using A-325 tensioning procedure
- ☐ Lubricate jackscrews
- ☐ Pull boot over jackscrew

ES45MPJ/ES45MP/ ES45P Main Reflector Assembly

- ☐ Remove protective covering from crate
- ☐ Pry top crate panel off
- ☐ Pry sides off crate
- ☐ Pry front off crate
- ☐ Unbolt reflector panels from bottom of crate
- ☐ Prepare assembly area with diameter setting bands and temporary supports
- ☐ Lay reflector segments on prepared assembly area
- ☐ Attach opposite segments to mounting ring hub and diameter setting bands
- ☐ Attach remaining segments to mounting ring hub and original panels
- ☐ Attach reflector rib segments to panel seams
- ☐ Tighten seam hardware in concentric circles around reflector
- ☐ Install center plate and center pad to mounting ring hub
- ☐ Attach feed strut brackets and feed struts

**ES45MPJ/ES45MP/
ES45P Reflector-
to-Mount
Assembly**

- ☐ Attach tee plates to reflector
- ☐ Attach short struts to reflector rib segments
- ☐ Attach formed ring weldment to short struts
- ☐ Attach long struts to reflector rib segments
- ☐ Attach diagonal struts between long and short strut assemblies
- ☐ Tighten hardware using A-325 tensioning procedure
- ☐ Remove diameter setting band assembly

**ES45MPJ/ES45MP/
ES45P Back
Structure
Assembly**

- ☐ Attach clevis with nylon choker to lifting plate
- ☐ Attach additional sling around ring weldment
- ☐ Attach choker and sling to crane
- ☐ Lift reflector to vertical position
- ☐ Attach ring weldment to elevation support angle assembly
- ☐ Extend elevation jackscrew to ring weldment
- ☐ Tighten hardware using A-325 tensioning procedure

Feed Installation

- ☐ Attach feed struts to feed support assembly
- ☐ Assemble feed horn assembly to network
- ☐ Install feed assembly into feed support
- ☐ Tighten all collar set screws

**Waveguide/Flex
Section Assembly**

- ☐ Attach flex section to feed assembly flanges
- ☐ Attach mounting brackets to feed struts
- ☐ Attach flex section to waveguide assembly
- ☐ Tighten all mounting hardware

Installation Procedures

Overview

This section provides installation procedures for the 4.5-Meter Andrew Earth Station Antenna. The installation procedures include instructions on the following antenna components.

- Mount
- Reflector
- Back Structure
- Reflector To Mount Assembly
- Subreflector
- Feed System

Note: All installation instructions for the antenna options are contained in the parts kit included in the shipment.

Foundation Preparation

Before beginning the installation process on the ground mount assembly, ensure that the foundation has been prepared. Foundation specifications are provided by Andrew and may be used as a reference by civil engineering personnel when preparing the foundation for local soil conditions. These specifications are available before the shipment arrives by contacting the Customer Service Center.

Sweep foundation clean of any dirt or debris.

To ensure level, smooth surface for mount, remove excess concrete from shear caps and anchor bolts as shown.



A-325 Tensioning

During the installation process there are several references to the A-325 hardware tensioning procedure. The A-325 hardware must be properly tensioned to avoid slippage between bolted surfaces under high loads. Slippage can cause the corresponding assembly to move, causing antenna misalignment. When designated, the A-325 hardware should be tightened according to the following tensioning procedure.

Note: Tensioned bolts are for final connections only and should not be loosened for reuse.

Step 1

Lubricate the bolt threads with the provided stick wax to reduce friction.

Step 2

Insert the bolt, and add a flat washer - if required. **Do not** allow wax under the flat washer.

Step 3

Add the nut and finger-tighten.

Step 4

After the connections are complete, tighten the bolts until the surfaces are joined and the nuts are snug (for example, full effort of a person using an ordinary spud wrench).

Do not proceed with Steps 5 and 6 unless the connection is final and is not intended to be loosened again.


Note: If the bolts are loosened after Steps 5 and 6, discard and replace with new hardware.

Step 5

Using a felt-tip marker, mark the nuts and the ends of the bolts with a straight line as shown in Figure A-325.


Step 6

Tighten the nuts further with an extra-long wrench until the nuts are moved 1/3 turn (120 degrees) as shown in Figure a **for bolt lengths shorter than four diameters** and 1/2 turn (180 degrees) as shown in Figure b **for bolt lengths longer than four diameters**.

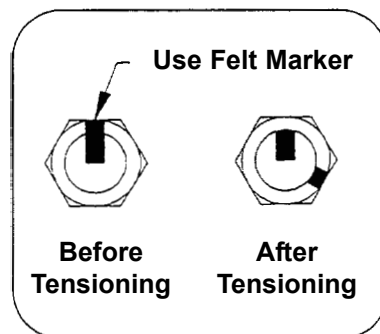

For Bolts Shorter Than 4 Diameters

Figure a. A-325 Tensioning

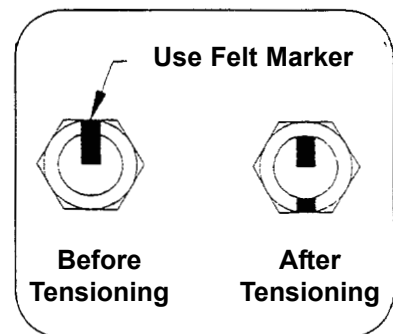

For Bolts Longer Than 4 Diameters

Figure b. A-325 Tensioning

Note: Do not perform A-325 tensioning procedure during assembly process unless specifically designated by installation instructions. Final tightening will occur after mount is fully assembled.

Pedestal Mount

The elevation/azimuth mount design simplifies installation, minimizes foundation requirements, and enables horizon-to-horizon coverage from any worldwide location. The ground mount assembly enables 180 degree positioning for selected azimuth viewing. Azimuth range coverage is plus or minus 90 degrees, divided into three 120 degree continuous ranges with a 30 degree overlap. Elevation adjustment is continuous from 0 degrees to 90 degrees.

After ensuring that the foundation has been properly prepared, the ground mount assembly process may begin.

Unpacking

The pedestal ground mount assembly arrives in a packaged wooden crate as shown in Figure 1 below. The mount can be positioned manually or by using a crane; however, Andrew recommends that this procedure be performed using a crane to ensure speed and ease of installation.

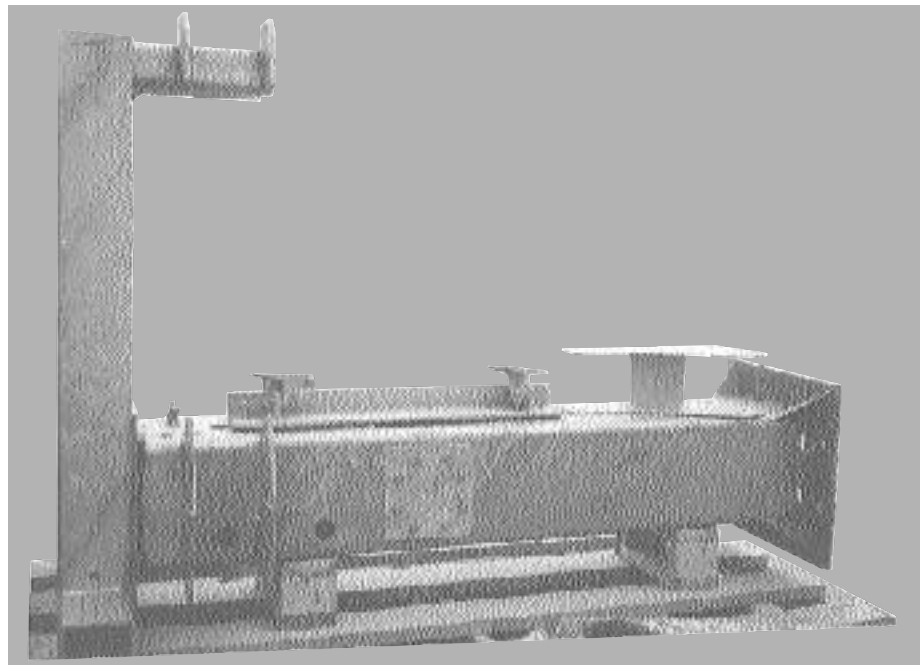


Figure 1

Assembly (Using a Crane)

As stated previously, the pedestal ground mount installation process can be conducted manually or by using a crane. The following steps provide the necessary procedures for installing the ground mount assembly *using a crane*.

Step 1 Carefully remove the ground mount assembly (P/N 208800 - motorizable or P/N 202680-2 manual) from the packing crate. Leave the steel strapping intact to avoid disengagement of the panning frame from the square-tube weldment during the ground mount installation.

Step 2 Securely attach the crane to the ground mount assembly using a sling, and carefully raise the entire ground mount as shown in Figure 2.



Figure 2

Step 3 Align the ground mount assembly directly over the anchor bolts, which should have been previously mounted in the foundation pad.

NOTE: Ground mount positioning on the foundation is dependent upon predetermined azimuth viewing requirements. The ground mount assembly arm should be positioned opposite the satellite requirement. If your site is in the Northern hemisphere, your satellite will be located in the South. If your site is in the Southern hemisphere, your satellite will be located in the North.

Step 4 Lower the ground mount assembly onto the anchor bolts with the corresponding hole pattern.

Step 5 Attach the ground mount assembly to the eight corresponding anchor bolts using a 3/4 inch flat washer and 2-3/4 inch hex nuts. One 3/4 inch hex nut is supplied with the anchor bolt kit and the second 3/4 inch hex nut is supplied with the antenna.

Step 6 Remove the steel strapping from the ground mount assembly.

Step 7 Tighten the foundation hardware using the A-325 tensioning procedure.

Figure 4 shows the ground mount assembly attached to the foundation.



Figure 4

Assembly (Without a Crane)

As stated earlier, Andrew recommends the use of a crane during this installation process; however, we recognize that a crane may not always be available. If a crane is not available, the following steps provide the procedure for installing the ground mount assembly without a crane.

Step 1

Carefully remove the ground mount assembly (P/N 208800-motorizable or P/N 202680-2- manual) from the packing crate. Leave the steel strapping intact to avoid disengagement of the panning frame from the square-tube weldment during the ground mount installation.

Step 2

Lay the ground mount assembly on its side, in line with the anchor bolts (P/N 203314-manual or P/N 203666-motorizable) as shown in Figure 5.

NOTE: Ground mount positioning on the foundation is dependent upon predetermined azimuth viewing requirements. The ground mount assembly panning-frame arm should be opposite of the satellite requirement. If your site is in the Northern hemisphere, your satellite will be located in the South. If your site is in the Southern hemisphere, your satellite will be located in the North.

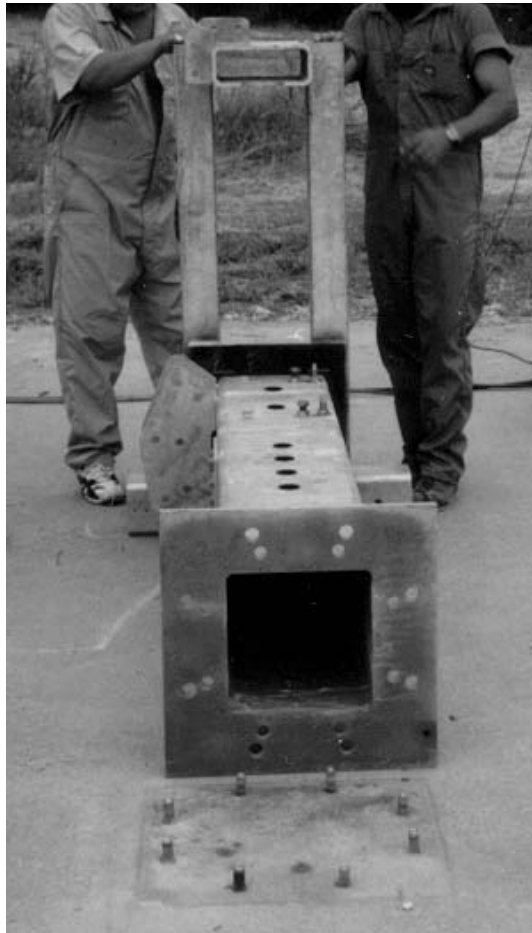


Figure 5

Step 3

Lift the ground mount assembly into an upright position. In the absence of a crane, it is recommended that a minimum of two people assist in the lifting of the mount assembly as shown in Figure 6a and Figure 6b.



Figure 6a



Figure 6b

WARNING

Be very cautious when lowering the mount. Do not lower the mount onto your feet.



Figure 7

NOTE: You may need to adjust the mount when lifting it to ensure that the anchor bolts are aligned directly underneath the base of the ground mount assembly as shown in Figure 7.

Step 4

Attach the ground mount assembly to the eight corresponding anchor bolts using a 3/4 inch flat washer and 2-3/4 inch hex nuts as shown in Figure 3.

NOTE: Ground mount positioning on the foundation is dependent upon predetermined azimuth viewing requirements. The ground mount assembly arm should be opposite the satellite requirement. If your site is in the Northern hemisphere, your satellite will be located in the South. If your site is in the Southern hemisphere, your satellite will be located in the North.

Step 5

Remove the steel strapping from the ground mount assembly.

Step 6

Tighten the foundation hardware using the A-325 tensioning procedure.

Figure 8 illustrates the ground mount assembly attached to the foundation.



Figure 8

Manual Pedestal Ground Mount Assembly

Step 1

Prepare the ground mount hardware in the mount hardware kit by sorting all bolts, nuts, and flat washers into separate sections as shown in Figure 9.



Figure 9

Step 2

Wax two sides of each galvanized bolt with the stick wax provided. This allows a smooth installation of each galvanized bolt as shown in Figure 10.



Figure 10

Step 3

Position and mount the azimuth tiller arm (P/N 203112) to the tiller-arm bracket on the left side (facing the satellite) of the ground mount assembly. This mounting position of the azimuth tiller arm is dependent upon pre-determined azimuth range requirements as shown in Figure 11.

NOTE: The ground mount assembly enables 180 degrees positioning for selected azimuth viewing. Azimuth range coverage is plus or minus 90 degrees, divided into three 120 degree continuous ranges with a 30 degrees overlap. Elevation adjustment is continuous from 0 degrees to 90 degrees.

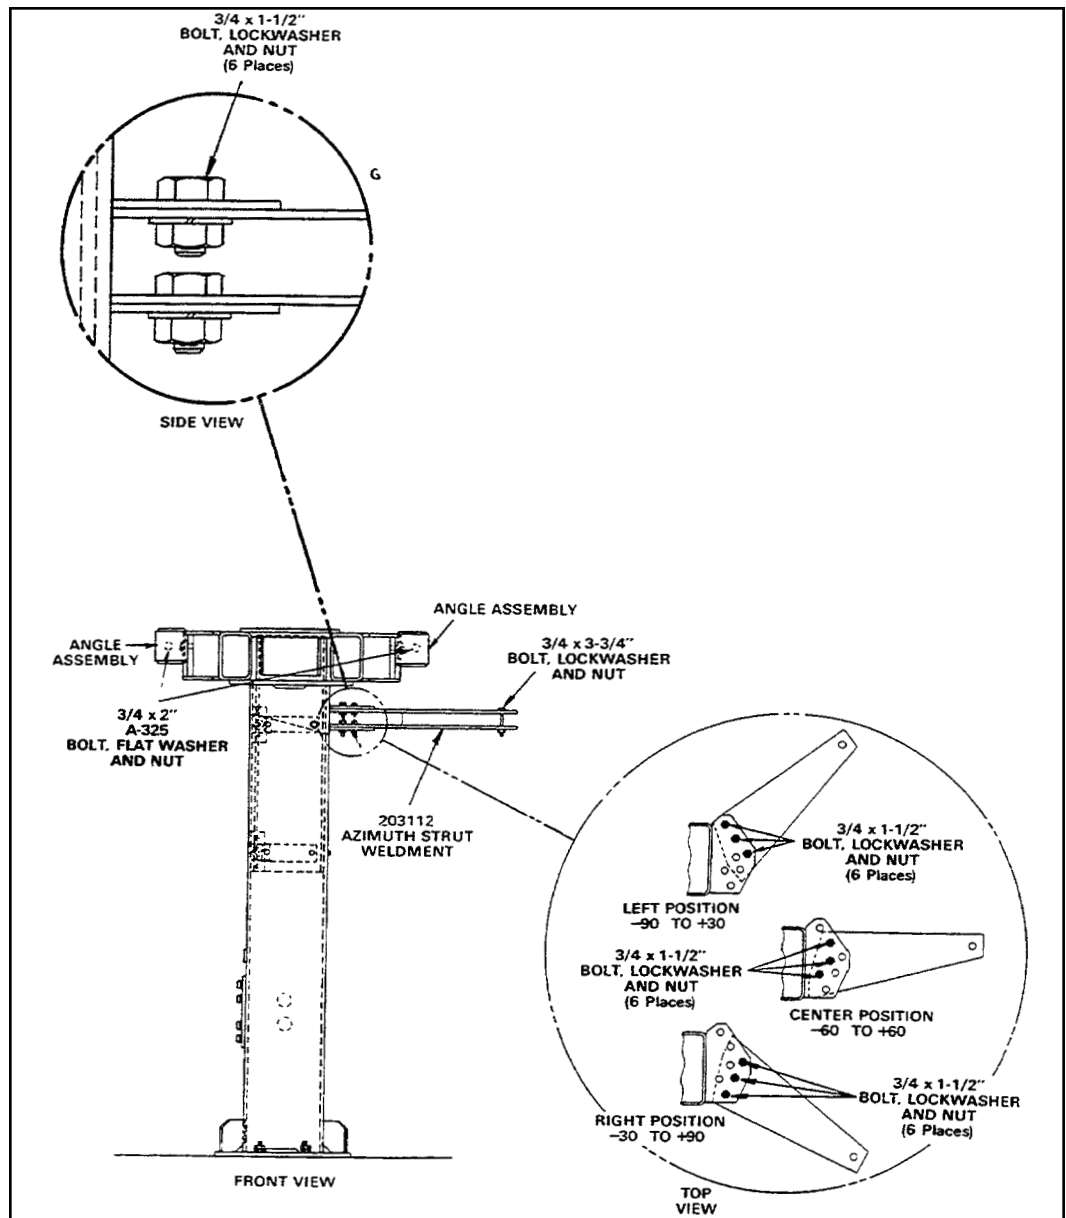


Figure 11

Step 4

Tighten the hardware using the A-325 tensioning procedure.

An illustration of the final azimuth tiller arm is shown in Figure 12.



Figure 12

Step 5

Locate the elevation and azimuth struts (P/N 202951-2-manual) as shown in Figure 13.

NOTE: The azimuth strut is the strut on the right and the elevation strut is on the left.



Figure 13

Step 6

Insert pivot blocks (P/N 205876) onto the end of the azimuth strut using lubricated 1/2 inch bolt, flatwasher and hex nut as shown in Figure 14. A 3/4 inch flat washer should be inserted between the strut and the spacer block. Tighten hardware according to the A-325 tensioning procedure.



Figure 14

Step 7

Slide the round strut assembly bracket (P/N 203875) on the end of the azimuth strut, and hand tighten the 1/2 inch setscrews before mounting it on the ground mount assembly as shown in Figure 15.



Figure 15

Step 8

Mount the second azimuth support plate (P/N 205875) pivot assembly to the rear end of the ground mount assembly as shown in Figure 16. Spacer blocks (P/N 205874) and 5/8 inch hardware (hex bolt, flatwasher, hex nut) should be inserted as shown in Figure 16.



Figure 16

Step 9

Mount the azimuth strut to each bracket on the ground mount assembly as shown in Figure 17a and Figure 17b. The front and rear brackets should be aligned as shown in Figure 18.

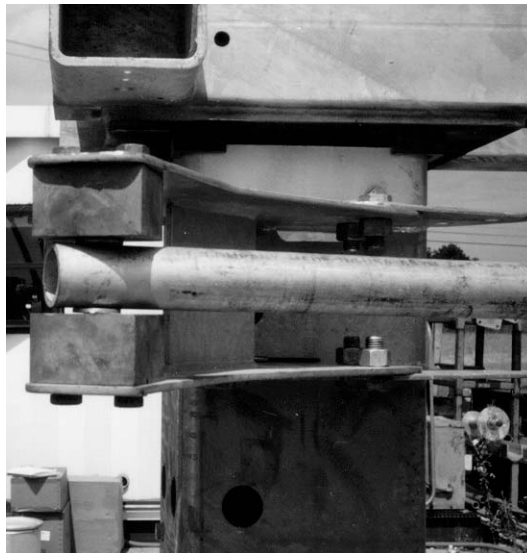


Figure 17a

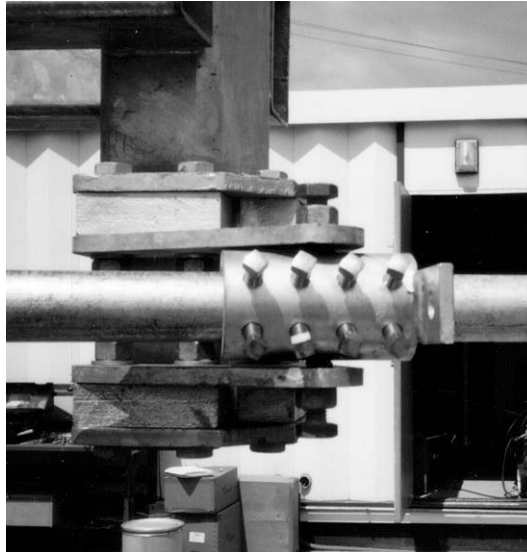


Figure 17b

Figure 18 illustrates a final azimuth strut assembly mounted to the ground mount assembly.



Figure 18

Step 10

The next step is to install the elevation strut assembly. Begin by bolting the elevation strut tube assembly (P/N 205872) to the ground mount assembly as shown in Figure 19.

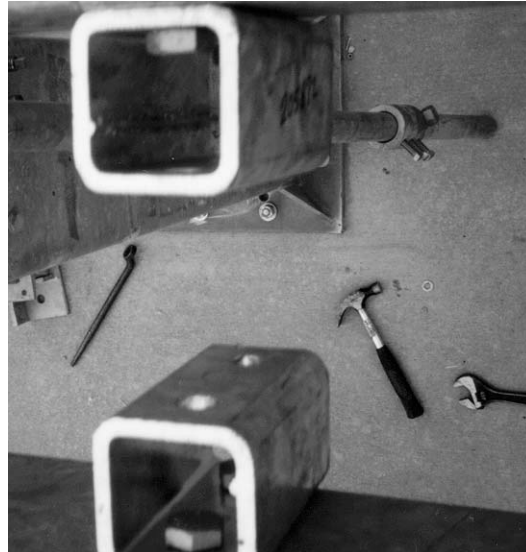


Figure 19 (Top View)

Step 11

Bolt the elevation bracket-support plates (P/N 205873) to the elevation strut tube assembly using 5/8 inch hardware (hex bolt, flatwasher and nut) as shown in Figure 20.



Figure 20 (Top View)

Step 12

The elevation strut tube assembly should now be bolted to the elevation strut bracket as shown in Figure 21a and Figure 21b.

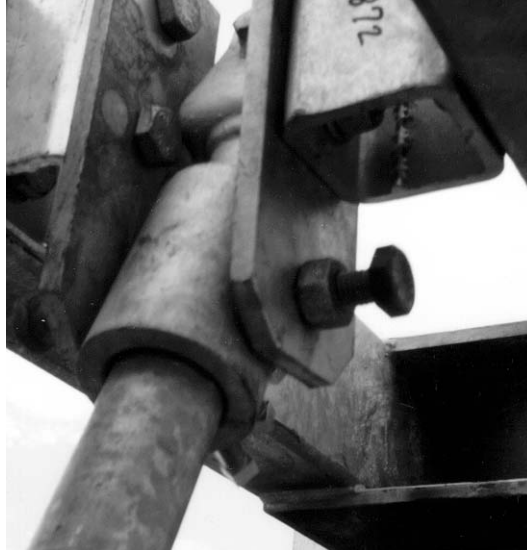


Figure 21a

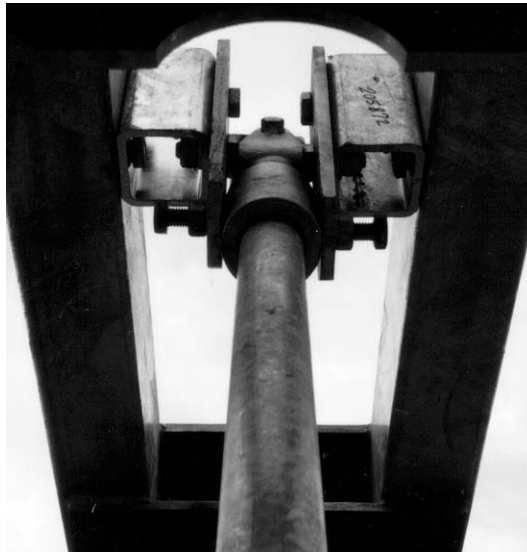


Figure 21b

Manual Actuator Assembly

The manual actuator assembly (P/N 207882) is used to adjust the elevation and azimuth angles of the 4.5-meter antenna. The following steps provide the procedure used to assemble and install the manual actuator assembly.

NOTE: This assembly should be conducted upon completion of the antenna assembly (after feed assembly). Refer to "Acquiring A Satellite".

Step 1

Loosely attach the manual actuator assembly (P/N 207882) to the elevation strut as shown in Figure 22a using clamp segments, 1/4 inch screw, lockwasher and hex nut in each of the 12 connections.

NOTE: The drain hole should be positioned downward for proper water drainage.

Step 2

Attach the base angle to the actuator (P/N 202661) using 1/2 inch screws, flatwashers and hex nuts as shown in Figure 22b. **AVOID EXCESSIVE TORQUE ON THE MOUNTING HARDWARE.**

Step 3

Ensure that the locking strut-support setscrew is firmly tightened on the strut assembly as shown in Figure 22b.



Figure 22a

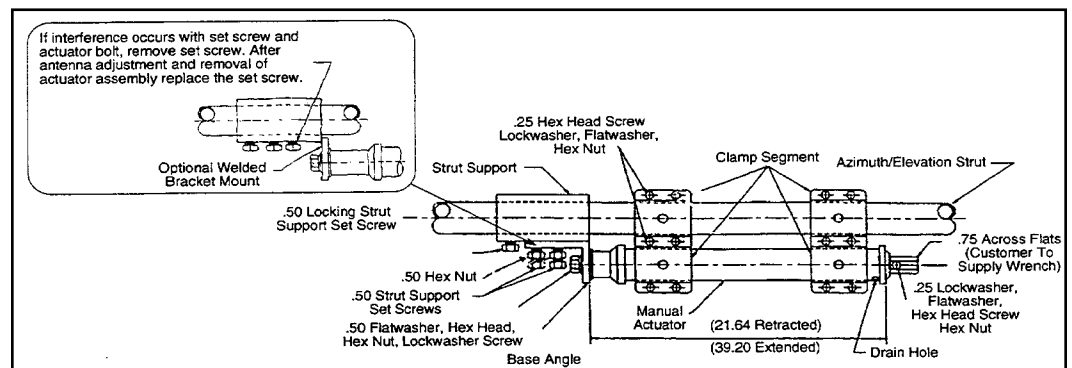


Figure 22b

- Step 4** Remove the two indicated strut-support setscrews, and attach the base angle to the corresponding strut support using the supplied 1/2 inch clamping nuts and the previously removed strut-support setscrews as shown in Figure 22b.

WARNING

Azimuth brakes have been factory set. Do not readjust brakes to facilitate the use of actuators.

- Step 5** Securely tighten the remaining mounting hardware to achieve the clamping force.

- Step 6** Follow directions for “Acquiring a Satellite”.

- Step 7** Repeat the entire procedure for the remaining strut assembly.

Manual Actuator Assembly Removal

After the adjustments have been made, the manual actuator should be removed. The following steps provide the procedure for the proper removal of the manual actuator assembly.

- Step 1** Remove the manual actuator assembly by first removing the hardware securing the actuator to the base angle.

NOTE: The adjustment kit assembly should be removed after the antenna has been adjusted. Store the manual actuator assembly and the corresponding hardware in a dry area for future use.

- Step 2** Remove the remaining clamp segments with the corresponding hardware.

- Step 3** After the antenna is pointed at the satellite, tighten all azimuth and elevation setscrews to 35 foot-pounds.

Motorizable Pedestal Ground Mount Assembly

- Step 1** Bolt the azimuth pivot assembly (top and bottom) brackets to the ground mount assembly using 5/8 inch hardware (hex bolt, flatwasher and hex nut) as shown in Figure 23.



Figure 23

Step 2

Bolt one jack to the azimuth pivot assembly using 5/8 inch hardware (hex bolt, flatwasher and hex nut) as shown in Figure 24.

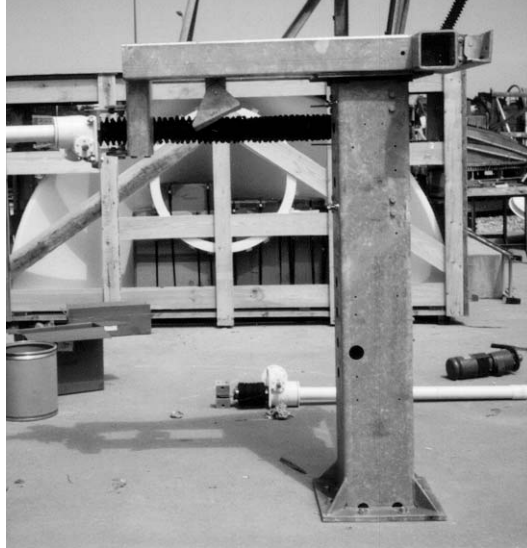


Figure 24

Step 3

Unscrew the jack using a spud wrench until it meets with the front azimuth strut weldment as shown in Figure 25a.

Step 4

Place pivot blocks (P/N 205876) on both sides of the jackscrew ends, bolting with lubricated 1/2 inch hex bolt, flatwasher and hex nut as shown in Figure 25b.



Figure 25a



Figure 25b

Step 5

Tighten the hardware using the A-325 tensioning procedure.

Step 6

Lubricate the jackscrews according to the maintenance instructions.

Step 7

Pull the protective boot over the jackscrew, and clamp at the end as shown in Figure 26.

Note: Position condensation drain holes downward.



Figure 26

Step 8

Bolt the elevation pivot assembly brackets (P/N 208370 - left and P/N 208371 - right) to the inside of the ground mount assembly as shown in Figure 27.



Figure 27

Step 9

Bolt the jack to the elevation pivot assembly using 5/8 inch hardware (hex bolts, flat-washers and nuts) as shown in Figure 28a and b.



Figure 28a

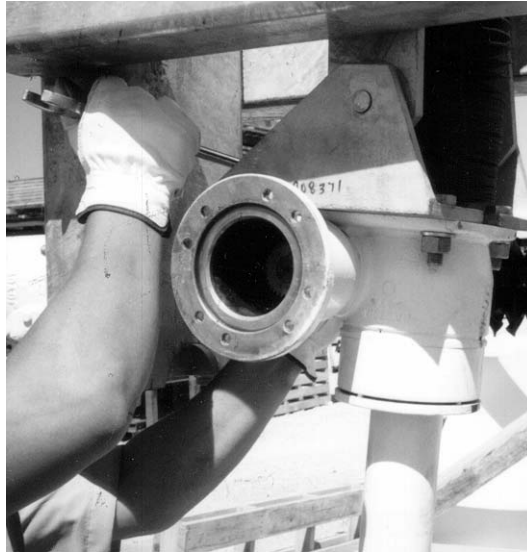


Figure 28b

Step 10 Loosen the clamp on the jack boot.

Step 11 Unscrew the jack by using a spud wrench until the jack connects to the back of the enclosure as shown in Figure 29.



Figure 29

Step 12 Tighten the hardware using the A-325 tensioning procedure.

Step 13 Lubricate the jackscrews using the maintenance procedures.

Step 14 Pull the protective boot over the jackscrew, and clamp it at the end as was performed with the azimuth jackscrew.

ES45PIMP Reflector Installation

Step 1

The ground mount assembly is now completed with the necessary operational essentials. All ground mount options (such as motors) have separate instructional bulletins located in the parts kit that contains the option.

The next step in the installation process is the reflector assembly. Proceed to the next section if you are installing the ES45P-1, ES45MP-1 or ES45MPJ-1 earth station antenna.

Step 2

Reflector should be assembled on a clear, flat area in front of the foundation pad. Clear debris from area and place plastic sheeting from packing crate as shown in Figure 32.

Arrange diameter setting bands (P/N 49612) and temporary supports as shown in Figure 30.

- Snug 1/4-20 hardware
- Reflector should be assembled in front of foundation pad with bottom of reflector 3 ft from pad
- Supports should be 6-8 in high
- Tie three string levels to opposing blocks across diameter of circle
- Adjust supports with shims until strings are level and lightly touch at center of circle
- Remove strings once supports are level
- Move supports 12 in radially away from circle, carefully maintaining orientation and height for later re-use

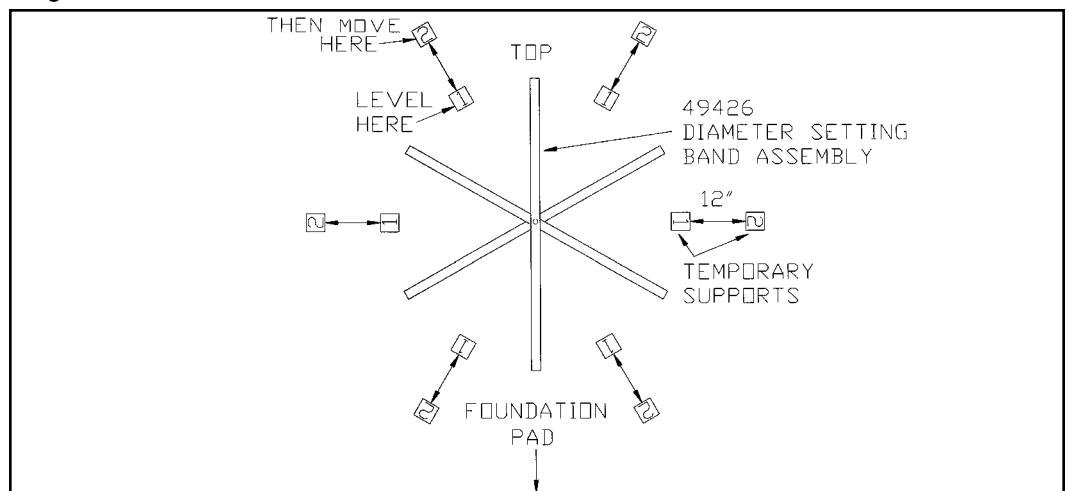


Figure 30

Note: All six reflector segments are identified individually by a two letter designation (A-B, D-E, etc). Locate the markings on the reflector segments in order to assemble the reflector in the proper sequence. See Figure 31.

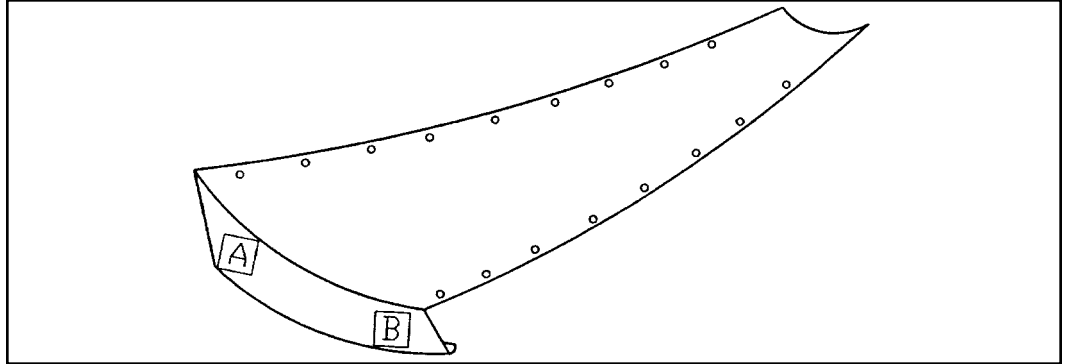


Figure 31

Step 3

Place reflector segment **A-B** between two setting bands with concave side down as shown in Figure 32. Place reflector segment **D-E** opposite panel **A-B**.



Figure 32

Step 4

Raise segments and hold while loosely attaching mounting ring hub (P/N 202429) to convex side of center opening.

- Use 1/4-20 capscrews, lockwashers and nuts
- Insert capscrews from concave side of reflector segments

Step 5

Loosely attach reflector segments **A-B** and **D-E** to diameter setting bands with edge joining plates (P/N 49424) and capscrew hardware as indicated in Figure 33.

- Use 1/4-20 capscrews, lockwashers and nuts
- Insert capscrews from concave side of reflector segments

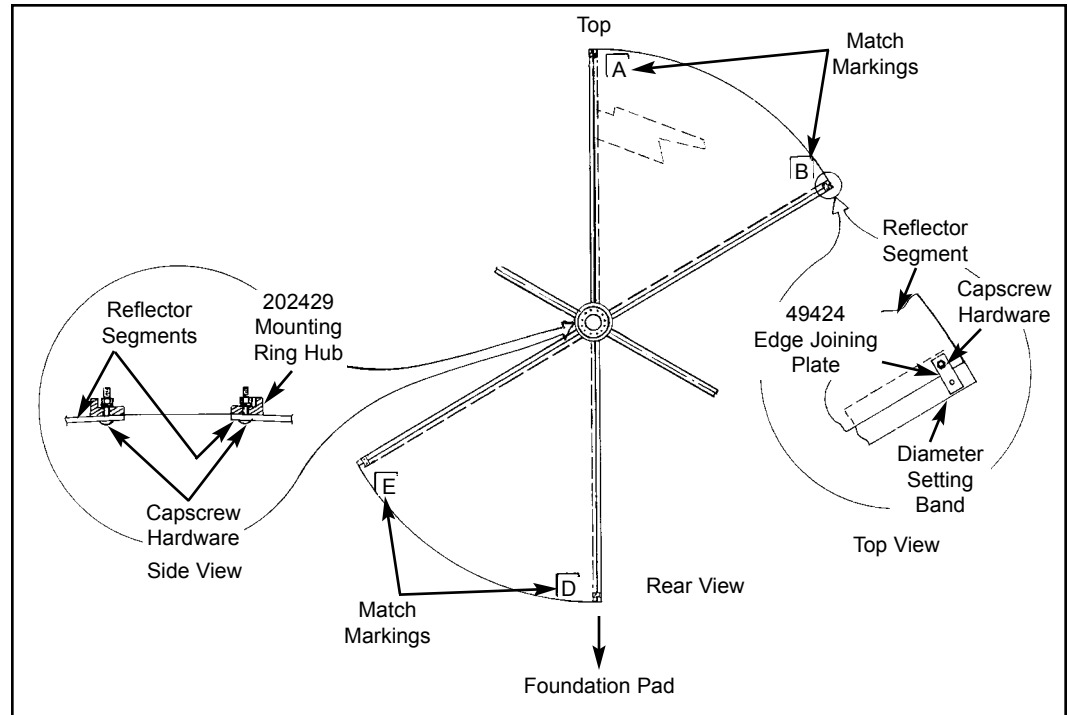


Figure 33

Step 6

Loosely attach segment **A-F** to mounting ring hub, diameter setting bands, and segment **A-B** using edge joining plates (P/N 49424).

- Place spacers (P/N 200215) between first and third segments
- Insert 1/4-20 capscrews from concave side of reflector segment

- Step 7** Loosely attach joining plate (P/N 49693) along **A-A** seam inside reflector rim as shown in Figure 34.

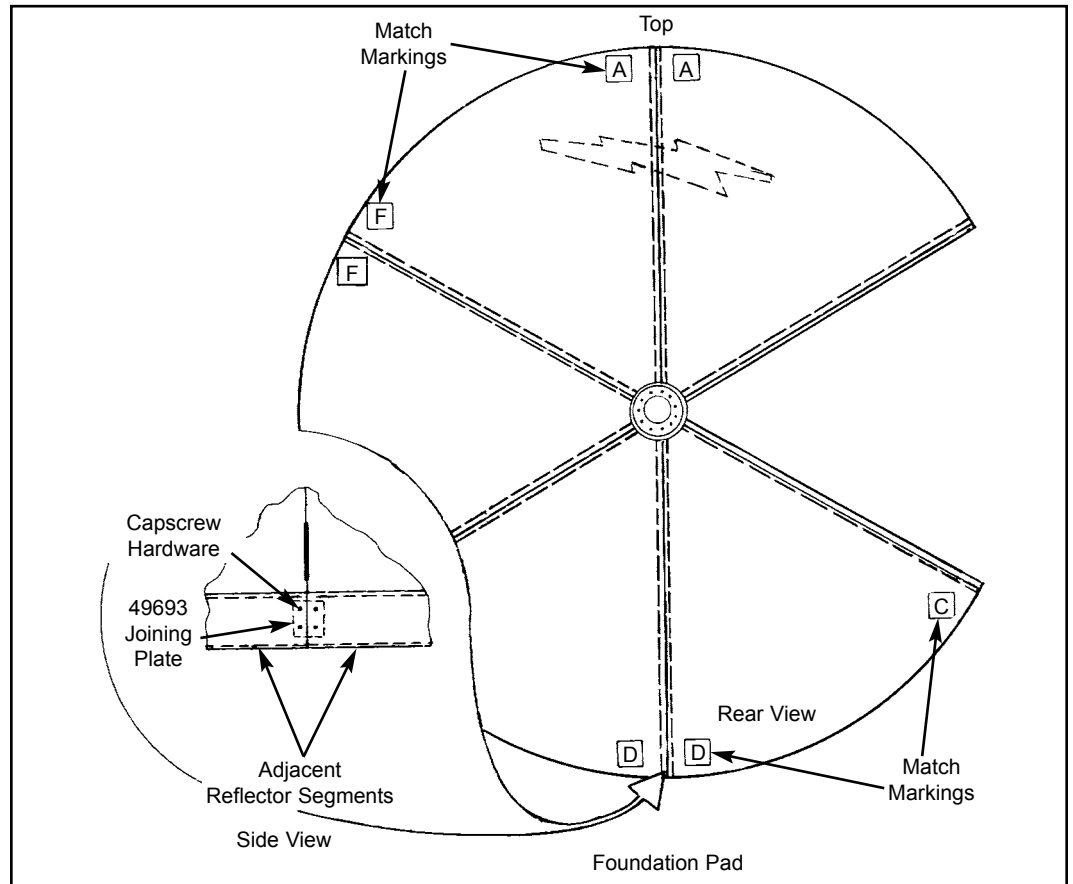


Figure 34

- Step 8** Loosely attach segment **E-F** to mounting ring hub, diameter setting bands, and segments **A-F** and **D-E** with joining plates (P/N 49424) on panel seams **E-E** and **F-F**. Loosely attach joining plates (P/N 49693) on rim seams **E-E** and **F-F**.

- Step 9** Station an installer inside reflector to finger-tighten seam hardware and attach final panels as shown in Figure 35.



Figure 35

Step 10 Loosely attach reflector segment **B-C** to mounting ring hub and diameter setting bands. Use edge joining plate (P/N 49424) on **B-B** panel seam and joining plate (P/N 49693) on **B-B** rim seam.

Step 11 Before attaching last panel, lift reflector and return temporary supports to initial measuring position. Have installer inside reflector check tension on diameter setting bands. If not uniformly taut, adjust level by adding shims until no segment of the reflector can bounce, as shown in Figure 36.



Figure 36

Step 12 Install final reflector panel (**C-D**) by loosely attaching to diameter setting bands and mounting ring hub. Loosely attach panel seam hardware as installer inside moves reflector segment to enable segment union.

Step 13

Begin attaching corresponding reflector rib segments at match-marked position **A-A** using reflector segment seam hardware as shown in Figure 37.

- Insert capscrews from concave side - firmly push bolts through holes until bolt head is flush with reflector surface

Note: Slight pressure on reflector segment may be necessary to enable proper alignment. Do not attempt to thread bolts into holes.

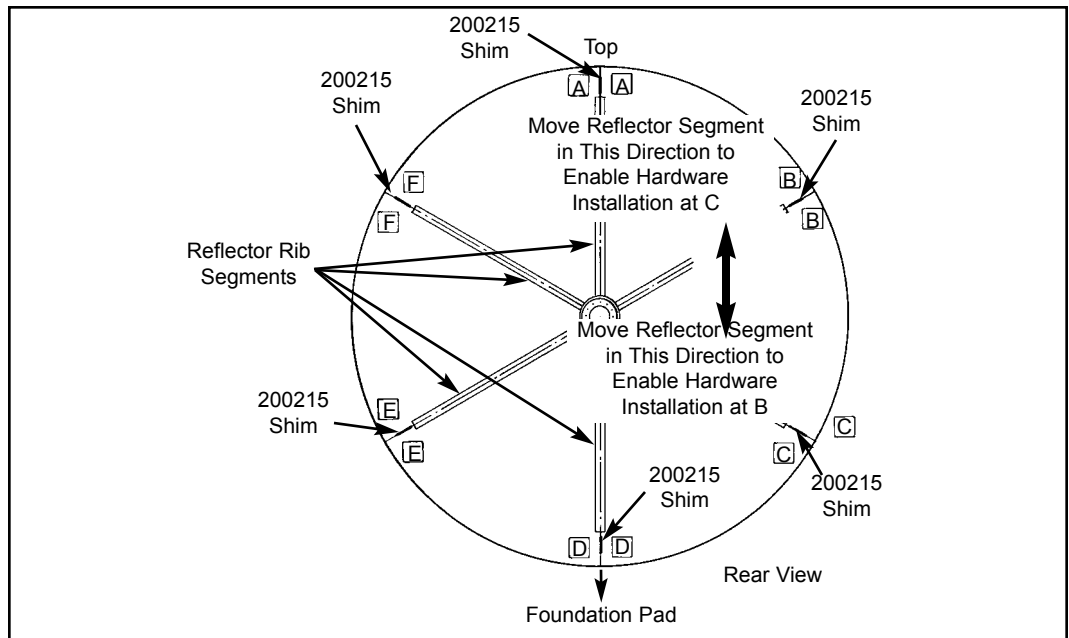


Figure 37

Step 14

Insert shim between each reflector segment around perimeter of reflector assembly beginning with seam **A-A**.

Reflector Leveling Procedure

Step 1

Position (6) temporary supports near panel seams exactly as shown in Figure 38. **Note:** Temporary supports should be large enough to adequately support the reflector and strong enough to easily support reflector weight without compressing.

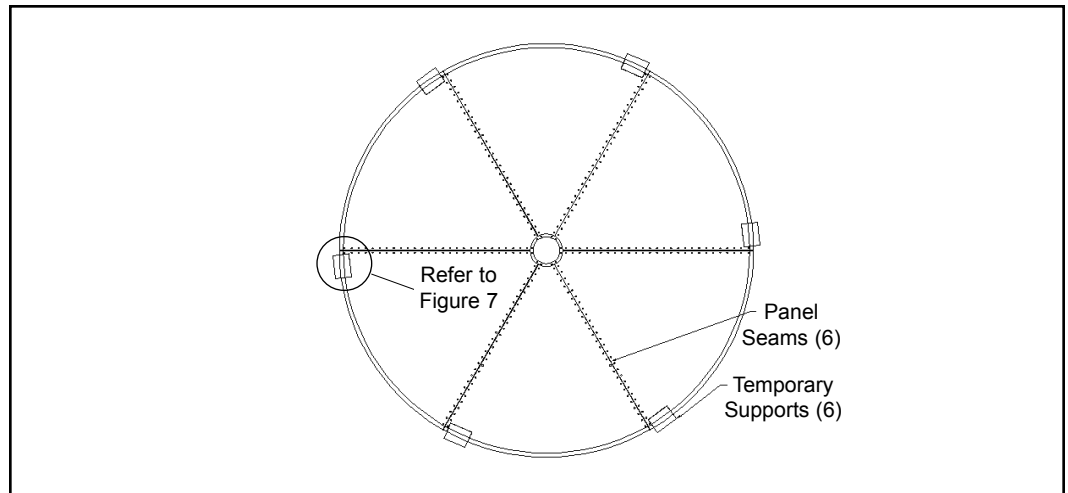


Figure 38

Step 2

Position theodolite, transit or laser level about 10 feet [3m] from outside perimeter of reflector (see Figure 39).

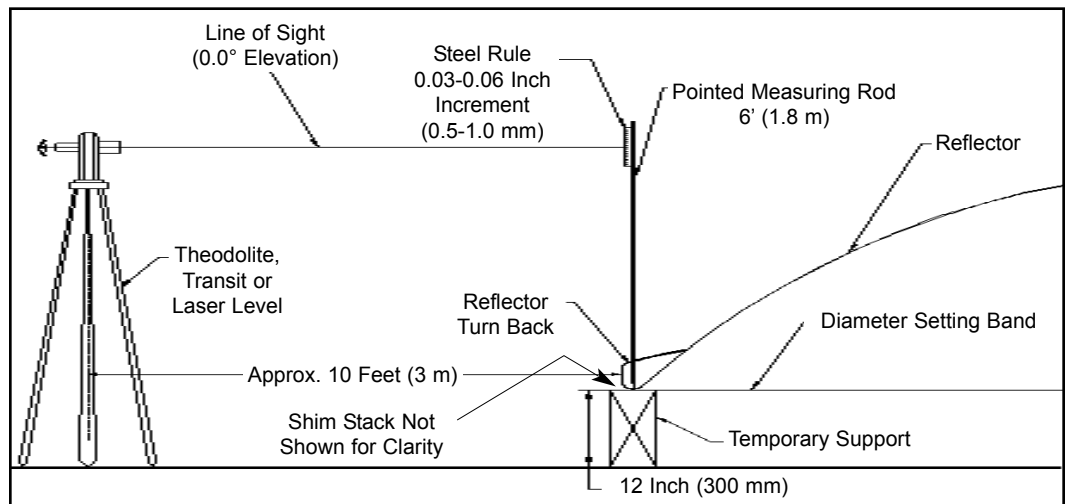


Figure 39

Step 3

Level theodolite/transit/laser level. If using theodolite, position view scope at 0.0 degrees elevation, lock down elevation adjustment.

Step 4

Site through theodolite/transit/laser level to determine where on measuring rod to place steel rule onto rod to allow visibility of steel rule through theodolite/transit/laser level at all (6) six measurement locations around reflector. Securely fasten both ends of steel rule to measuring rod with adhesive tape (see Figure 39).

Step 5 Temporary supports should be positioned as shown in Figure 40, close to but not interfering with diameter setting bands.

Step 6 Referring to Figure 40, mark the measuring location at each of the six temporary support locations with a small dot (use felt tip marker) to be used as reference point in subsequent measurements.

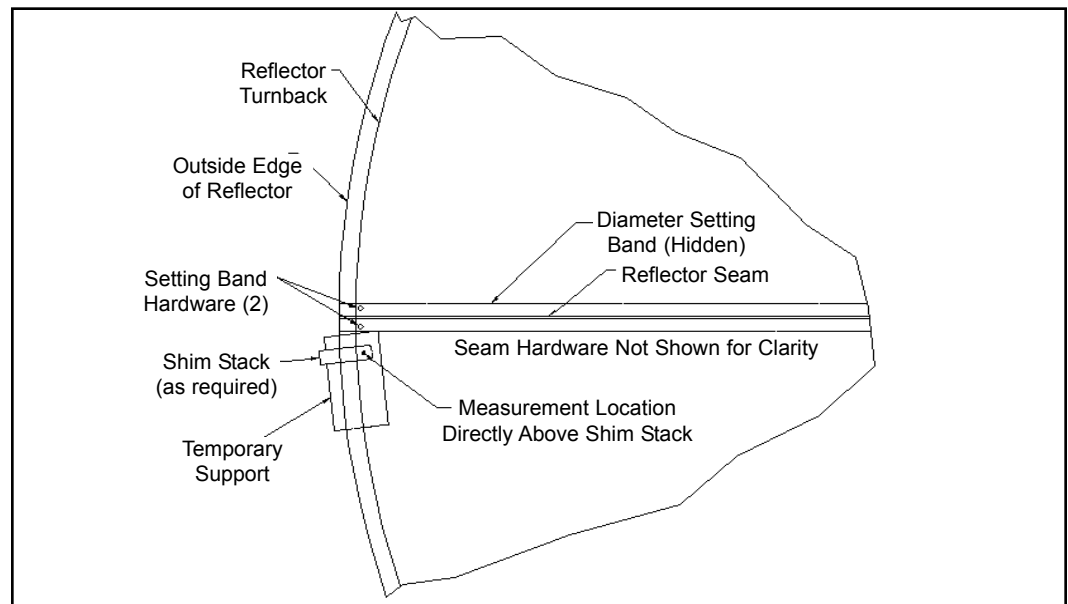


Figure 40

Step 7 Position measuring rod point down over temporary supports and on the flat portion of the aperture face as shown in Figures 39 and 40, using transit carefully measure and record relative height of each of the (6) temporary support locations. **Note:** Measuring rod must be held in a vertical position during all measurements.

Step 8 From the recorded data determine the relative height of each of the locations as compared to the highest measured location. The differences between the highest location and a lower location will be the amount of shim material required to place between the reflector and the temporary support.

Step 9 Shim each location as required to level the reflector (see Figure 40).

Step 10 Continue to measure around antenna again, recording the height of each location measured. As before, shim the low location points to be at the same elevation as the highest measured location.

Step 11 Continue to measure, record, compare and shim any low temporary support location points until all (6) temporary location points are within 0.030 inches (0.75 mm) elevation from each other.

Step 12 Recheck the shim stacks required for leveling the reflector to ensure they are properly positioned and are adequately supporting the reflector. **Note:** As work continues on the reflector it is essential that the shim stacks remain in position through out this process. Also ensure that diameter setting bands are taut and evenly tensioned. If not, check to ensure proper leveling of temporary supports.

Reflector Center Plate Assembly

Step 13

With the reflector level, tighten seam hardware starting at the outer perimeter of match marked position A-A and continue this procedure around reflector in concentric circles while progressing inward toward reflector center. **Note:** Near center area, it may become necessary to push down on mounting ring hub to narrow segment gap before tightening hardware.

Step 1

Install center plate (P/N 49964-2) over reflector center opening and retaining bar (P/N 49997) behind reflector center opening as shown using supplied capscrew hardware as shown in Figure 41.

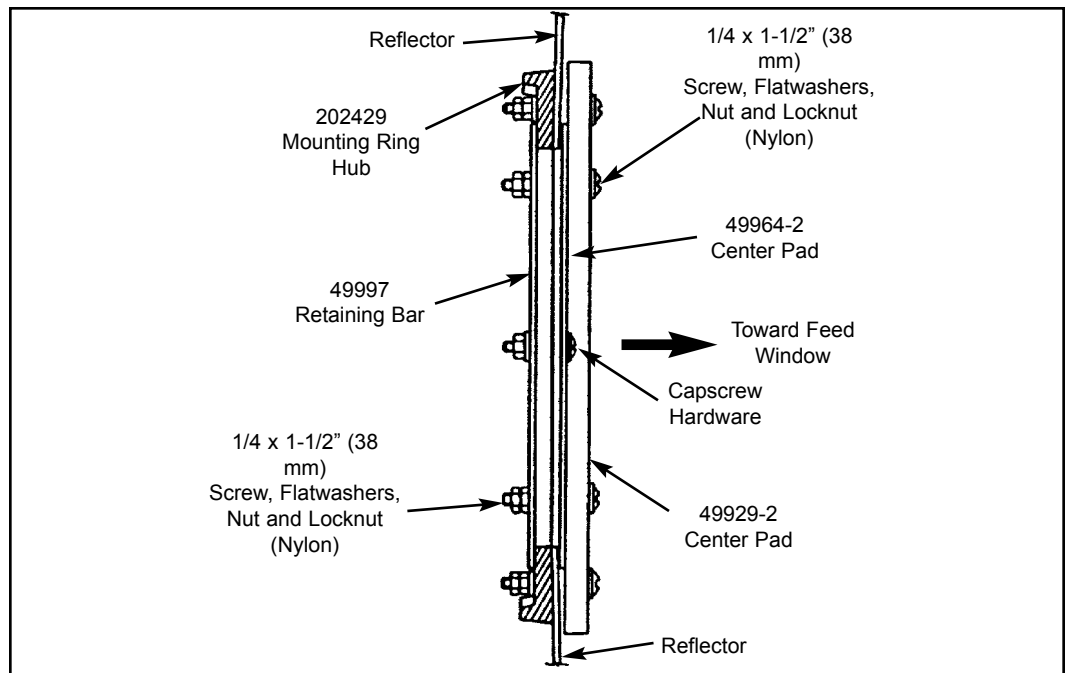


Figure 41

Step 2

Position white surface of center pad toward feed window and attach pad to center plate using supplied $\frac{1}{4} \times 1\frac{1}{2}$ in. nylon screw, flatwashers and nuts. Install flatwashers under both screw head and corresponding nut as shown in Figure 41. Tighten mounting hardware allowing only slight compression (0.060" max.) of center pad material. Use remaining nylon nuts as locknuts and distort excess screw thread to prevent disassembly.

Feed Strut Assembly

Step 1

Loosely attach corresponding feed strut brackets (P/N 49694/49695) to concave side of reflector at points B, C, E, and F as shown in Figure 42.

- Use A-325 $\frac{1}{2}$ x 1- $\frac{1}{4}$ in. bolts, flatwashers and nuts
- Insert bolts from concave side of reflector

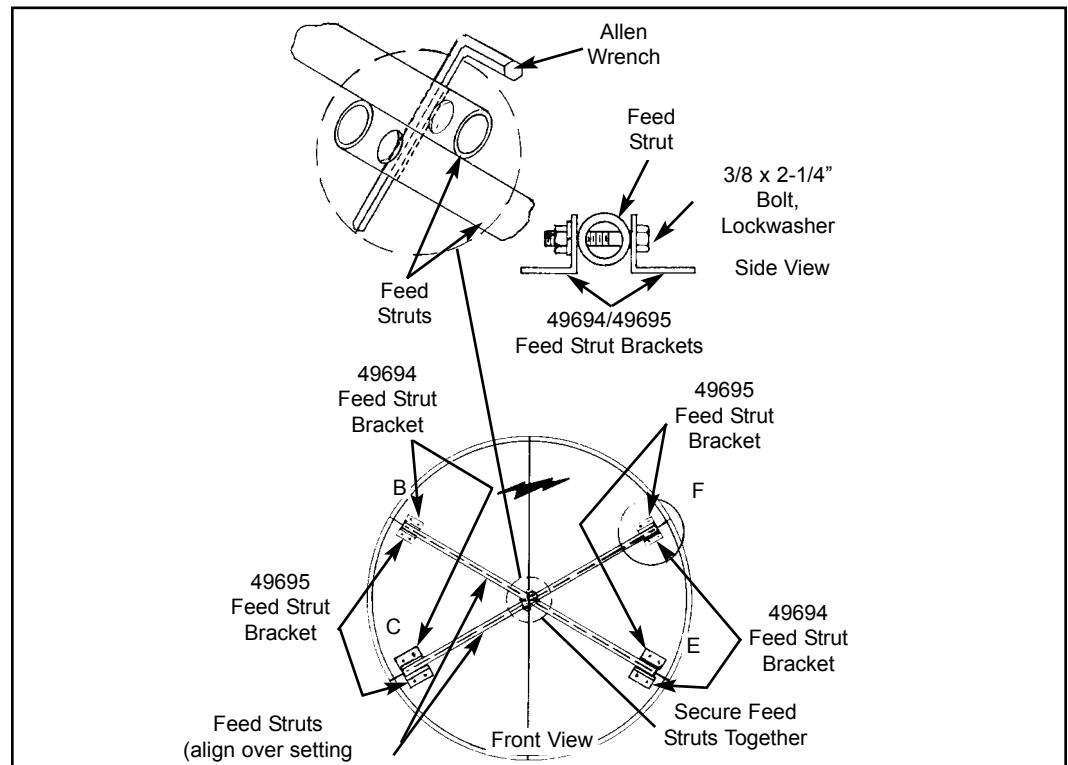


Figure 42

Step 2

Pass feed struts to installer underneath for attachment to feed strut brackets.

- Use 3/8 x 2- $\frac{1}{4}$ in. bolts, lockwashers and nuts
- Secure feed struts together at center after attachment to feed strut brackets

You have now completed the assembly of the transmit/receive reflector. The next step in the installation is the assembly of the back structure, which begins in the next section.

Back Structure

The back structure assembly attaches to the convex face of the reflector. The back structure provides stability and maintains the parabolic accuracy of the reflector.

Before assembling the back structure, verify that the appropriate parts are present. The following steps provide the procedure for the back structure assembly.

CAUTION

Reflector must remain on level supports positioned under center edge of each reflector segment with diameter setting bands in place during assembly of back structure. Once back structure is attached and all bolts tightened, reflector will be held in its assembled shape. If back structure is added with reflector in distorted shape, back structure will hold reflector in that shape. If standing or walking on reflector becomes necessary, concentrate major portion of body weight towards center of reflector panel.

Step 1

Refer to back structure Figure 43 for positioning and orientation details.

- Apply stick wax (P/N 200852) to A-325 bolt threads before installation to reduce friction

Note: Do not attempt to tighten A-325 hardware prior to tensioning sequence in assembly procedure

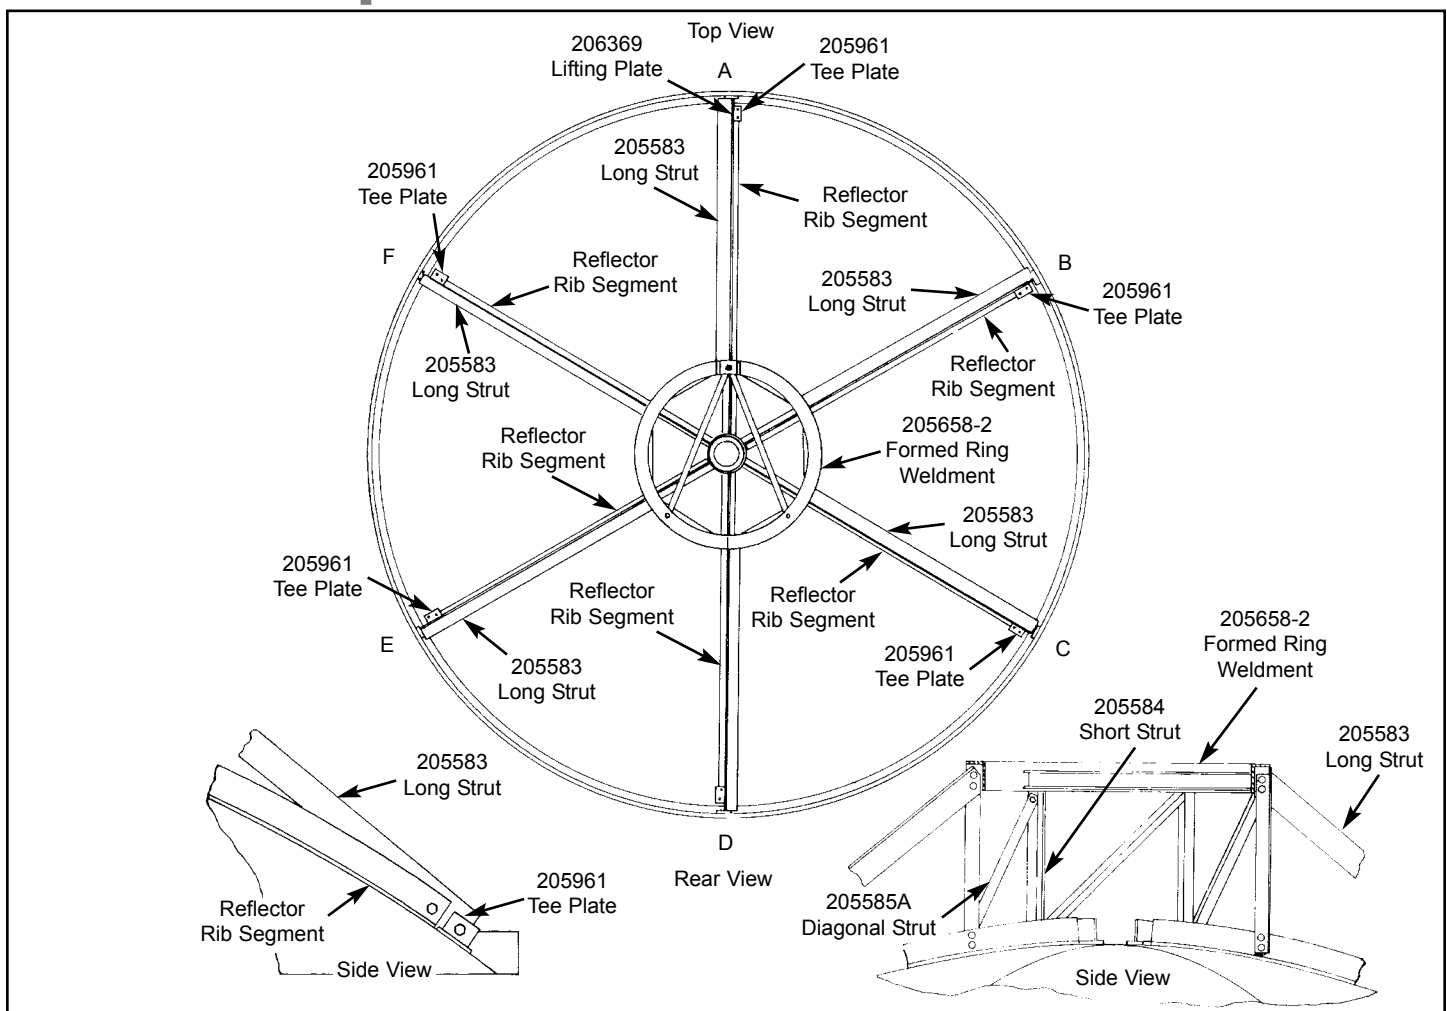


Figure 43

- Step 2** Loosely attach tee plates (P/N 205961) around rear reflector edge at indicated match-marked positions.
- Use ½ x 1-¼ in (32 mm) A-325 hardware
 - Install ½ in (13 mm) flatwashers under bolt heads at positions **A** and **D**
 - Insert bolts from concave side of reflector
- Note:** If crane is available, steps 3 through 6 may be performed by raising and assembling back structure components to formed ring weldment allowing entire pre-assembled structure to be positioned and secured to corresponding rib/tee plate assemblies.
- Step 3** Loosely attach match-marked short struts (P/N 205584) to left side of corresponding reflector rib segments using 5/8 x 2 in (51 mm) A-325 hardware with flat washers as shown keeping flat of angle positioned outward.
- Step 4** Loosely attach formed ring weldment (P/N 205658-2) to corresponding mounting holes in short struts using 2 in (51 mm) hardware with flatwashers keeping formed ring tabs positioned to right side of short struts. **Note:** “V” portion of formed ring weldment is facing position **A-A**.
- Step 5** Loosely attach match-marked long struts (P/N 205583) to right side of corresponding tee plate, rib and ring tab assemblies using 2 in (51 mm) A-325 hardware with flatwashers as shown keeping clipped end of struts positioned toward formed ring weldment. Attach lifting plate (P/N 206369) to outer left side of reflector rib segment at position **A-A** using existing hardware.
- Step 6** Loosely attach diagonal struts (P/N 205585A) between long and short strut assemblies using 2 in (51 mm) A-325 hardware with flatwashers as shown. **Note:** Diagonal struts are installed between top hole in bottom portion of short strut and bottom hole in top portion of long strut keeping single beveled end toward formed ring weldment
- Step 7** Prior to hardware tensioning, ensure diameter setting bands are uniformly taut. If not, check leveling of temporary supports and add or subtract shims as necessary.
- Step 8** Begin tensioning sequence at match-marked position **A-A** long strut/reflector rib assembly junctions around reflector perimeter. Proceed to long strut/tee bracket assembly junctions. Continue sequence by tightening all tee bracket assembly hardware. Finally, tension all upper ring weldment hardware and proceed to lower strut assembly hardware. **Note:** Tighten all connections on back structure per A-325 tensioning procedure
- Step 9** Remove diameter setting band assembly leaving corresponding edge joining plates (P/N 49424) installed using existing hardware.
- You have now completed the assembly of the back structure and its attachment to the reflector. Proceed to the next section for instructions on mounting the reflector to the pedestal ground mount assembly.

Reflector-To-Mount Assembly

Step 1

Attach 5/8 in (16 mm) clevis with 4 ft (1.2 m) nylon choker to previously installed lifting plate (P/N 206369) as shown in Figure 44. Attach additional 20 ft (6 m) nylon sling around formed ring weldment and below corresponding long struts at the 10- and 2-o'clock positions as shown. Attach choker and sling to crane and carefully raise entire reflector/back structure assembly to vertical position.

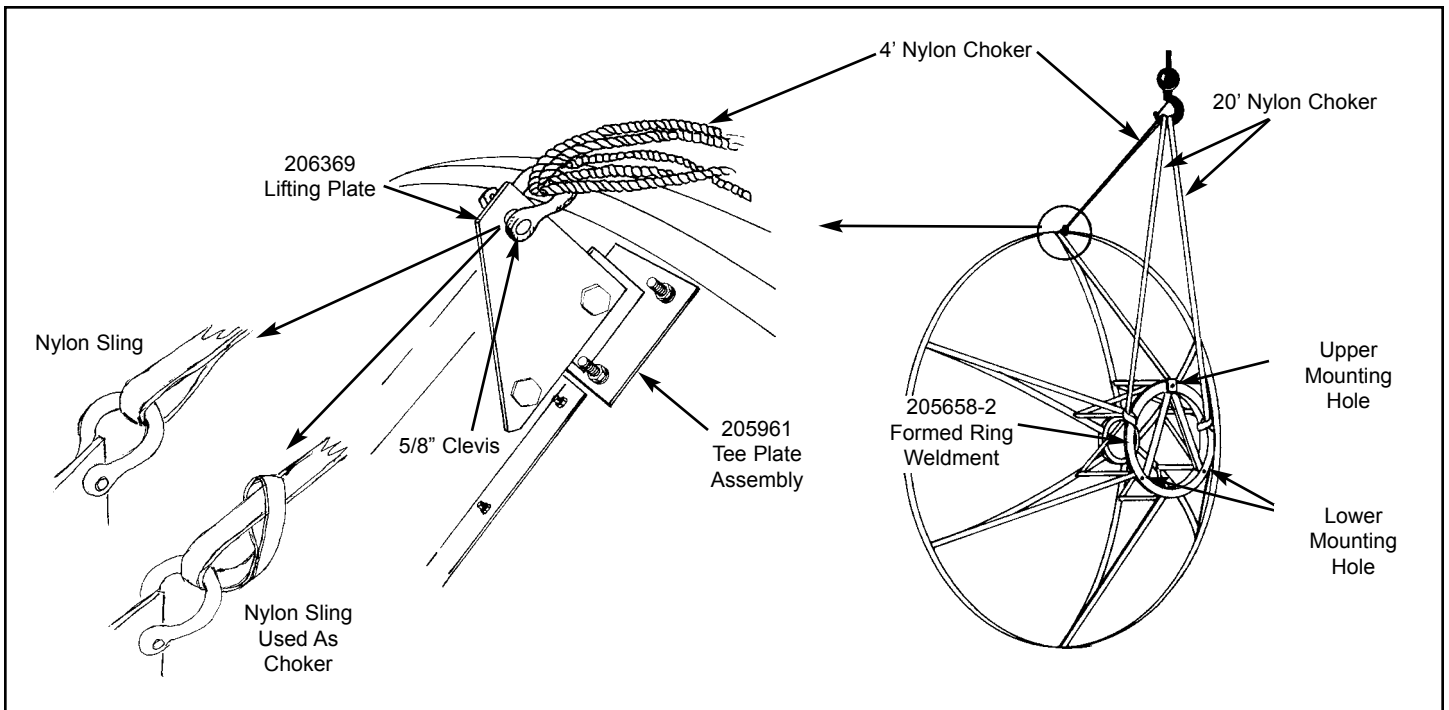


Figure 44

Step 2

Attach lower mounting holes of formed ring weldment to corresponding holes in elevation support angle assembly using 7/8 in (22 mm) hardware. Extend elevation jackscrew and attach to upper mounting hole of formed ring weldment using 3/4 in (19 mm) hardware. Securely tighten mounting hardware per A-325 tensioning procedure and remove choker and sling. **Note:** Required mounting hardware is included as part of ground mount assembly kit.

You have now completed the attachment of the reflector to the pedestal ground mount. Proceed to the next section for instructions on assembling and attaching the feed assembly to the reflector.

Feed Support/Strut Assembly

Step 1

By now, you can see that your installation of the 4.5-Meter Earth Station Antenna is almost complete. The feed system is the last phase of the base installation described in this manual. **Note:** All antenna options (such as feeds, shields, anti-icing, etc.) possess installation instructions within the individual kits contained in the shipment.

Loosely install four 3/8 x 1/2 in. set screws in feed support assembly (P/N 49866A). Loosely attach feed struts (P/N 49923/49923-2) to feed support assembly by sliding feed support rods into ends of struts and installing 3/8 x 1-3/4 in. bolts, lockwashers and nuts as shown in Figure 45.

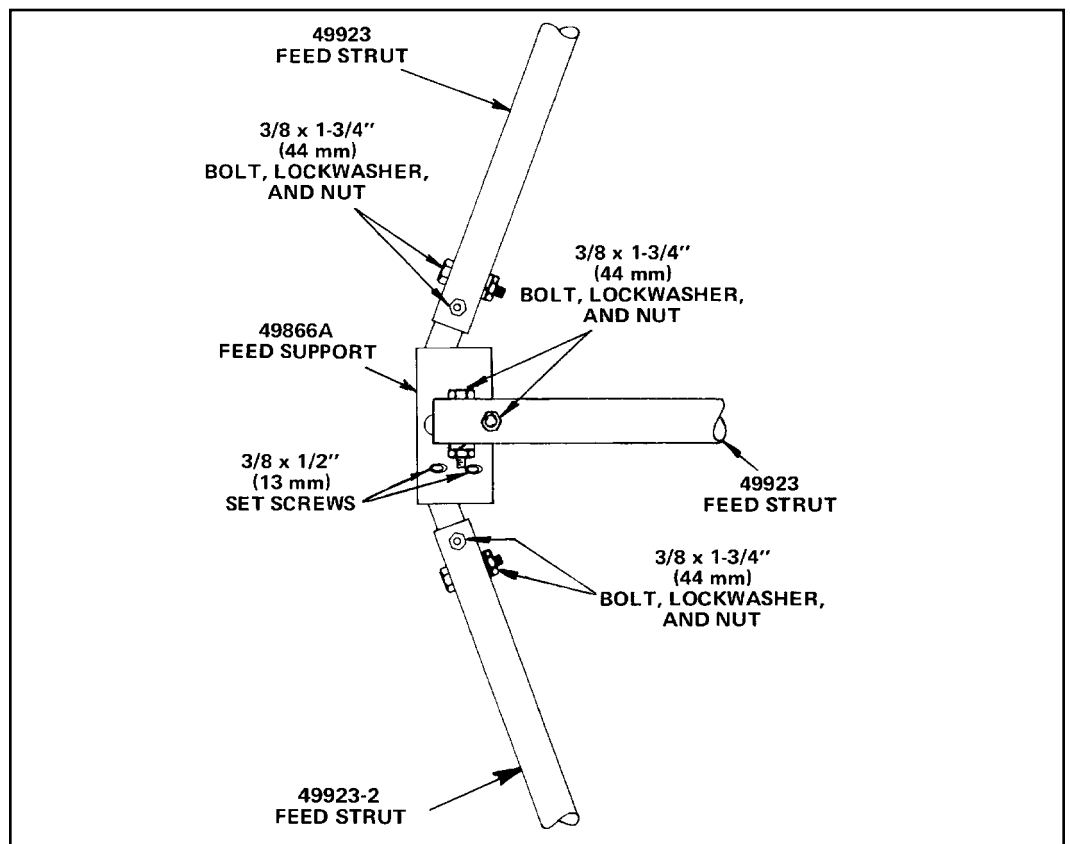


Figure 45

Step 2

Securely tighten all feed support strut mounting hardware.

Polarization Adjustment

Note: All antenna options (such as feeds, shields, anti-icing, etc.) possess installation instructions within the individual kits contained in the shipment.

Step 1

Connect receive LNA output to spectrum analyzer and fine adjust elevation and azimuth strut lengths to achieve maximum signal strength from desired satellite.

Step 2

Loosen four 3/8 x 1/2 in. set screws in feed support until feed assembly is free to rotate and adjust feed for maximum receive signal strength on desired polarization. **Note:** Do not loosen collar (P/N 49795) hardware. Collar will maintain appropriate feed window to center pad dimension during polarization adjustment.

Step 3

Rotate feed assembly in one direction until signal level drops 1 dB. Mark this position. Rotate feed in opposite direction through maximum signal until signal level again drops 1 dB. Mark this position.

Step 4

Adjust feed assembly to midpoint of 1 dB marks and securely tighten four 3/8 x 1/2 in. set screws in feed support making sure feed support is firmly seated against collar (P/N 49795).

You have now completed the feed installation for your Earth Station Antenna. The antenna is now ready for various options to be installed or for testing to begin. Refer to "Operation" Section to obtain instructions on the actual operational guidelines of your 4.5-Meter Andrew Earth Station Antenna.

Operation

Overview

After you have completed the assembly of your antenna, you are now ready for it to become operational. In order to operate the earth station antenna, you will need to direct it to the desired satellite adjusting both the elevation and azimuth angles appropriately. The following procedures provide details on how to correctly position your antenna on the desired satellite.

Acquiring A Satellite

Follow the procedures listed below when acquiring the desired satellite:

Note: Ensure that the feed system and all electronics are installed properly before proceeding.

Step 1

Evaluate and determine the required elevation and azimuth angles for the satellite of interest.

Steps 2 through 6 are for Pedestal Mounted Antenna Only

Step 2

Loosely attach the manual actuator assembly (P/N 207882) to the elevation strut as shown in Figure 22b using the appropriate hardware.

Note: The drain hole should be positioned downward for proper water drainage.

Step 3

Ensure that the locking strut-support setscrew is firmly tightened on the strut assembly as shown in Figure 22b.

Step 4

Remove the two indicated strut-support setscrews, and attach the base angle to the corresponding strut support using the supplied 1/2 inch clamping nuts and the previously removed strut-support setscrews as shown in Figure 22b.

Step 5

Securely tighten the remaining mounting hardware to achieve sufficient clamping force.

Step 6

Repeat the entire process for the remaining strut assembly. **Note: DO NOT** loosen the azimuth drive bearings.

Step 7

If you have a pedestal mounted antenna, move the antenna to the desired azimuth angle by adjusting the manual actuator until the satellite signal has been spotted. If your antenna is mounted upon a tripod, adjust the azimuth strut length through the fine adjustment assembly until the satellite signal has been spotted.

There are several procedures that may be used to properly acquire the satellite. Andrew recommends that a spectrum analyzer be used. The following procedures provide explanations as to how to use the spectrum analyzer.

While viewing the spectrum analyzer screen, a pure noise signal as shown in Figure 1 will probably be observed. Additionally, some transponder signals may be observed above the noise signal as shown in Figure 2.

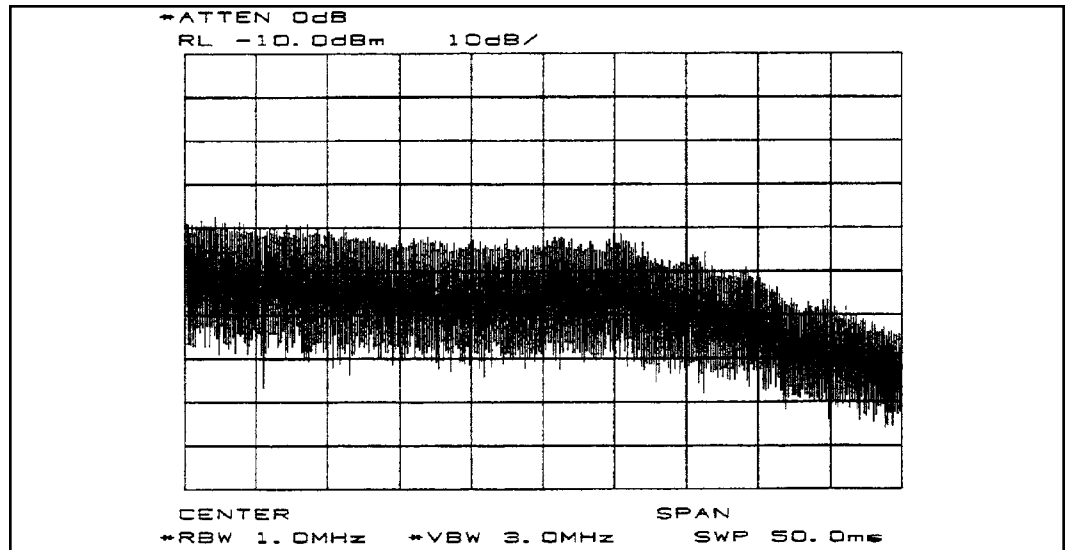


Figure 1

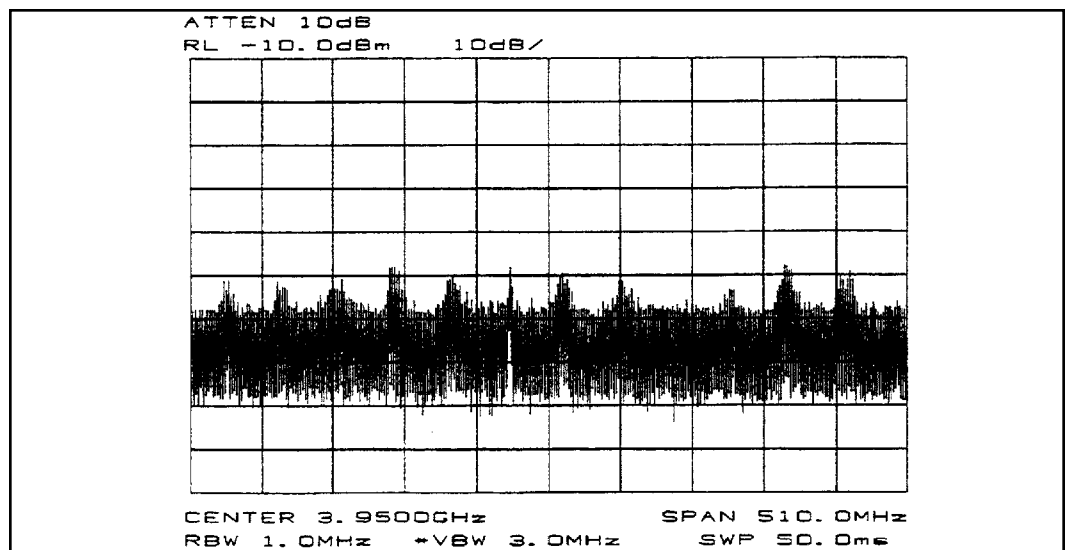


Figure 2

The following steps provide the procedure for acquiring a satellite.

Step 1

Manually move the antenna in the azimuth (scanning back-and-forth) to achieve the maximum (greatest amplitude) transponder signals.

- Scan in one direction until the amplitude continues to diminish and then scan in the opposite direction until the same condition occurs.
- Return to the position yielding the greatest amplitude.

The maximum azimuth excursion from the original setting should not exceed $\pm 1.5^\circ$ or the antenna may begin to access a different satellite.

Step 2

With the antenna positioned in azimuth such that the transponder signals are maximized, follow the same procedure manually moving the antenna in elevation (scanning up-and-down) to further maximize the transponder signals.

Step 3

Repeat this procedure alternating between the azimuth and elevation excursions of the antenna to peak the transponder signal amplitude.

A transponder signal amplitude of 30 dB or greater from peak to average noise signal indicates the antenna is receiving the signal on the main beam. A transponder signal amplitude less than 30 dB indicates the antenna is receiving the signal on the side lobe of the main beam.

Step 4

With the antenna peaked on a side lobe in azimuth and/or elevation, move the antenna in azimuth while observing the spectrum analyzer screen as shown in Figure 3.

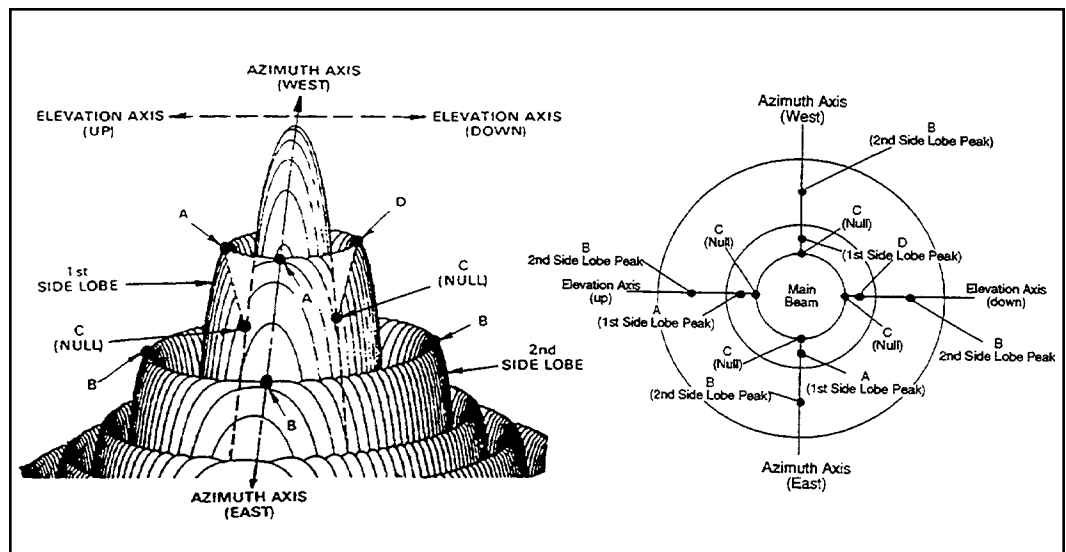


Figure 3

Step 5

If the signal amplitude diminishes and does not increase (position B) to the level noted when the antenna was peaked on the side lobe, the antenna is moving away from the main beam; reverse the direction of the antenna movement.

From the original side lobe position (position A), the signal amplitude should now diminish to a null point at position C (minimum amplitude showing only signal noise) and then symmetrically increase again to the same level at position D as noted at position A. At the null point (position C), the antenna is aligned with the alternate (elevation) axis. If the antenna was peaked on a side lobe in the azimuth, it was appropriately aligned with the elevation axis; proceed with Step 6. If the antenna was peaked on a side lobe in elevation, it was appropriately aligned with the azimuth axis; proceed with Step 6 moving the antenna in azimuth rather than elevation.

- Step 6** Move the antenna in elevation while observing the spectrum analyzer screen. If the signal amplitude increases, decreases and then increases again but to a lesser value, the antenna is moving in the wrong direction; reverse the direction of the antenna movement. From the original null point, the signal level should decrease and increase alternately, but with an increasing amplitude until the transponder signal increases to a level of at least 30 dB. Continue to manually peak the signal to a maximum level using the azimuth and elevation adjustments.
- Step 7** If the antenna is aligned in azimuth and elevation (signal maximized) and 24 transponder signals (12 horizontal and 12 vertical) are noted, the polarization adjustment is set incorrectly and must be modified. If 12 transponder signals are noted, they may or may not be the properly polarized signals. Therefore 24 transponder signals must be visually noted in order to determine the proper polarization setting.
- Step 8** Rotate the feed assembly clockwise until 24 transponder signals are noted and of approximately equal amplitude. **Note:** It is more accurate and visually easier to minimize the alternate set of transponder signals rather than maximizing the transponder of interest.

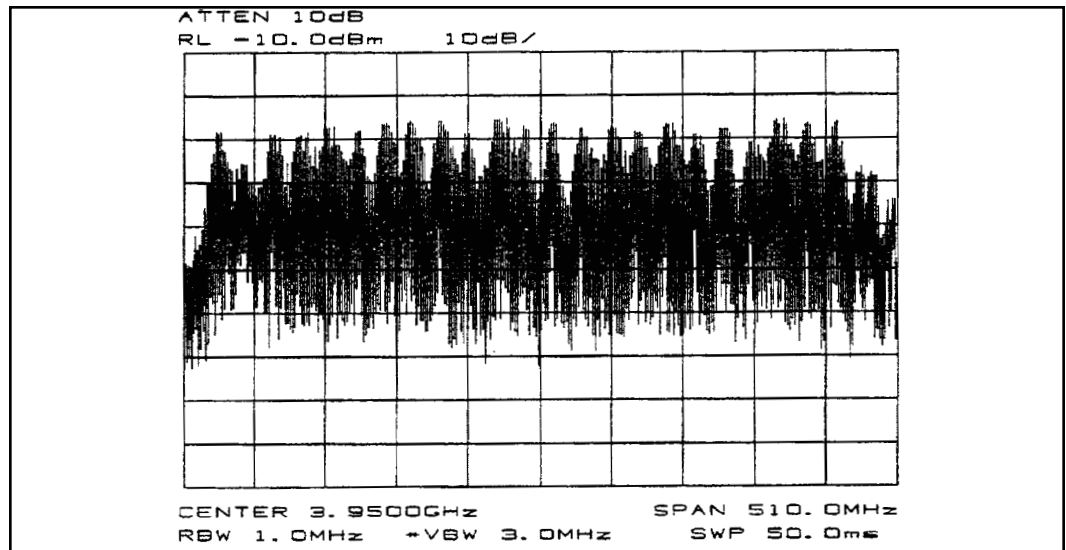


Figure 4

- Step 9** With all 24 transponder signals of approximately equal amplitude appearing on the spectrum analyzer screen determine the specific antenna system and satellite parameters. Rotate the feed assembly as required until the appropriate (odd or even) transponder signals are maximized.

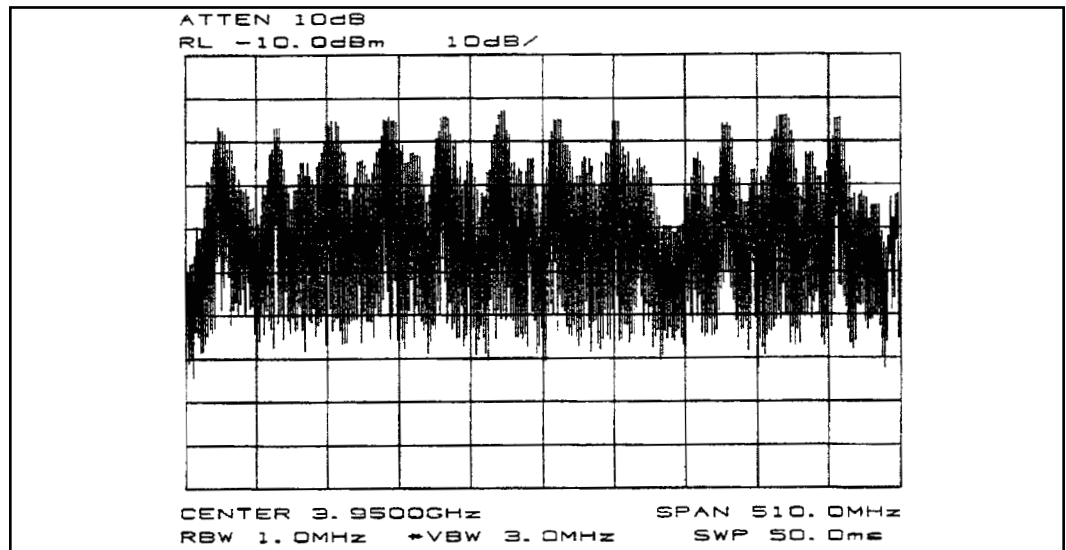


Figure 5

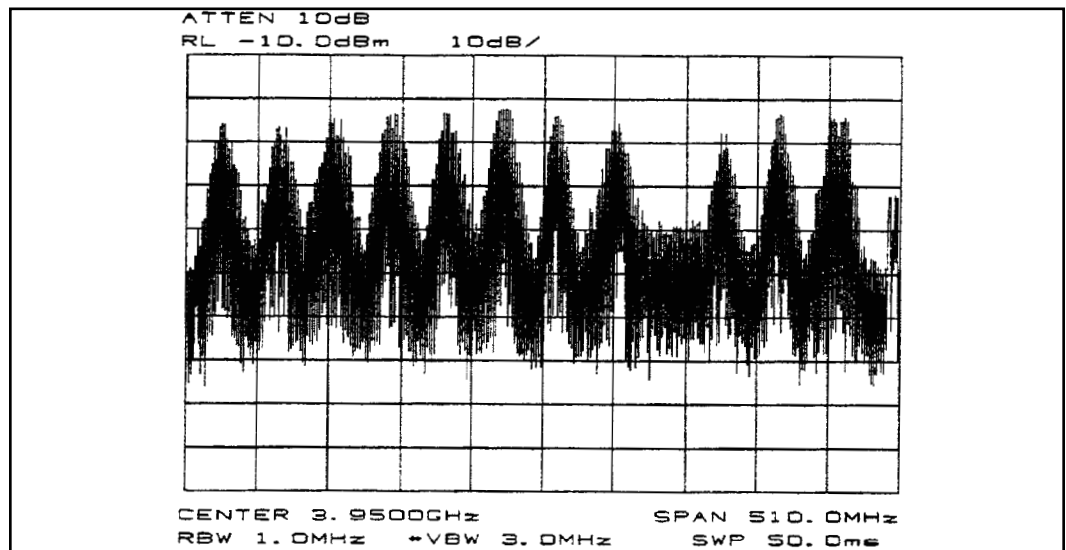


Figure 6

Manual Actuator Assembly Removal

Step 1

Remove the manual actuator assembly by first removing the hardware securing the actuator to the base angle. **Note:** The adjustment kit assembly should be removed after the antenna has been adjusted. Store the manual actuator assembly and the corresponding hardware in a dry area for future use.

Step 2

Remove the remaining clamp segments with the corresponding hardware.

Step 3

After the antenna is pointed at the satellite, tighten all azimuth and elevation setscrews to 35 foot-pounds.

Preventive Maintenance

Overview

This section contains periodic preventative maintenance instructions for the 4.5-Meter Earth Station Antenna. Included in this section are inspection and preventative maintenance procedures including cleaning and lubrication, painting and an operational voltage/current checkout procedure deemed within the capabilities of the average station technician. Refer to applicable vendor manuals for any repair procedures not included in this section yet designated as capable of being performed in the “field” rather than requiring specialized facilities, tools and/or test equipment as well as technically trained personnel.

An operational checkout procedure provides an accurate indication of the overall earth station performance and should be performed at intervals of approximately three months. This procedure is essentially performed during the various modes of normal operation of the earth station. In addition, the operational checkout procedure should be performed after any repairs or adjustments have been made, or whenever the earth station is suspected of degraded operation. If any discrepancy in performance exists and the condition cannot be readily remedied to return the earth station to a proper operating condition, the appropriate troubleshooting procedures should be referenced to locate the fault. After the trouble is determined and the repairs effected, a final operational checkout procedure should be performed to verify that all discrepancies have been corrected.

The following paragraphs describe the inspection and preventative maintenance procedures for the earth station. These instructions include general cleaning and inspection, the preservation of metal parts and the lubrication of moving parts. Periodic replacement of assemblies or components as a preventative measure is not required. Malfunctions of the earth station can be traced to components, assemblies and parts through the use of applicable troubleshooting procedures.

General Cleaning

To prevent the excessive accumulation of dust and dirt as well as the removal of such contaminants, thoroughly clean the equipment whenever visually inspecting the earth station components. No special cleaning procedures are required. However, a thorough cleaning in accordance with the following procedures is required to assure continued trouble-free operation.

Electrical Parts

Minor cleaning, such as the removal of dust and loose foreign particles can be accomplished by one of the following:

- Vacuuming
- Using a soft brush or lint-free cloth
- Blowing out the dust and dirt with low pressure (5 to 25 psi), dry compressed air

When using air to blow off the contaminants, either avoid or be careful when directing the air stream on delicate parts. To remove imbedded dirt, grease or oil from electrical parts: use a 50% solution of isopropyl (rubbing) alcohol and apply with a soft bristle brush. It may be necessary to brush some parts vigorously with a stiff bristle brush to remove imbedded and hardened dirt particles. If possible, avoid excessive use of cleaning solvent on electrical insulation. After cleaning, allow the cleaned parts to dry for 10 to 15 minutes before placing the equipment into operation.

Mechanical Parts

Clean mechanical parts by first removing dust, dirt and other loose contaminants with a scraper, stiff brush (bristle, or wire in the case of rust or corrosion), or cloth or compressed air at 25 to 40 psi. Any accumulated imbedded dirt, corrosion, grease or oil deposits that require further cleaning may be removed with a bristle or wire brush and a cleaning solvent such as trichlorethylene or equal. After cleaning, allow cleaned parts to dry for 10 to 15 minutes before placing the equipment into operation.

Inspection

The frequency of inspection is contingent upon the user's individual standards and the operational environment in which the earth station is located. However, a visual inspection of the earth station components should be performed at least semi-annually. Where there are no established wear limits, perform a visual inspection to locate worn or damaged parts which could cause improper functioning of the earth station. It is recommended that the mechanical and electrical inspection be performed on the assembled or partially disassembled equipment to determine the extent of disassembly required prior to completely disassembling a suspected malfunctioning component or module. In the absence of any special inspection requirements, operational tests are the most effective means in isolating parts and assemblies requiring further inspection. Any condition noted during inspection that may preclude continued proper operation of the earth station prior to the next scheduled inspection should be noted. The discrepant condition should be corrected (repaired or replaced) immediately or at the conclusion of the inspection procedure.

Local Control/Motor Drive Controller

Inspection of the local control/motor drive controller conforms generally to standard visual inspection procedures on electromechanical equipment. In addition to these standard procedures, perform the following checks and visual inspections for the specific conditions noted:

WARNING

Care must be taken to avoid electrical shock. Failure to heed warning could result in injury or death.

- Check the main panel for illegible and indistinct panel markings.
- Connect the detachable hand controller assembly (local control) for visible signs of damage such as cracked housing, damaged connector/bent pins, cuts or damage to cable jacket insulation, etc. Examine selector switches for damage and proper actuation movement.
- Inspect all wiring and cables for discoloration and burned insulation, dirt, breaks, security of connection and other signs of deterioration. Examine connections for dirt, flux, corrosion and mechanical defects. Check for loose or broken lacing and cut, brittle, abraded, frayed or cracked insulation.
- Examine connectors for corrosion, broken inserts and stripped threads. Check connector shells for distortion and dents, and contact pins for bends, misalignment or other deformities. Check connector inserts for carbon tracking indicating arc-over.

- Check all electrical components for dirt, chips, cracks, breaks, discoloration or other signs of deterioration and damage. A discolored, blistered or burnt condition is evidence of overload. Measure actual value of suspect electrical components and compare against specified value where applicable.
- Check transformer for an excessive wax deposit on the surface, discoloration or a pungent odor indicative of burning varnish denoting overheating or a total breakdown.
- Check all terminal blocks for broken or missing terminals and stripped threads. Check tightness of lead attaching hardware.

Caution

Make sure electrical power has been disconnected.

- Check the motor starters and circuit breakers for free operation. Check tightness of all wire connections.
- Visually inspect printed circuit board for signs of debris that might short out components. Verify that all LED indicators are functioning correctly. Check the terminal block connectors for tightness of lead attaching hardware and signs of scorching or burning.
- Check for security of all hardware and stripped or otherwise damaged threads. Check metallic parts for corrosion, dents, distortion and other deformation.
- Check for evidence of water inside the enclosure. If any water is in evidence, check that all seals are intact and if not, use a coating of RTV-108 (silicone rubber sealant) to seal any exposed electrical fitting, bolt hole or other possible water entry into the enclosed electrical components in order to maintain a water proof condition.
- Check or change vapor corrosion inhibitor unit.

Antenna

Inspection of the antenna conforms generally to standard visual inspection procedures performed on electromechanical equipment. In addition to these procedures, perform the following checks and visual inspections for the specific conditions noted:

- Inspect all wiring and cables, particularly the network to enclosure and enclosure to mount interfaces, for discoloration and burned insulation, moisture entry, corrosion, dirt, breaks, security of connection, and other signs of deterioration. Examine connections for dirt, corrosion and mechanical defects. Check for loose or broken lacing and cut, abraded, frayed, brittle and cracked insulation.
- Examine connectors for corrosion, broken inserts and stripped threads. Check connector shells for distortion and dents, and contact pins for bends, misalignment or other deformities. Check connector inserts for cracks, carbon tracking, burns or charring indicating arc-over.

- Check all electrical components for dirt, cracks, chips, breaks, discoloration and other signs of deterioration and damage. A discolored, blistered or burnt condition is evidence of overload.
- Operate the azimuth and elevation drives as well as the feed rotation in both the plus and minus direction from the local control/motor drive controller at least once every three months during antenna down time. Check the mechanical limit switches provided at the end points stop antenna and feed movement, and limit travel to prevent structural interference and damage. Check the mechanical limit switches for corrosion and water entry and the arm on each feed limit switch for free movement without binding. Be certain both feed rotation limit switch arms are not distorted and ride centrally on the actuating cam to open their corresponding limits switch.
- Inspect the azimuth and elevation jackscrew boots for security of attachment at both ends, for abrasion, tears, cuts, brittleness and other damage that may expose the jackscrew to the environment (water, dust, etc.). Minor repairs can be made with RTV-108 silicone rubber sealant.
- Visually inspect the feed window for dirt and the feed, feed supports, feed window and reflector for distortion, foreign object damage and environmental deterioration due to ice and snow, dust, rain, hail and high winds, etc. which may cause electrical component and/or structural deformation.
- Check the cable attachment to the resolvers and to the LNA or LNBs and enclosure mount interface for security, the cable routing for secure hanger attachment and the cable insulation for cuts, cracking, abrasion and other deterioration. Check the LNA or LNBs and the resolvers for a secure mechanical attachment. Ensure proper torquing of polarization drive gear box setscrews and appropriate tensioning of corresponding drive chain assembly, if applicable.
- Check (if applicable) that the drain holes in the bottom of the enclosure are not obstructed and there is no evidence of water accumulation. Check the enclosure doors for proper closure and that the door seals are intact, not torn, abraded or otherwise damaged. Check that all other seals are intact and if not, use a coating of RTV-108 (silicone rubber sealant) to seal any exposed electrical fitting, bolt hole, or other possible water entry to electrical components in order to maintain a weatherproof condition. If the enclosure is provided with a vent fan, check for free operation of the fan blade. The fan bearings are permanently lubricated; any binding, abnormal noise or vibration necessitates replacement of the fan assembly. Check and replace the fan filter element if it appears dirty or obstructed with dust.
- Check for the appearance of surface lubricants that will cause the accumulation of dirt and grime. Clean off all excess surface lubricants with a cloth and, if required, a cloth dampened (not wetted) with trichlorethylene, or equal.
- Visually inspect all mechanical parts for freedom of operation with no misalignment, binding or interference. Check all cabling for sufficient slack to prevent cable strain as well as adequate restraint to prevent abrasion or chaffing during antenna and feed movement.

Drive System Voltage and Current Checks

- Check security of antenna mounting and interconnecting assembly hardware. Be certain all electrical grounding connections (including cross-axis grounding straps) and intact and secure, not corroded or broken. Thoroughly clean any noticeable corroded portions of grounding cables, unplated portion of universal terminals and corresponding mounting surfaces with a wire brush. Replace rather than tighten any loose A-325 structural hardware. The hardware distorts at initial installation and once loosened will not maintain the required high strength friction connection. All other assembly and installation hardware should be tightened to its original torqued condition. When installing new structural hardware, do not use a wrench with a lever arm longer than two feet.
- Examine painted aluminum and galvanized surfaces and touch-up where required.

At the conclusion of the installation procedure and prior to turning the system over to the station facility, an installation acceptance check-off sheet was prepared and duly signed off if installed by an Andrew crew. Part of this check-off included voltage readings retaken to determine if proper voltage was available. Current readings were also taken as a reference for future comparison to serve as a troubleshooting aid in determining possible equipment degradation and shortened life. Any current reading taken during the following procedure that significantly varies by more than five percent from the preestablished reference values necessitates trouble shooting the particular system involved to determine the cause and required corrective action.

Step 1

Approximately every three months and during a period of down time, disconnect as applicable the RF transmitter and all power supplies. The main disconnect switch in the main load center box at the antenna site must be in the ON position and the detachable hand-held controller assembly must be plugged in.

Step 2

Open the outer local control/motor drive controller door at the antenna site to gain access to the conductors supplying power to the azimuth, elevation and polarization drive motors. Turn the primary power disconnect switch to the ON position.

Step 3

Turn the Az/El speed switch to the FAST position. Turn the AZIMUTH EAST/WEST switch to either position and while the antenna is rotating, carefully use a clamp-on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the power conductors (phases) connected to the main terminal block at the bottom of the panel. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check-off. If the readings differ significantly, refer to the appropriate troubleshooting information and perform the applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other - within two percent. Turn the AZIMUTH switch to OFF.

Step 4

Repeat preceding step (3) with the AZIMUTH EAST/WEST switch in the alternate operating position.

Step 5 Turn the ELEVATION DOWN/UP switch to either position and while the antenna is rotating, carefully use a clamp-on ammeter in accordance with the ammeter manufacturer's instructions to take current readings off each of the power conductors (phases) connected to the main terminal block at the bottom of the panel. Record the current draw in the equipment log and compare the readings to the reference values entered in the installation/acceptance check-off. If the readings differ significantly, refer to the appropriate troubleshooting information and perform the applicable corrective action. Then take voltage readings off each of the three conductors; the readings should agree with each other - within two percent. Turn the ELEVATION switch to OFF.

Step 6 Repeat the preceding step (5) with the ELEVATION DOWN/UP switch in the alternate operating position.

Step 7 Repeat steps 3 through 6 with the Az/EI speed in the SLOW position.

Step 8 If all voltage and current readings are within tolerance, turn the primary power disconnect switch OFF. Then close and lock the outer local motor controller door. Disconnect the hand held controller to return antenna control to studio.

Pedestal Mount Bearing Pad Adjustment

The bearing pad (within the pedestal mount) adjustment rods/bolts require yearly adjustment and verification of torque value. With the antenna at zenith (90 degrees), follow the procedures presented below:

Step 1 Loosen jam nuts on all rods/bolts.

Step 2 Torque the upper adjustment rod evenly to 40-45 foot-pounds. Then torque the lower adjustment rod evenly to 40-45 foot-pounds.

Step 3 Torque the upper adjustment bolt evenly to 40-45 foot-pounds. Then torque the lower adjustment bolt evenly to 40-45 foot-pounds.

Step 4 Repeat steps 2 and 3 verifying all adjustment rods/bolts are evenly torqued within the limits specified.

Step 5 Tighten the jam nuts.

Preservation of Component Parts

Aluminum Parts

When preserving component parts, refer to the following paragraphs in this section.

Remove all loose paint and corrosion by scraping, wire brushing or using steel wool. If using steel wool near the feed window, make sure that none remains on the feed horn window. Edges of existing paint can be blended with a metal surface by using a fine grit sandpaper. Wipe the surface to be painted with a soft rag dampened in trichlorethylene, lacquer thinner or equal. Be certain to remove all loose paint, corrosion, imbedded dirt, grease and oil deposits or the paint will not adhere to the surface. Lacquer thinner will dissolve paint if applied heavily and rubbed vigorously. The reflector may be washed with plain water if necessary. Do not use bleach, soap solutions or kerosene as it is difficult to remove the residue. Allow the cleaned surfaces to dry thoroughly before priming.

Prime the cleaned surface by applying zinc chromate primer. The primer can be applied with brush, roller or pressurized spray. If necessary, thin the primer with lacquer thinner to the proper consistency. Feather primer onto adjacent painted surfaces. Allow primer to thoroughly dry before applying the finish paint coat.

Paint all RF surfaces, such as the inside of the main reflector and subreflector with a high-reflectance white paint. This type of paint disperses light rays, reducing the focusing effect of the sun's radiation, thereby reducing heat build-up caused by the focused sun's rays on the feed system. Rear surfaces of the reflector and subreflector may be painted with a flat white enamel paint. The paint can be applied with a brush, roller or pressurized spray. If necessary, thin the paint with the appropriate thinner to the proper consistency. Thoroughly paint over the primed surfaces and blend with the existing painted surfaces.

Galvanized Surfaces

Remove all loose paint and corrosion by scraping, wire brushing or using steel wool. Edges of existing paint can be blended with the metal surface by using a fine grit sandpaper. Wipe the surface to be painted with a soft rag dampened in trichlorethylene, lacquer thinner, or equal. Be certain to remove all loose paint, corrosion, imbedded dirt, grease, and oil deposits or the paint will not adhere to the surface. Lacquer thinner will dissolve paint if applied heavily and rubbed vigorously. Do not use bleach, soap solutions or kerosene as it is difficult to remove these products' residue. Allow the clean surface to dry thoroughly before painting.

Paint the cleaned surface with a zinc-rich paint. The paint can be applied with a brush, roller or pressurized spray. If necessary, thin the paint with the appropriate thinner to the proper consistency.

Thoroughly paint over the cleaned surface and blend with the existing painted surface.

Lubrication

For long life and trouble-free operation be certain not to extend the lubrication schedule beyond the frequency recommended in Table 1. The frequency should be shortened if the antenna is subjected to an adverse environment (e.g. high temperature, extended periods of rainfall, high humidity, dust storms, etc.). Any component or part should be immediately be lubricated if, during inspection or operation, rough, jarring or intermittent motion is noted, or if squeaky or other unusual noises are heard. Lubrication is required on all metal-to-metal rolling or sliding parts. Use the lubricants recommended. Do not over lubricate. Over-lubrication can often be as damaging as under-lubrication. Prior to

the application of lubricant to any parts, use a clean cloth and/or bristle brush and remove any old lubricant to prevent an excessive build-up. Remove indicated access plugs from square tube weldment and apply lubricant to panning frame tube assembly and corresponding thrust pads. Securely replace access plugs in square tube weldment. Be certain to remove any protective caps and clean off each lubrication fitting prior to injecting fresh grease. The elevation and azimuth jackscrew assemblies are equipped with a grease fitting and corresponding pipe plug on opposite sides of the jack housing. Remove the appropriate pipe plug and fill it with grease until lubricant seeps from pipe plug opening. Replace and securely tighten pipe plug.

The following is a list of the lubricant characteristics:

- **Mobil Temp SHC32** A non-soap hydrocarbon fluid type grease. Operating temperature is -65 degrees to 350+ degrees Fahrenheit (-54 degrees to 177+ degrees Celsius).
- **Mobil SHC624** A low temperature synthetic oil for worm gear reducers. Operating temperature range is -40 degrees to 125+ degrees Fahrenheit (-40 degrees to 52+ degrees Celsius).
- **Moly Grease** A grease lubricant containing molybdenum disulfide. Operating Lubricant temperature range is -85 degrees to 300+ degrees Fahrenheit (-29 degrees to 149+ degrees Celsius).

Jackscrews/Motors

Periodically inspect lifting screws on jackscrew assemblies to insure adequate lubrication. Loosen jackscrew boot clamps to expose the lifting screw assembly. Fully extend jackscrew assembly, being careful not to exceed preset mechanical limits. Brush thin coating of Mobil SHC32 grease on exposed lifting screw. Replace boot and attach corresponding boot clamps. If lifting screw is rusty, remove existing lubricant with solvent and wire brush rusted area. Rinse with solvent and apply fresh grease.

Periodically inspect and remove dust and dirt deposits from the motor housings to avoid hindering the thread exchange with the ambient air. Slight dirt accumulation on the air vent screw through splash oil cannot be avoided, however, keep vent screw clean to ensure proper pressure compensation.

Lube points 2 and 4, shown in Table 1, require removal of the indicated drain plugs and collecting/measuring the amount of SHC624 drain oil using measuring cup. The specified amount of oil must be added to the gear motor/hosing (after installing the drain plug) via the fill/vent plug opening using supplied funnel. Addition of the oil requires use of an appropriate filling utensil. Use of a modified level stick will not correctly gauge the appropriate amount of oil in the gear housings.

Gear Motor/Housing Fill Drain Requirements


Table 1. Antenna Lubrication Chart

Lube Point	Parts to be Lubricated	Action	Frequency	Service Type	Lube Type	Quantity/ Points	Andrew Number
1	Elevation jackscrew housing	Lubricate	Every 3 months	Pressure Fitting	SHC32	1	49208
2	Elevation gear motor housing fill and drain	Inspect Change	Monthly 3 months	Pipe plugs	SHC624	10 ounces	47497
3	Azimuth jackscrew housing	Lubricate	3 months	Pressure Fitting	SHC32	2	49208
4	Azimuth gear motor housing fill and drain	Inspect Change	Monthly 3 months	Pipe plugs	SHC624	10 ounces	47497
5	Panning frame tube assembly and thrust pads	Lubricate	3 months	Aerosol Spray	Dry Moly Lubricant	Surface Coverage	207911

Inspection requires checking for visible signs of oil leakage, draining, replacing and adding oil to ensure appropriate oil level requirements. Excessively dirty oil will require fresh replacement. If oil leakage is found to be excessive, refer to appropriate troubleshooting information and perform applicable corrective action. Periodic inspection procedures can be less frequent after first or second scheduled inspections.

Initial oil change requirements include flushing gear boxes with a standard cleaning agent.


ANDREW

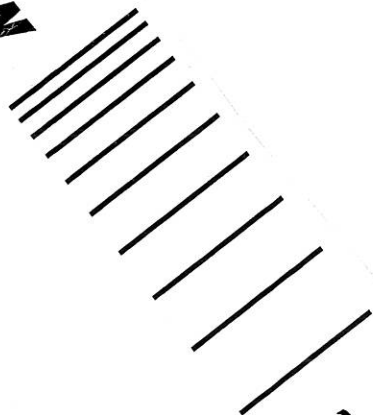


OPERATIONS AND MAINTENANCE MANUAL
237228
4.5M Motorizable Antenna


- DIMENSIONS INDICATED APPLY TO MOTORIZABLE PEDESTAL MOUNT ONLY.

AZIMUTH ANTENNA TRAVEL RANGE	JACKSCREW LENGTH AT AZ=0°
-30° TO +90°	52.51
+60° TO -60°	40.39
+30° TO -90°	26.48

301212					
REVISIONS					
MF	ZONE	REV	DESCRIPTION	DATE	APPROVE
			REL TO PRODUCTION	18 NOV 96	RA

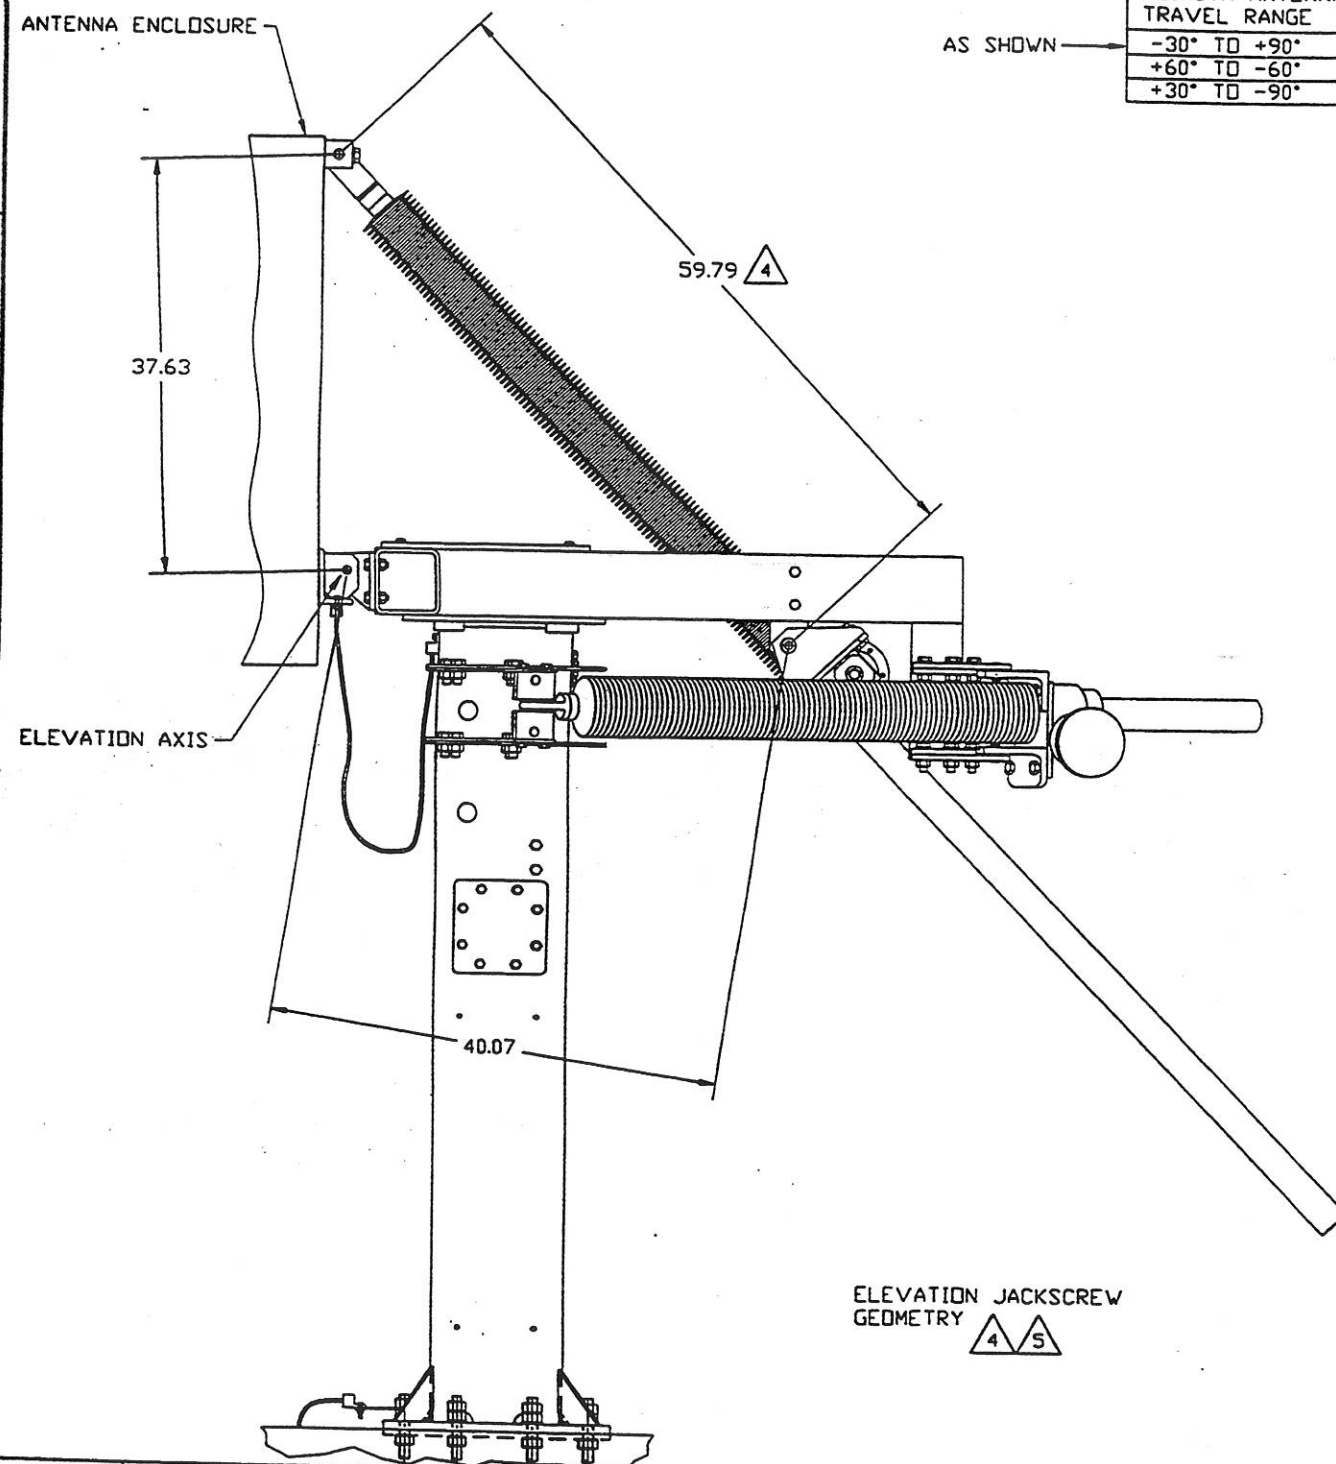


ELEVATION JACKSCREW
GEOMETRY

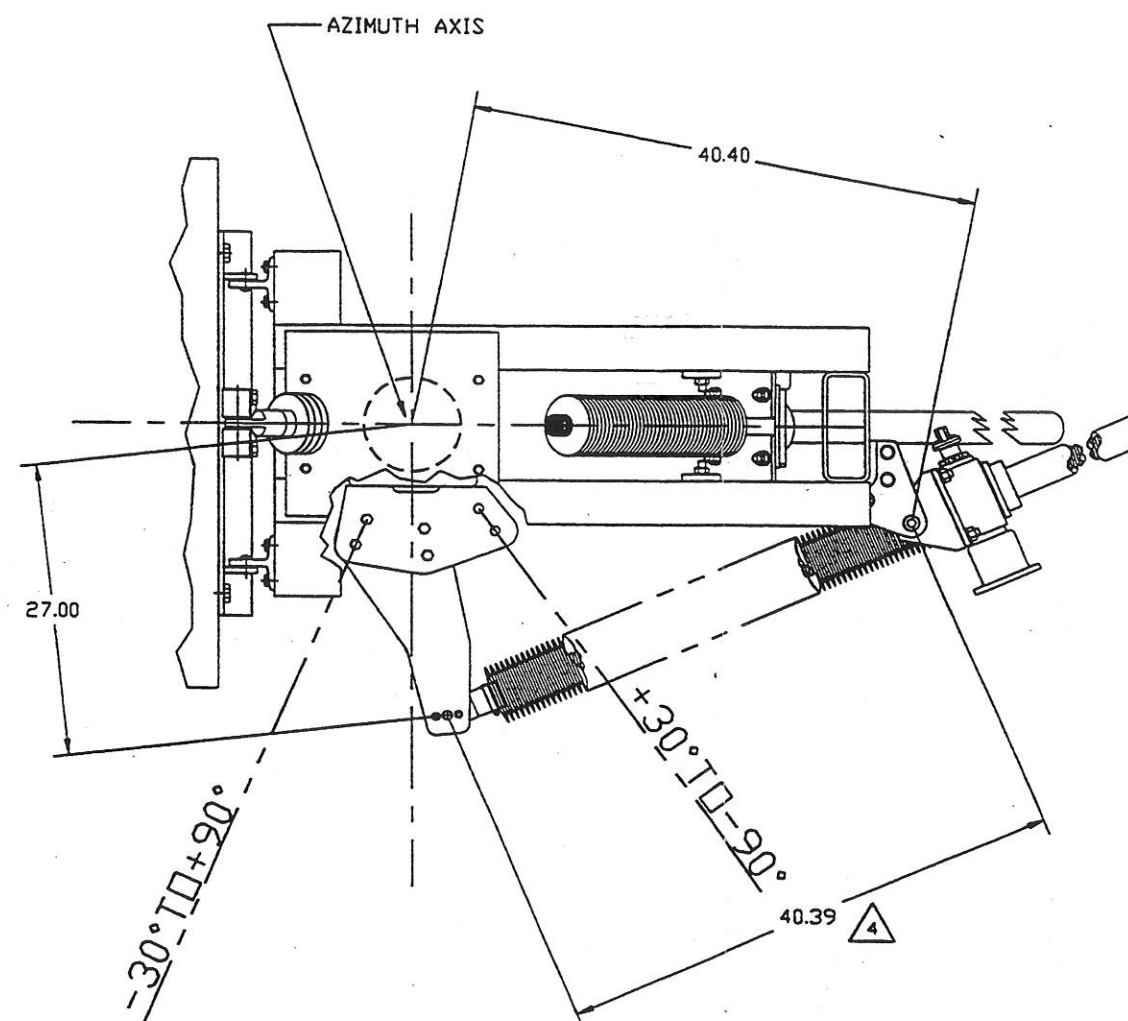


AZIMUTH JACKSCREW
GEOMETRY

MFG PROCESSES	INSPECTION PROCEDURES	TEST PROCEDURES
AUSA SPECIFICATIONS		

					UNLESS OTHERWISE SPECIFIED
					DIMENSIONS ARE IN INCHES
					TOLERANCES
					1 PLACE DECIMALS ± .1
					2 PLACE DECIMALS ± .03
					3 PLACE DECIMALS ± .010
					ANGLE ± 0.5°
					ALL SURFACES
					CORR. TOL. APPLY TO STOCK SIZES
	NEXT ASSY		USED ON		SIMILAR TO
APPLICATION					SUPERSIDES ONE OF

QTY	REV NO	U OF U	ANDREW PART NO.	DESCRIPTION
				PARTS LIST
DRAWN	CJH	SEP 96	 ANDREW CORPORATION 10500 W. 153rd Street! Orland Park, Illinois U.S.A. 60462	
CHECKED				
APPRO CHGRC	SLI	11-96		
APPRO ENGR				
APPRO MFG	SLI	11-96	3.6, 3.7, 4.5, 4.6M ANTENNA JACKSCREW AZIMUTH & ELEVATION GEOMETRY	
APPRO B.C.T.				
			DATE FIRST NO.	SPEC. NO.
			D 84147	301212
			SCALE 1=8"	SHEET
			FIGURE OR 61410	A 1 1

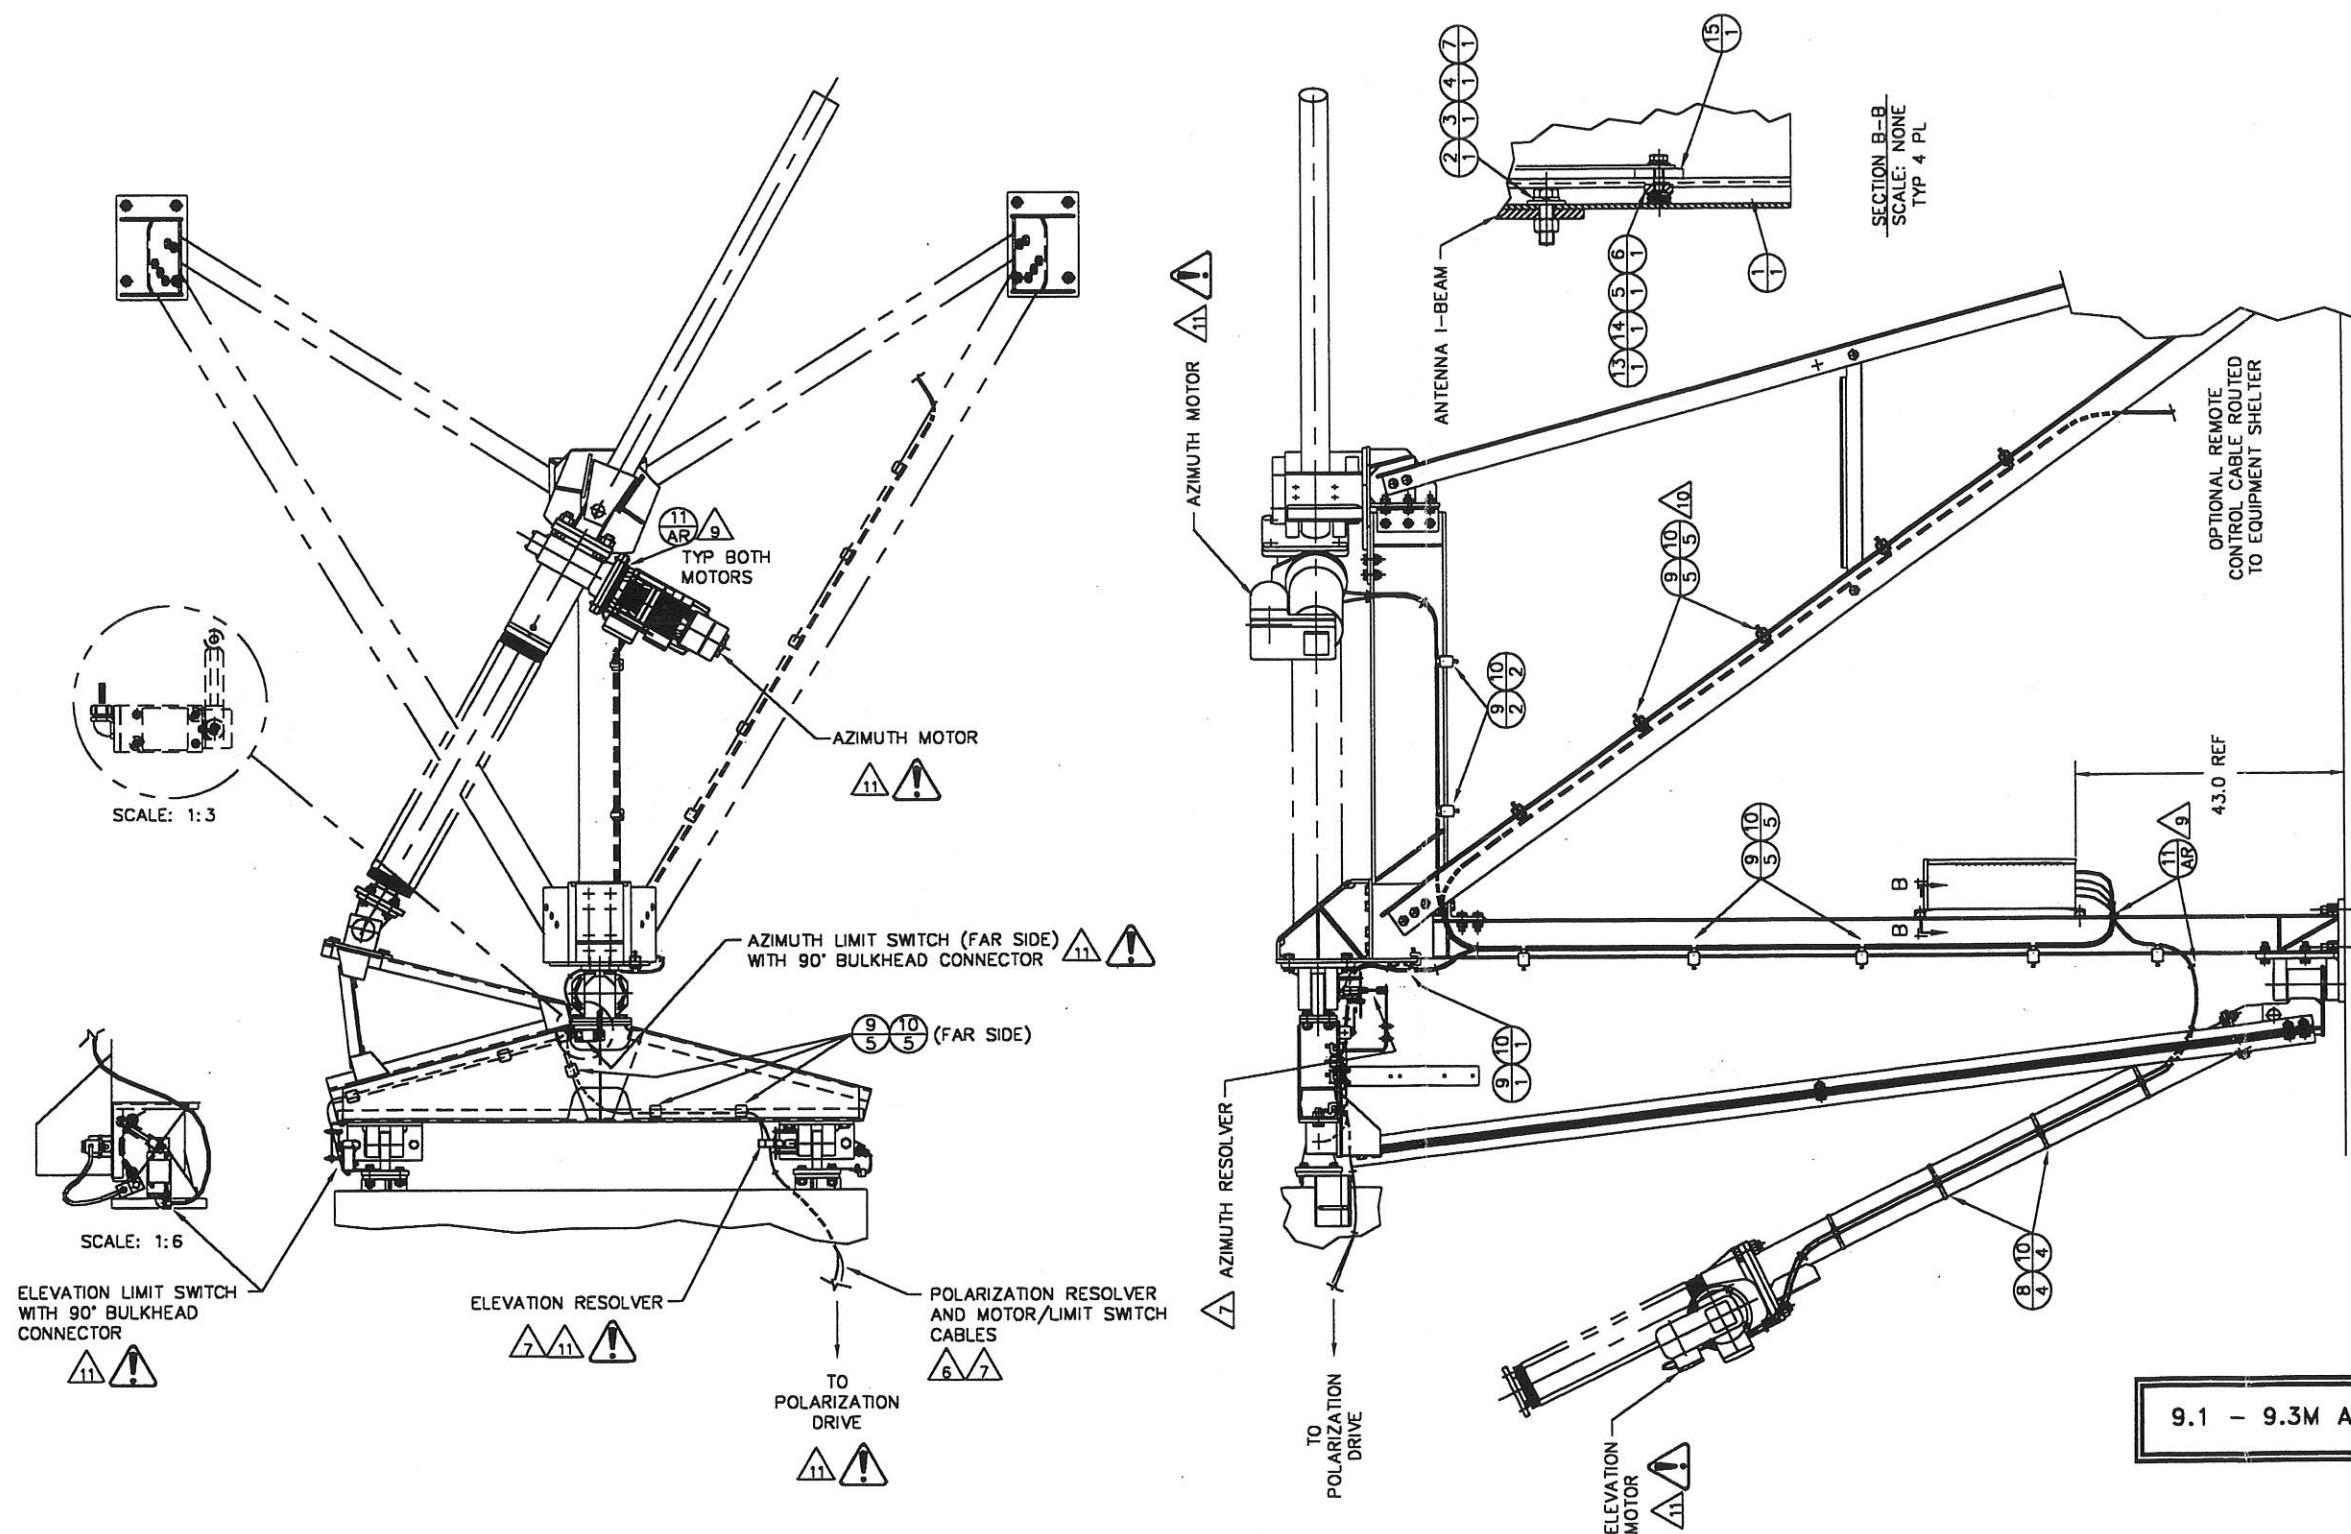



9.1 - 9.3M ANTENNA INSTALLATIONS

4. USE MOUNTING BRACKET (ITEM 2) AS A TEMPLATE AND DRILL (3) Ø.265 HOLES IN TOP HALF OF REFLECTOR FOR MOUNTING IN APPROXIMATE POSITION SHOWN. ATTACH WITH HARDWARE INDICATED.
5. ATTACH UNIVERSAL TERMINAL (ITEM 3) TO MOUNTING BRACKET (ITEM 2). DRILL Ø.265 HOLES IN TOP HALF OF REFLECTOR AND MOUNT FOR ATTACHMENT OF ITEM 3 (DO NOT DRILL THRU HEATER ASSEMBLIES). WHEN DRESSING GROUNDING WIRE (ITEM 12) FROM LIGHTNING ROD TO ANTENNA MOUNT, ALLOW ENOUGH SLACK TO ENSURE FULL RANGE OF ANTENNA MOVEMENT.

Diagram illustrating the connection of the lightning rod to the antenna structure. The diagram shows a central vertical rod with various components labeled with circled numbers:

- 1**: LIGHTNING ROD
- 2**: MOUNTING BRACKET
- 3**: UNIVERSAL TERMINAL
- 4**: GROUND WIRE

The diagram shows the lightning rod (1) connected to the universal terminal (3), which is then connected to the mounting bracket (2) and the ground wire (4).

 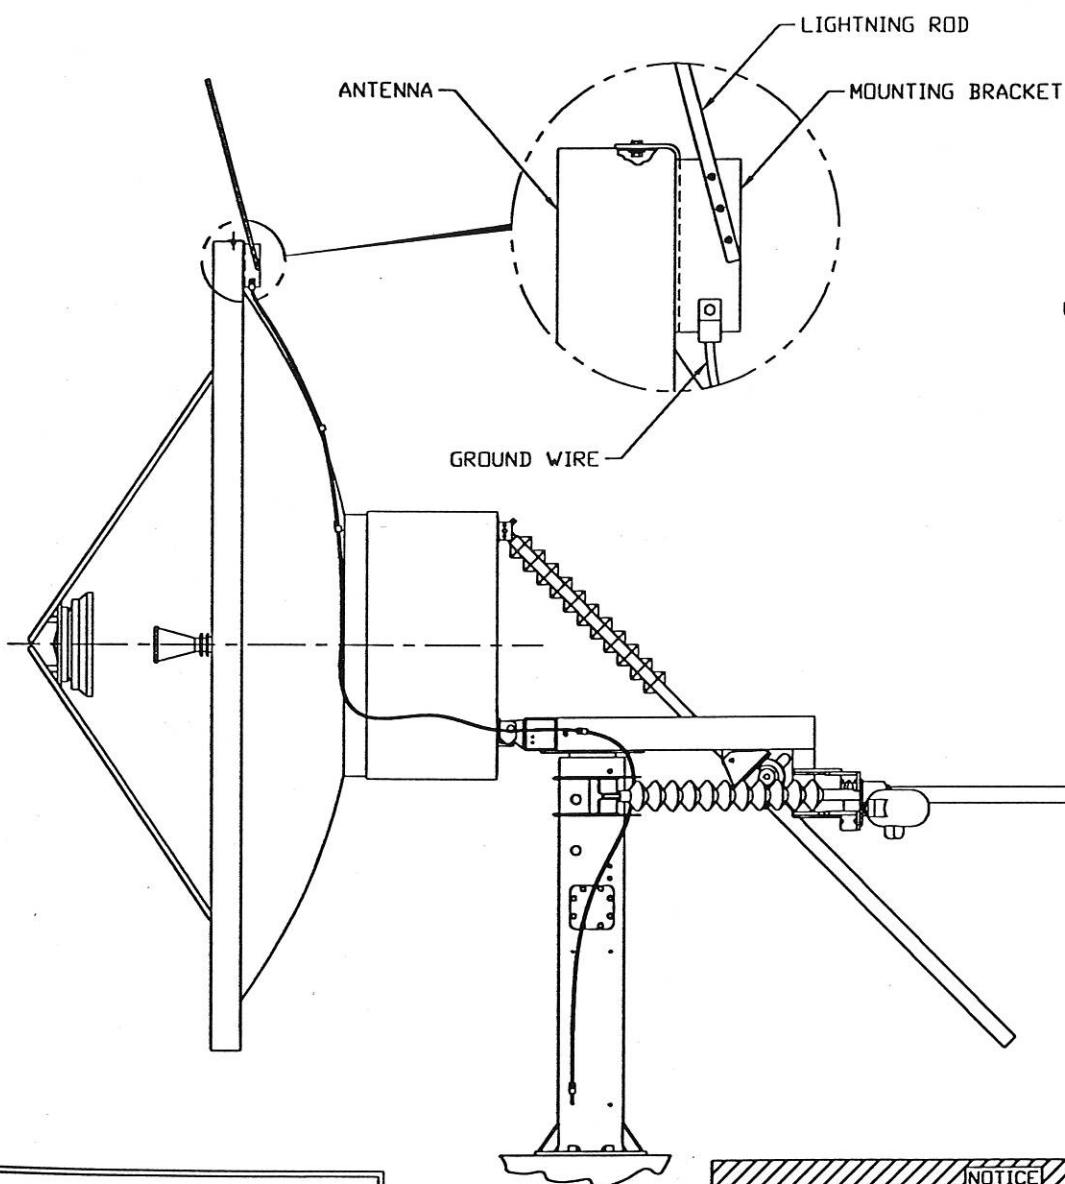

TO CUSTOMER
SUPPLIED GROUND

1	12	EA	209147		GROUNDING WIRE
8	11	EA	9999-57		.25-20UNC-2B HEX NUT
8	10	EA	9974-15		.25 SPLIT LOCKWASHER
8	9	EA	9997-42		.25 FLAT WASHER
8	8	EA	9963-150		.25-20UNC-2Ax.875LG HHCS
3	7	EA	9998-53		#10-32UNF-2B HEX NUT
3	6	EA	9974-68		#10 SPLIT LOCKWASHER
3	5	EA	9997-93		#10 FLAT WASHER
3	4	EA	9972-59		#10-32UNF-3Ax1.25LG SHCS
5	3	EA	46409-2		UNIVERSAL TERMINAL
1	2	EA	209138		MOUNTING BRACKET
1	1	EA	209139		LIGHTNING ROD
QTY	ITEM NO	U OF M	ARCHIVE PART NO.		DESCRIPTION

MOUNT CONFIGURATION & TYPICAL CABLE ROUTING

MFG PROCESSES	INSPECTION PROCEDURES	TEST PROCEDURES
AUSA SPECIFICATIONS		

NOTICE

"THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA REQUIRES QUALIFIED, EXPERIENCED PERSONNEL. ANDREW INSTALLATION INSTRUCTION HAVE BEEN WRITTEN AND ILLUSTRATED FOR SUCH INSTALLATION PERSONNEL. ANTENNA SYSTEMS SHOULD BE INSPECTED ONCE A YEAR BY QUALIFIED PERSONNEL TO VERIFY PROPER INSTALLATION, MAINTENANCE AND CONDITION OF EQUIPMENT. ANDREW DISCLAIMS ANY LIABILITY OR RESPONSIBILITY FOR THE RESULTS OF IMPROPER OR UNSAFE INSTALLATION OR MAINTENANCE PRACTICES."

NOTES: These drawings and specifications are the property of AMSCOR CORPORATION. All information contained herein which is not known generally in the field of AMSCOR shall be confidential except to any extent to which it is established to have been known previously from sources other than AMSCOR. These drawings and specifications may not be reproduced, copied or used in the manufacture or sale of equipment without written permission.

				UNLESS OTHERWISE SPECIFIED
				DIMENSIONS ARE IN INCHES
				<u>TOLERANCES</u>
				1 PLACE DECIMALS ± .1
				2 PLACE DECIMALS ± .03
				3 PLACE DECIMALS ± .010
				ANGLE ± 0.5°
				ALL SURFACES
				OMITTED APPLY TO STOCK SIZE
NEXT ASSY		USED ON		SIMILAR TO
APPLICATION				SUPPLEMENTARY ONLY IF

GRAN	JFM	21JUN88
Q-CODE		
APPS CHRG	JGJ	31AUG88
APPS CHRG	JLH	31AUG88
APPS MFG		
APPS B.C.		

ANDREW ANDREW CORPORATION
2701 Mayhill Road
Denton, Texas U.S.A. 76208

3.6, 3.7, 4.5, & 4.6 METER ESA LIGHTNING ARRESTOR INSTALLATION DRAWING



DATE	FROM NO.	QWED, NO.
D	84147	239150

DATE	1-18					DATE	
PAGE OF	614	NEW	A				

PEDESTAL MOUNT CONFIGURATION
3.6M SHOWN FOR CLARITY ONLY

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING FOR AMS Y14.5M-1982

DWG NO.		239150		REV		1	
REVISIONS							
MF	ZONE	REV	DESCRIPTION			DATE	APPROVED
			REL TO PRODUCTION			06 APR 99	JEK

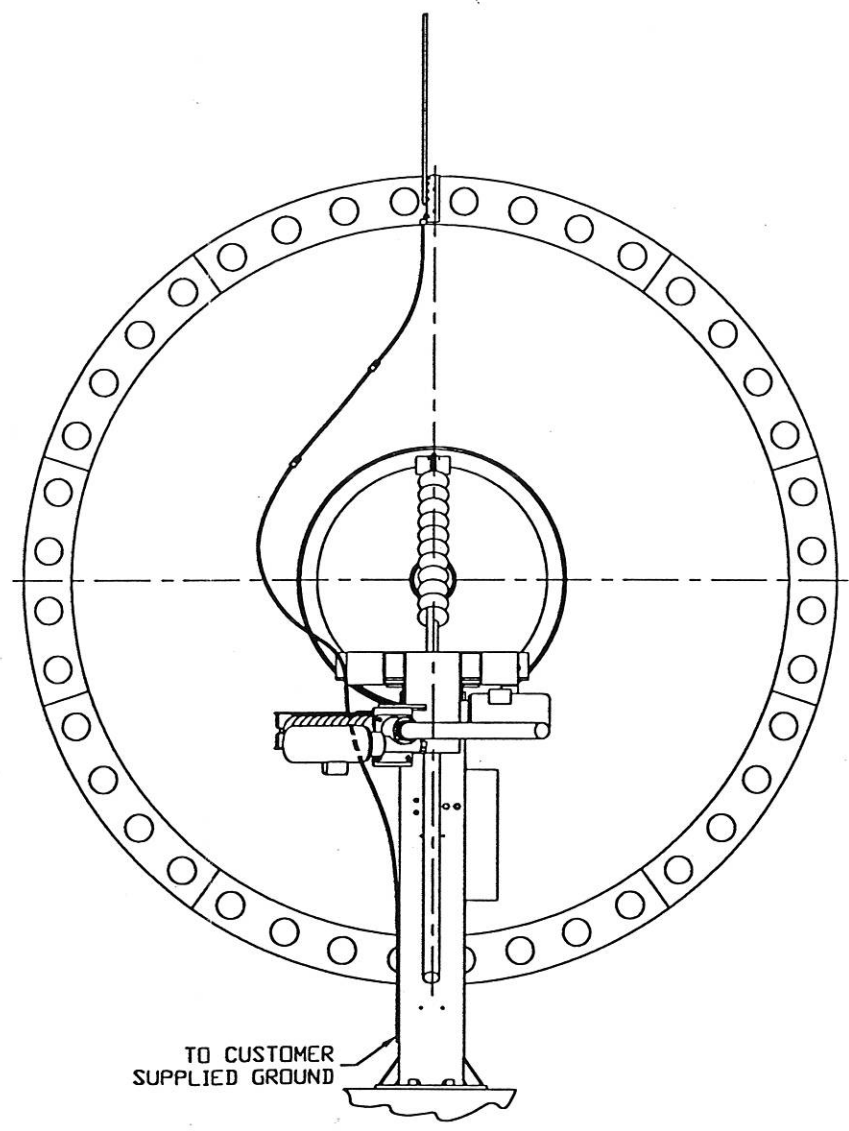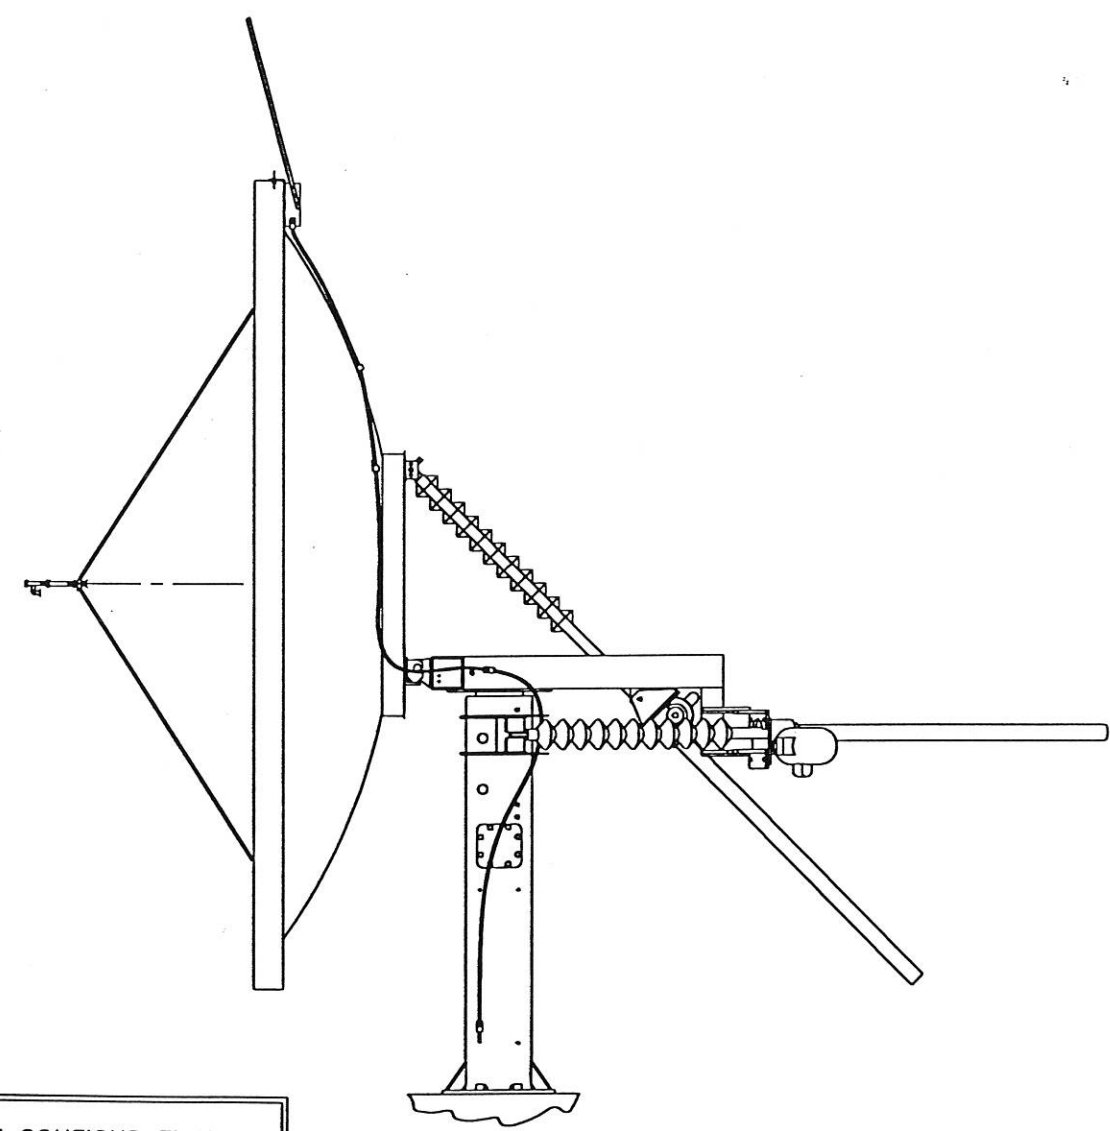

TO CUSTOMER
SUPPLIED GROUND

MOUNT CONFIGURATION &
TYPICAL CABLE ROUTING

MFG PROCESSES	INSPECTION PROCEDURES	TEST PROCEDURES
AUSA SPECIFICATIONS		

NOTES: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ARRESTOR shall be confidential except to any extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used as the basis for the manufacture or sale of equipment without written permission.

CAD FILE NO:
ES04962

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	
TOLERANCES	
1 PLACE DECIMALS ± .1	
2 PLACE DECIMALS ± .03	
3 PLACE DECIMALS ± .010	
ANGLE ± 0.5°	
ALL SURFACES	
CONC. TOL. APPLY TO STOCK SIZE	
SIMILAR TO	
SUPERSEDES ONE OF	
NEXT ASSY	USED ON
APPLICATION	



MATERIAL	
FINISH	

QTY	ITEM NO	U OF M	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
DRW	JEK	25MAR99		
CHKD				
APPS ENGR	SLI	4/99		
APPS ENGR				
APPS MFG	SJA	4/99		
APPS S.C.				
ANDREW CORPORATION				2701 Mayfield Road Denton, Texas U.S.A. 76208
3.6, 3.7, 4.5, & 4.6 METER ESA LIGHTNING ARRESTOR INSTALLATION DRAWING				
SIZE	FROM NO.	FILE NO.		
D	84147	239150		
SCALE	1:16			
PROD. OR	61114	DATE	A	1
SHEET 2 OF 5				

NOTES: (UNLESS OTHERWISE SPECIFIED)
 1. REMOVE ALL BURRS AND SHARP EDGES
 2. DIMENSIONS APPLY BEFORE PLATING
 3. INTERPRET DRAWING PER ANSI Y14.5M-1994

PEDESTAL MOUNT CONFIGURATION
 SHOWN WITH RIBBED REFLECTOR
 4.6M SHOWN FOR CLARITY ONLY

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
1	REL TO PRODUCTION	06 APR 99	JEK

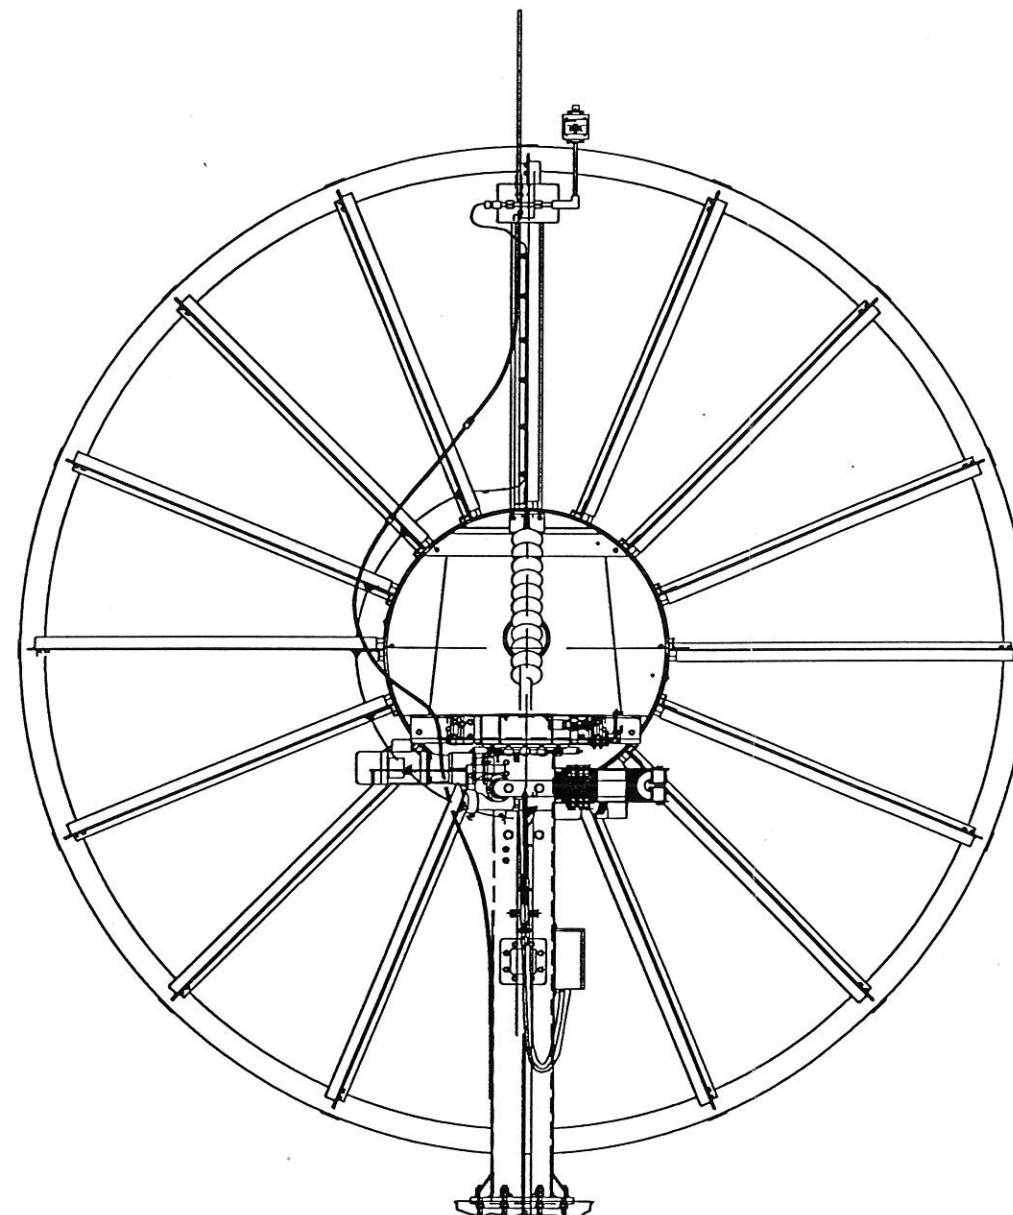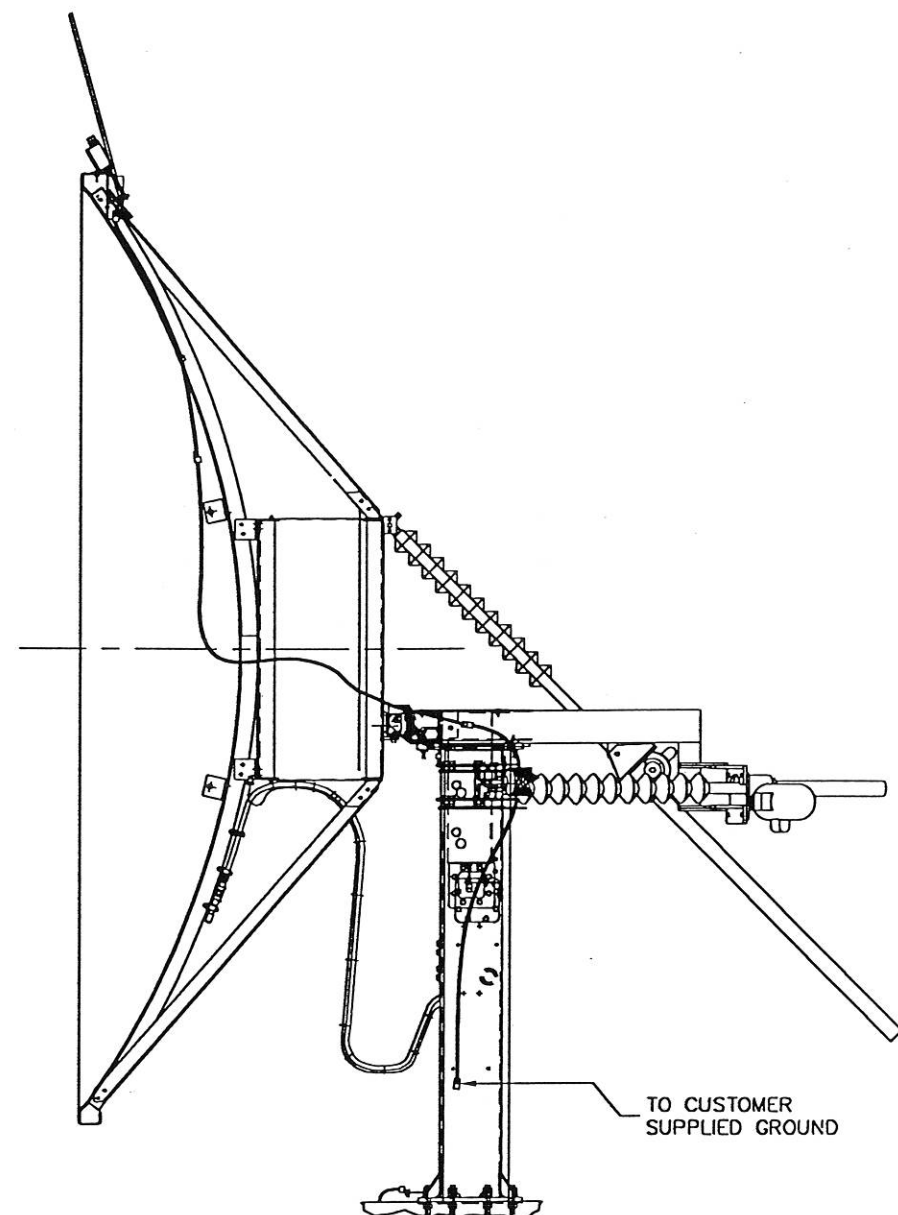

RIBBED REFLECTOR
 (REAR VIEW)



MOUNT CONFIGURATION &
 TYPICAL CABLE ROUTING

MATERIAL		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		IMPERIAL		PARTS LIST	
FINISH		TOLERANCES		DRAWN BY: JEK		ANDREW CORPORATION ORLAND PARK, IL 60462 U.S.A.	
		1 PLACE DECIMALS ± 0.1		APPROVED BY: SM		3.6, 3.7, 4.5, & 4.6 METER ESA	
		2 PLACE DECIMALS ± 0.03		APPROVED BY: SJG		LIGHTNING ARRESTOR	
		3 PLACE DECIMALS ± 0.010		APPROVED BY:		INSTALLATION DRAWING	
		ANGLES ± .5		APPROVED BY:		SHEET 3 of 5	
		ALL SURFACES		USED ON:		SCALE 1/16"=1"	
NOTICE: These drawings and specifications are the proprietary property of ANDREW CORPORATION and may be used only for the specific purpose authorized in writing by Andrew.				DATE CODE: 84147		DOCUMENT NO.: 239150	
				CHG FILE NO. ES04963			

PEDESTAL MOUNT CONFIGURATION
 SHOWN WITH RIBBED REFLECTOR
 4.5M TRIPOD SHOWN FOR CLARITY ONLY

NOTES: (UNLESS OTHERWISE SPECIFIED)
 1. REMOVE ALL BURRS AND SHARP EDGES
 2. DIMENSIONS APPLY BEFORE PLATING
 3. INTERPRET DRAWING PER ANSI Y14.3M-1994

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
	REL TO PRODUCTION	06/06/99	JEK

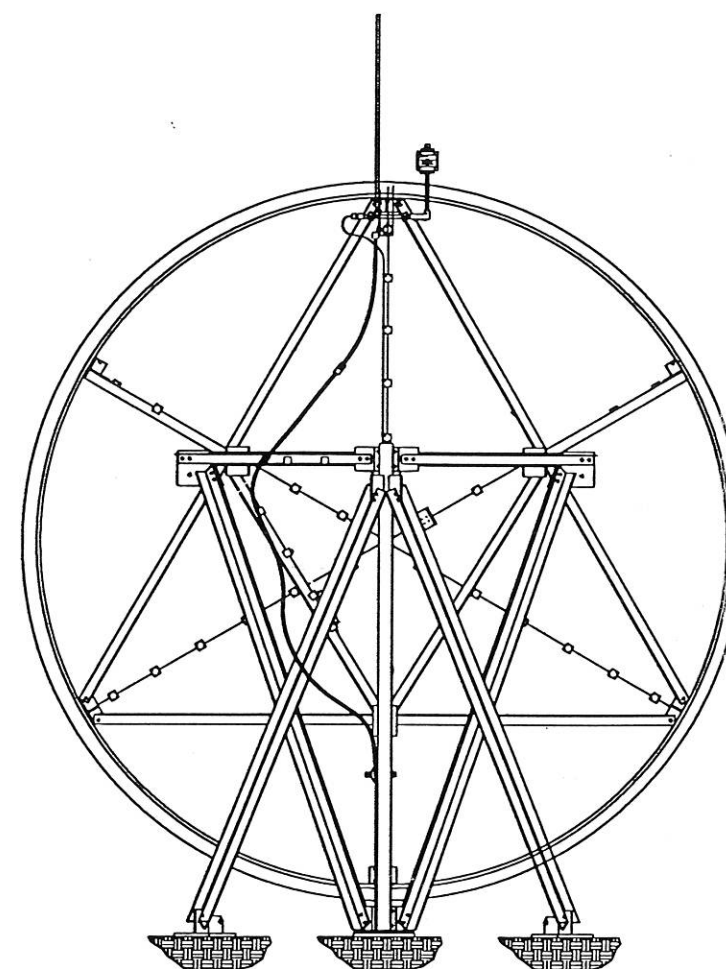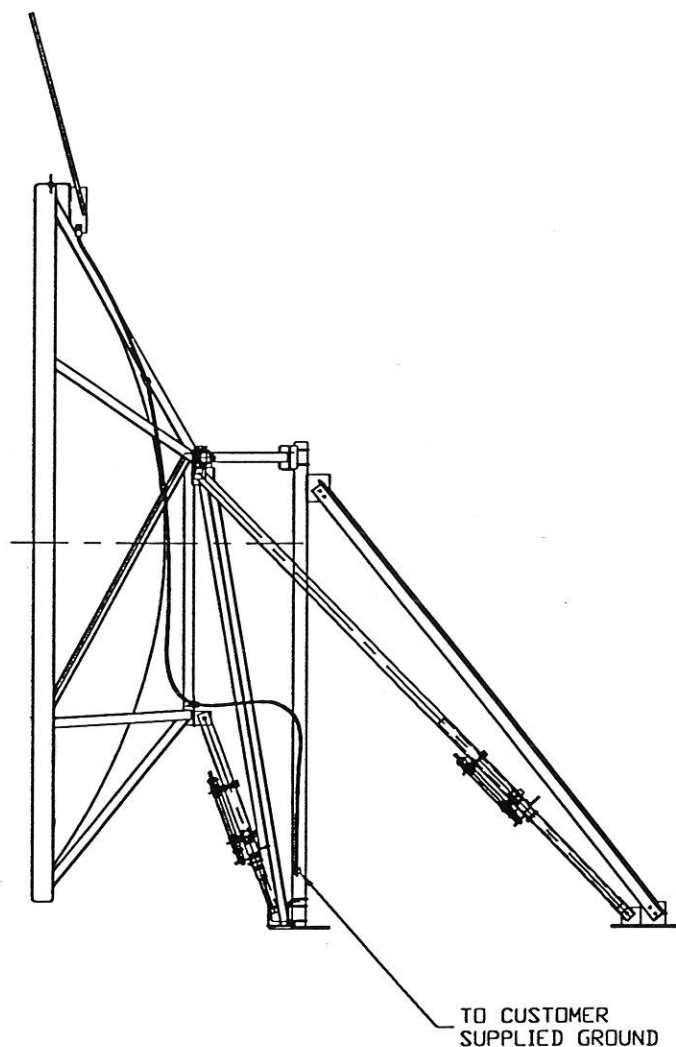

MOUNT CONFIGURATION &
 TYPICAL CABLE ROUTING

QTY	ITEM NO.	U OF U	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
MATERIAL		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		
FINISH		TOLERANCES 1 PLACE DECIMALS ± 0.1 2 PLACE DECIMALS ± 0.03 3 PLACE DECIMALS ± 0.010 ANGLES $\pm .5$ ALL SURFACES		
IMPERIAL		DRAWN BY JEK 2810099 APP'D ENG SY 4/97 APP'D MFG ST 4/97 APP'D QA APP'D SUPERVISOR USED ON		
ANDREW ORLAND PARK, IL 60462 U.S.A.		3.6, 3.7, 4.5, & 4.6 METER ESA LIGHTNING ARRESTOR INSTALLATION DRAWING		
DATE CODE D	DATE CODE 04147	DOCUMENT NO. 239150		
Dwg File No. ES04964		SCALE 1/2"=1'	SHEET 4 OF 5	

4.5M PEDESTAL MOUNT CONFIGURATION


MOUNT CONFIGURATION & TYPICAL CABLE ROUTING

MFG PROCESSES	INSPECTION PROCEDURES	TEST PROCEDURES
AUSA SPECIFICATIONS		

TO CUSTOMER
SUPPLIED GROUND

RIBBED REFLECTOR
(REAR VIEW)

					UNLESS OTHERWISE SPECIFIED
					DIMENSIONS ARE IN INCHES
					TOLERANCES
					1 PLACE DECIMALS ± .1
					2 PLACE DECIMALS ± .03
					3 PLACE DECIMALS ± .010
					ANGLE ± 0.5°
					ALL SURFACES
					CORR. TOL. APPLY TO STOCK SIZES
					SIMILAR TO
		NEXT ASSY		USED ON	
		APPLICATION			
		SUPERSEDES ONE OF			

QTY	ITEM NO	S OF S	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
BRASH	JEK	2	24099	 ANDREW CORPORATION 2701 Mayhill Road Denton, Texas U.S.A. 76208
CHECKED				
APPS ENGINE	54	4	35	
APPS ENGINE				
APPS SPEC	54	4	49	
APPS E.C.				3.6, 3.7, 4.5, & 4.6 METER ESA LIGHTNING ARRESTOR INSTALLATION DRAWING
			SIZE / TECH NO.	QTY. NO.
			D 84147	239150
			SCALE NONE	SHEET 5 OF 5
2	PROD. OR	6	117	QTY. A
				1

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING PER ANSI Y14.5M-1982

INSTALLATION INSTRUCTIONS TYPE 207885 ESA ADJUSTMENT KIT

1.0 INTRODUCTION:

- 1.1 TYPE 207885 ESA ADJUSTMENT KIT IS UTILIZED IN CONJUNCTION WITH 3.7/4.6-METRE EARTH STATION ANTENNAS TO ENABLE CONTINUOUS FINE ADJUSTMENT OF AT LEAST 15 DEGREES IN BOTH AZIMUTH AND ELEVATION AXES.
- 1.2 THE ESA ADJUSTMENT KIT INCLUDES A MANUAL ACTUATOR, BASE ANGLE AND REQUIRED MOUNTING HARDWARE FOR EACH ANTENNA AXIS.

READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY

2.0 ESA ADJUSTMENT KIT ASSEMBLY:

- 2.1 REFER TO VIEW 'R' AND FIGURE 1: LOOSELY ATTACH 207882 MANUAL ACTUATOR ASSEMBLY TO EITHER AZIMUTH OR ELEVATION STRUT AS SHOWN USING CLAMP SEGMENTS .25 IN. SCREWS, LOCKWASHERS AND NUTS. POSITION DRAIN HOLE ON ACTUATOR DOWNWARD FOR PROPER WATER DRAINAGE.
- 2.2 ATTACH 202661 BASE ANGLE TO ACTUATOR AS SHOWN USING .50 IN. BOLT, LOCKWASHER AND FLATWASHER. NOTE: AVOID EXCESSIVE TORQUE ON MOUNTING HARDWARE.
- 2.3 ENSURE LOCKING STRUT SUPPORT SET SCREW IS FIRMLY TIGHTENED ON STRUT ASSEMBLY. REMOVE TWO INDICATED STRUT SUPPORT SET SCREWS AND ATTACH BASE ANGLE TO CORRESPONDING STRUT SUPPORT USING SUPPLIED .50 IN. CLAMPING NUTS AND PREVIOUSLY REMOVED STRUT SUPPORT SET SCREWS AS SHOWN.
- 2.4 SECURELY TIGHTEN REMAINING MOUNTING HARDWARE TO ACHIEVE CLAMPING FORCE.
- 2.5 REPEAT ENTIRE PROCEDURE FOR REMAINING STRUT ASSEMBLY.

3.0 ANTENNA AZIMUTH/ELEVATION ADJUSTMENT PROCEDURE:

CAUTION

AZIMUTH BRAKES HAVE BEEN FACTORY SET. DO NOT READJUST BRAKES TO FACILITATE USE OF ACTUATORS.

- 3.1 ENSURE MANUAL ACTUATOR AND LOCKING STRUT SUPPORT SET SCREW ARE SECURELY ATTACHED TO STRUT ASSEMBLY. LOOSEN TWO INDICATED STRUT SUPPORT SET SCREWS AND TIGHTEN CORRESPONDING CLAMPING NUTS. LOOSEN LOCKING STRUT SUPPORT SET SCREW AND PERFORM AZIMUTH/ELEVATION ADJUSTMENT. NOTE: STRUT SUPPORT SET SCREWS SHOULD NOT CONTACT STRUT ASSEMBLY DURING ADJUSTMENT PROCEDURE.
- 3.2 UPON COMPLETION OF ANTENNA AZIMUTH/ELEVATION ADJUSTMENTS, SECURELY TIGHTEN LOCKING STRUT SUPPORT SET SCREW, TWO REMAINING STRUT SUPPORT SET SCREWS AND CORRESPONDING CLAMPING NUTS.


CAUTION

ENSURE ALL STRUT SUPPORT SET SCREWS ARE LOOSENED BEFORE ATTEMPTING TO PERFORM ANTENNA AZIMUTH/ELEVATION ADJUSTMENTS AND FIRMLY TIGHTENED ON STRUT ASSEMBLY UPON COMPLETION OF ANTENNA AZIMUTH/ELEVATION ADJUSTMENTS.

4.0 ESA ADJUSTMENT KIT REMOVAL:


- 4.1 REMOVE MANUAL ACTUATOR ASSEMBLY BY FIRST REMOVING HARDWARE SECURING ACTUATOR TO BASE ANGLE AND THEN REMAINING CLAMP SEGMENTS WITH CORRESPONDING HARDWARE. NOTE: BASE ANGLE REMAINS ATTACHED TO STRUT SUPPORT FOR FUTURE USE.
- 4.2 STORE MANUAL ACTUATOR ASSEMBLY AND CORRESPONDING HARDWARE IN DRY AREA FOR FUTURE USE.

IF INTERFERENCE OCCURS WITH SET SCREW AND ACTUATOR BOLT, REMOVE SET SCREW. AFTER ANTENNA ADJUSTMENT & REMOVAL OF ACTUATOR ASSEMBLY REPLACE THE SET SCREW.

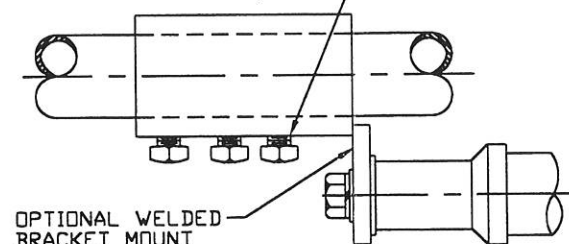

OPTIONAL WELDED BRACKET MOUNT

ALTERNATE MOUNTING

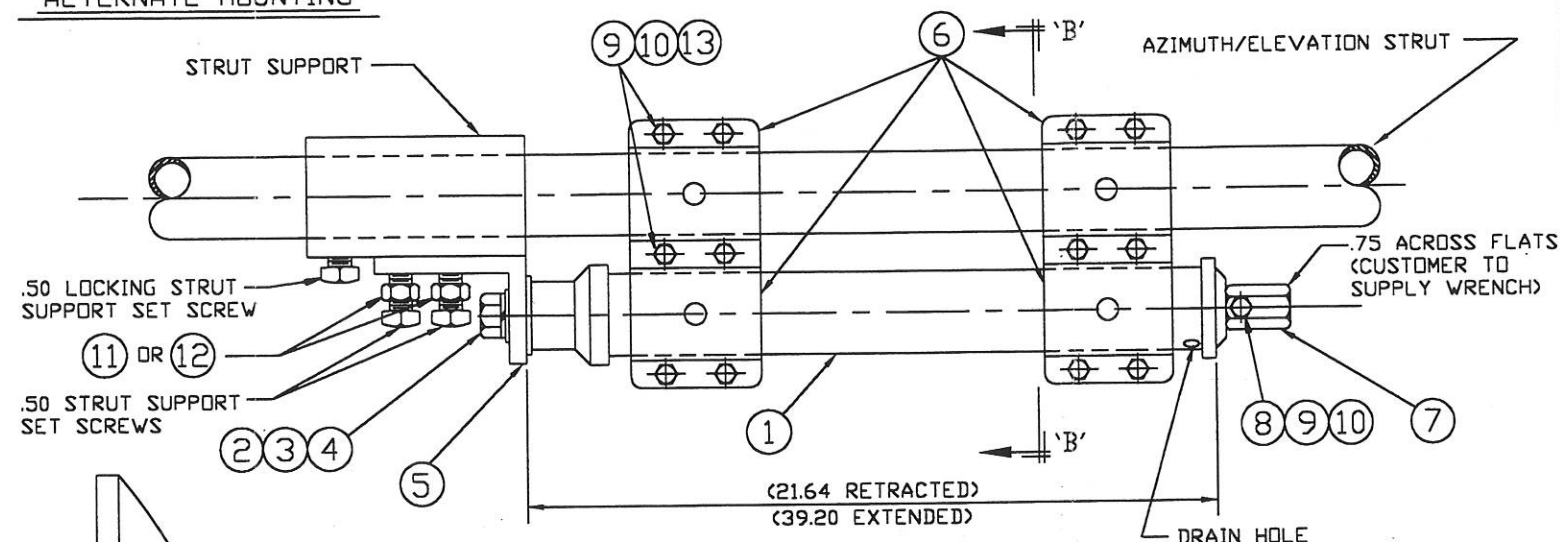

VIEW 'R'

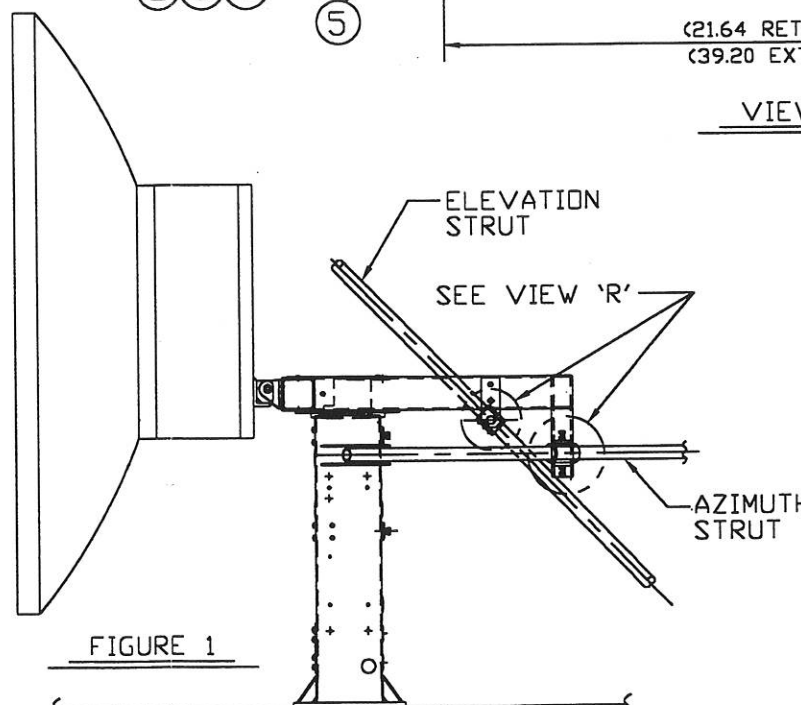


FIGURE 1

NOTE:
THERE ARE (2) SETS OF ACTUATORS AND MOUNTING HARDWARE PER EACH 207885 KIT.

QTY	ITEM NO	U OF M	ANDREW PART NO.	DESCRIPTION
12	13	EA	9963-89	.25-20UNC X 1.0 LG. HHMS
2	12	EA	9999-109	.50-13UNC HEX NUT (GALV)
2	11	EA	9999-61	.50-13UNC HEX NUT (SST)
13	10	EA	9974-15	.25 LOCKWASHER
13	9	EA	9999-57	.25-20UNC HEX NUT (SST)
1	8	EA	9963-76	.25-20UNCx1.25LG HHMS
1	7	EA	207881	.75 HEX ADAPTER
8	6	EA	207883	CLAMP SEGMENT
1	5	EA	202661	BASE ANGLE
1	4	EA	9997-65	.50 FLATWASHER (SST)
1	3	EA	9974-64	.50 LOCKWASHER (SST)
1	2	EA	9963-318	.50-20UNF x 1.50LG HHMS (SST)
1	1	EA	207882	MANUAL ACTUATOR

PARTS LIST

QTY	ITEM NO	U OF M	ANDREW PART NO.	DESCRIPTION
12	13	EA	9963-89	.25-20UNC X 1.0 LG. HHMS
2	12	EA	9999-109	.50-13UNC HEX NUT (GALV)
2	11	EA	9999-61	.50-13UNC HEX NUT (SST)
13	10	EA	9974-15	.25 LOCKWASHER
13	9	EA	9999-57	.25-20UNC HEX NUT (SST)
1	8	EA	9963-76	.25-20UNCx1.25LG HHMS
1	7	EA	207881	.75 HEX ADAPTER
8	6	EA	207883	CLAMP SEGMENT
1	5	EA	202661	BASE ANGLE
1	4	EA	9997-65	.50 FLATWASHER (SST)
1	3	EA	9974-64	.50 LOCKWASHER (SST)
1	2	EA	9963-318	.50-20UNF x 1.50LG HHMS (SST)
1	1	EA	207882	MANUAL ACTUATOR

ANDREW CORPORATION
10500 W. 153rd Street
Orland Park, Illinois U.S.A. 60462

MANUAL ACTUATOR INSTALLATION DWG.

SIZE	FROM NO.	DWG. NO.
D	84147	239049
SCALE	FULL	SHEET
PROJ. OR	6114	1

NOTICE

THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA REQUIRES QUALIFIED, EXPERIENCED PERSONNEL. ANDREW INSTALLATION INSTRUCTIONS HAVE BEEN WRITTEN AND ILLUSTRATED FOR SUCH INSTALLATION PERSONNEL. ANTENNA SYSTEMS SHOULD BE INSPECTED ONCE A YEAR BY QUALIFIED PERSONNEL TO VERIFY PROPER INSTALLATION, MAINTENANCE AND CONDITION OF EQUIPMENT. ANDREW DISCLAIMS ANY LIABILITY OR RESPONSIBILITY FOR THE RESULTS OF IMPROPER OR UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except to any extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used in the manufacture or sale of apparatus without written permission.

CAD FILE NO:
ES023F1C

MFG	INSPECTION	TEST
PROCESSES	PROCEDURES	PROCEDURES
AUSA SPECIFICATIONS		

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING PER AMS Y14.5M-1982

16 19 4
FOR 3.7M ANTENNAS
(2 WASHERS PER BOLT,
ONE EACH ON REFLECTOR
AND MOUNT SIDE)
OR

20 21 4
FOR 4.5 & 4.6M ANTENNAS
(1 WASHER PER BOLT, ON
REFLECTOR SIDE)

SUPPORT PLATE

THRUST BLOCK

ACCESS PLUG

FOUNDATION
GROUNDING
CABLE

FOUNDATION PAD

JAM NUTS
(REFER TO NOTE 6H)

MFG	INSPECTION	TEST
PROCESSES	PROCEDURES	PROCEDURES
AUSA SPECIFICATIONS		

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except to the extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used as the basis for the manufacture or sale of apparatus without written permission.


CAD FILE NO:
ES052E2C

				UNLESS OTHERWISE SPECIFIED
				DIMENSIONS ARE IN INCHES
				<u>TOLERANCES</u>
				1 PLACE DECIMALS ± .1
				2 PLACE DECIMALS ± .03
				3 PLACE DECIMALS ± .010
				ANGLE ± 0.5°
				ALL SURFACES
				CON. TOL. APPLY TO STOCK SIZES
				SIMILAR TO
				SUPERSEDED DWG. OF


QTY	ITEM NO	U OF M	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
DRW	RWB	16AUG88		
CHECKED				
APPRO DSG	RWS	26AUG88		
APPRO DSG				
APPRO MFG				
APPRO G.C.				
ANDREW CORPORATION 10500 W. 153rd Street Orland Park, Illinois U.S.A. 60462				
3.7/4.5/4.6 METRE MOTORIZABLE MOUNT INSTALLATION DRAWING				
SIZE	FRSH NO.	DWG NO.		
D	84147	239106		
SCALE	1/4"			
PROD. OR	6114	DSR	A	1

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING PER ANSI Y14.5M-1982


REVISEMENTS					DATE	APPROVED
WF	ZONE	REV	DESCRIPTION			
			REL TO PRODUCTION		29AUG88	WF
		A	P/N 204754A WAS 204754.			
			DCN D012.63(B)		BMAR97	SLI, KLP JP, SJA

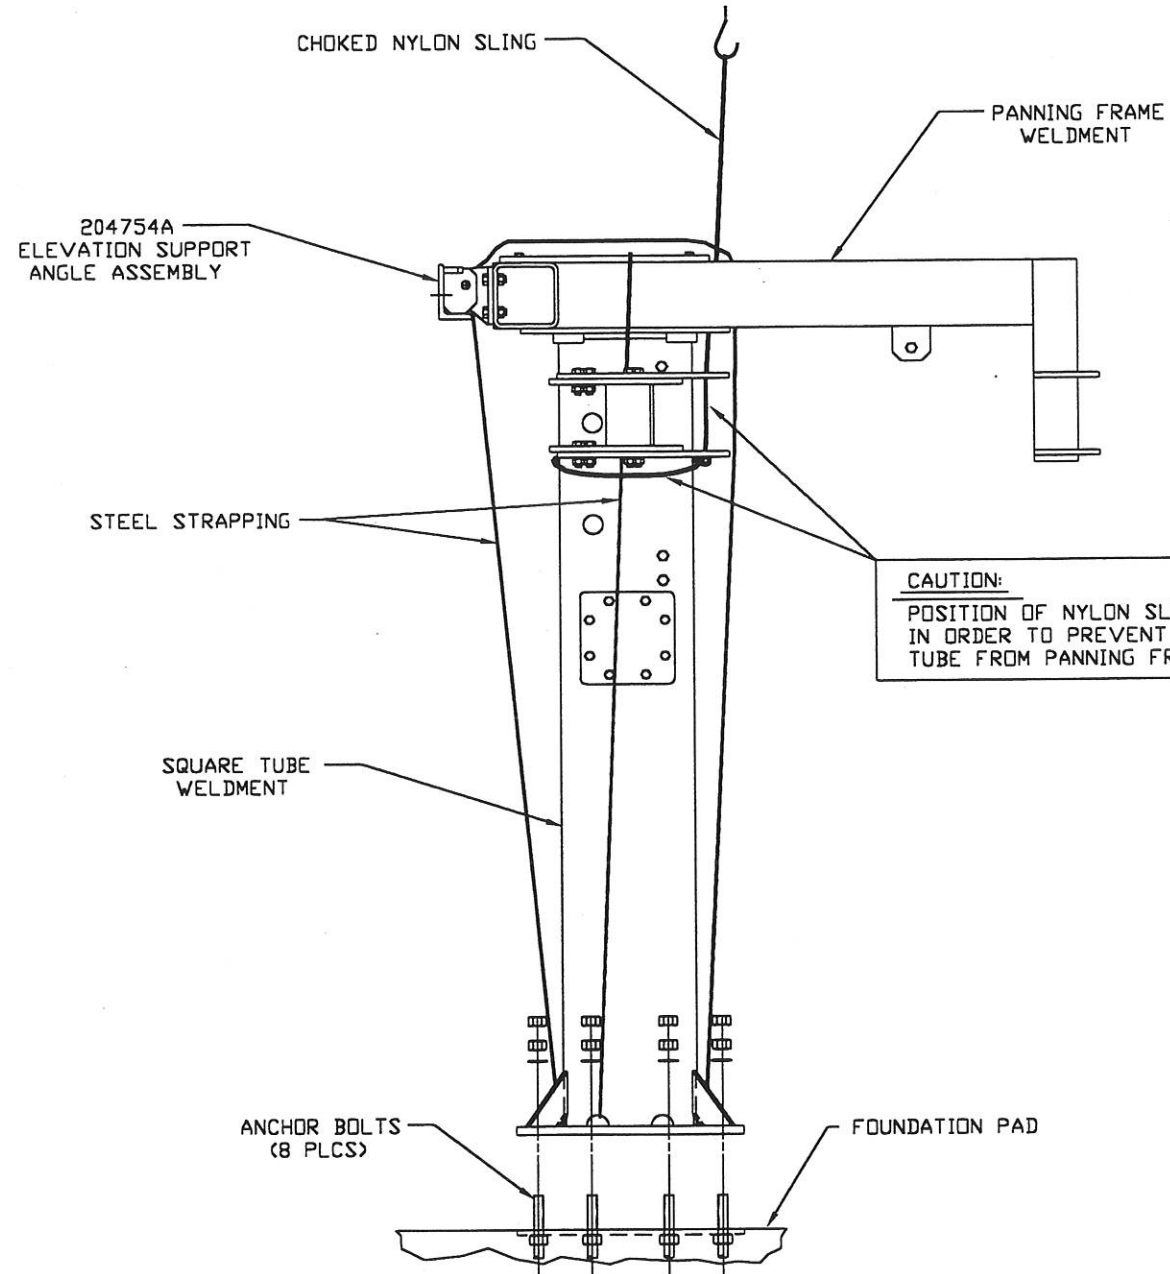


CAUTION:
POSITION OF NYLON SLING SHOWN IS REQUIRED
IN ORDER TO PREVENT DISENGAGEMENT OF SQUARE
TUBE FROM PANNING FRAME WHILE LIFTING.

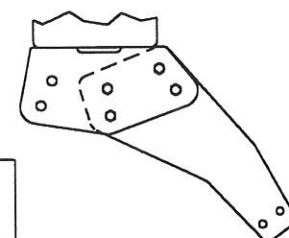

LEFT POSITION
-90° TO +30°

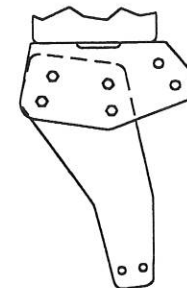

CENTER POSITION
-60° TO +60°

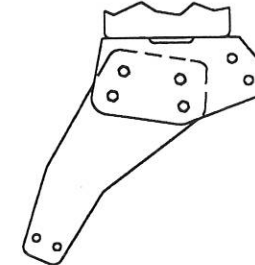

RIGHT POSITION
-30° TO +90°

VIEW 'R'

FIGURE 1

MFG PROCESSES	INSPECTION PROCEDURES	TEST PROCEDURES
AUSA SPECIFICATIONS		

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except to the extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used as the basis for the manufacture or sale of apparatus without written permission.

CAD FILE NO:
ES052E3A

				UNLESS OTHERWISE SPECIFIED
				DIMENSIONS ARE IN INCHES
				<u>TOLERANCES</u>
				1 PLACE DECIMALS ± .1
				2 PLACE DECIMALS ± .03
				3 PLACE DECIMALS ± .010
				ANGLE ± 0.5°
				ALL SURFACES
				CONC. TO APPLY TO STOCK SIZES
				SIMILAR TO
				SUPPSESSES DWG OF

QTY	ITEM NO	U OF M	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
DESIGN	RWB	28AUG88	ANDREW CORPORATION 10500 W. 153rd Street Orland Park, Illinois U.S.A. 60462	
CHECKED			ANDREW	
APPROV'D	RWS	28AUG88	3.7/4.5/4.6 METRE MOTORIZABLE MOUNT INSTALLATION DRAWING	
APPROV'D			SIZE FROM NO. D 84147 Dwg. NO. 239106	
APPROV'D			SCALE 1/4" = 1'-0" SHEET 3	
APPROV'D			PROD. OR 6114 DISTR A: 111	

8

7

6

5

4

3

239318

1

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING PER AMS Y14.5M-1982

GENERAL

READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW THE SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.

CAUTION

THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE ANTENNA AND/OR OTHER PROPERTY AND POSSIBLE INJURY TO PERSONNEL.

NOTICE

THIS INDICATES INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.

UNPACKING

CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENTS SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR SHORTAGE WILL PREVENT SATISFACTORY ASSEMBLY, INSTALLATION, AND OPERATION OF THE ANTENNA.

NOTICE

THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA REQUIRES QUALIFIED, EXPERIENCED PERSONNEL. ANDREW INSTALLATION INSTRUCTIONS HAVE BEEN WRITTEN AND ILLUSTRATED FOR SUCH INSTALLATION PERSONNEL. ANTENNA SYSTEMS SHOULD BE INSPECTED ONCE A YEAR BY QUALIFIED PERSONNEL TO VERIFY PROPER INSTALLATION, MAINTENANCE AND CONDITION OF EQUIPMENT. ANDREW DISCLAIMS ANY LIABILITY OR RESPONSIBILITY FOR THE RESULTS OF IMPROPER OR UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.

TOOLS RECOMMENDED FOR PROPER INSTALLATION

QTY	DESCRIPTION
2	7/16" OPEN END OR COMBINATION WRENCH
2	1/2" OPEN END OR COMBINATION WRENCH
2	7/8" OPEN END OR COMBINATION WRENCH
2	1 1/16" OPEN END OR COMBINATION WRENCH
2	1 1/4" OPEN END OR COMBINATION WRENCH
2	1 7/16" OPEN END OR COMBINATION WRENCH

CAUTION

BEFORE BEGINNING, SHUT OFF RF POWER.
WHEN THE ANTENNA IS TRANSMITTING, SEVERE EYE INJURY OR INJURY TO OTHER PARTS OF THE BODY CAN RESULT FROM EXPOSURE TO RADIO FREQUENCY ENERGY. THE ANTENNA MUST BE TURNED OFF BEFORE ENTERING THE AREA IN FRONT OF THE REFLECTOR AND NEAR FEED.

NOTICE

REFLECTOR MOUNTING HARDWARE IS LOCATED IN APPROPRIATE REFLECTOR HARDWARE KIT.

TENSIONING PROCEDURES A-325 HARDWARE

1. LUBRICATE BOLT THREADS WITH STICK WAX (ITEM 22) TO REDUCE FRICTION. DO NOT ALLOW WAX UNDER FLAT WASHER.

2. AFTER CONNECTIONS ARE COMPLETED, TIGHTEN BOLTS UNTIL SURFACES ARE JOINED AND NUTS ARE SNUG, I.E., FULL EFFORT OF PERSON USING ORDINARY SPUD WRENCH. DO NOT PROCEED WITH STEPS 3 & 4 BELOW UNLESS THE CONNECTION IS FINAL. IF BOLTS ARE LOOSENED AFTER STEPS 3 AND 4, DISCARD AND REPLACE WITH NEW HARDWARE. REPEAT ALL STEPS.

3. MARK NUTS AND ENDS OF BOLTS WITH STRAIGHT LINE. SEE FIGURE C.

4. TIGHTEN NUTS FURTHER WITH EXTRA LONG WRENCH OR POWER WRENCH UNTIL NUTS ARE MOVED 1/3 TURN (120°±30°). SEE FIGURE D.

USE FELT MARKER

FIG. C
BEFORE TENSIONING

FIG. D
AFTER TENSIONING

STEP 1

AFTER ALIGNING CLEVIS ASSEMBLIES (ITEMS 2, 31, 32, 33 & 34) AND CLEVIS ON JACK ASSEMBLIES (ITEM 35 & 36) TIGHTEN HARDWARE (ITEMS 4, 6, 7 & 25) PER A-325 TENSIONING PROCEDURES. JACK ASSEMBLY (ITEM 36) IS USED FOR THE ELEVATION JACK ON 3.7 METRE APPLICATIONS WITH A STANDARD ENCLOSURE. JACK ASSEMBLY (ITEM 35) AS SHOWN, IS USED FOR ALL OTHER TYPICAL APPLICATIONS. SEE CALLOUT Δ .

STEP 2

DRY MOLY LUBRICANT (ITEM 12) IS SUPPLIED FOR FUTURE MAINTENANCE OF THIS MOUNT. DO NOT DISCARD. APPLY LUBRICANT ON BEARING PADS, ROTATING TUBE, BOTTOM SIDE OF SUPPORT PLATE AND TOP OF THRUST BLOCKS. ROTATE ANTENNA THRU ENTIRE AZIMUTH RANGE IN ORDER TO COMPLETELY COVER ROTATING TUBE AND SUPPORT PLATE. LUBRICANT WILL DRY IN 5 MINUTES. FOR BEST RESULTS, ALLOW LUBRICANT TO DRY FOR 4 HOURS IN ORDER TO FULLY CURE. REPLACE PLUGS WHEN COMPLETED. SEE CALLOUT Δ .

REVISIONS

WF	ZONE	REV	DESCRIPTION	DATE	APPROVED
			REL TO PRODUCTION	26AUG89	WF

A/R	36	EA	208366-2	—	EL JACK ASS'Y (10 TON)
A/R	35	EA	208366	—	AZ/EL JACK ASSY(10 TON)
1	34	EA	208371	208375	EL PIVOT ASSY(RH)
1	33	EA	208370	208375	EL PIVOT ASSY(LH)
1	32	EA	204769	208375	AZ PIVOT ASSY(BOTTOM)
1	31	EA	204768	208375	AZ PIVOT ASSY(TOP)
1	30	EA	9875-23	220266	KEY(0.250x0.250x1.25LG) (SST)
1	29	EA	209454	220266	WRENCH ADAPTER ASSY
1	28	EA	209455	220266	SPLIT TAPER BUSHING
8	27	EA	9999-121	220266	0.75 HEX (GALV)
8	26	EA	9997-202	220266	0.75 FLATWASHER (GALV)
8	25	EA	45980-17	220266	0.50-13UNCx1.75LG BOLT & NUT ASSY
8	24	EA	9997-174	220266	0.875 FLATWASHER (GALV)
8	23	EA	9999-174	220266	0.875 HEX NUT (GALV)
1	22	EA	200852	220266	STICK WAX
1	21	EA	46408-2	220266	LUG
1	20	EA	205692-2	220266	GROUNDING CABLE
2	19	EA	46409-2	220266	UNIVERSAL TERMINAL
2	18	EA	9997-56	220266	0.312 FLATWASHER (SST)
1	17	EA	9963-189	220266	0.312-18UNCx0.875LG HHCS(SST)
1	16	EA	9963-86	220266	0.312-18UNCx1.25LG HHCS(SST)
2	15	EA	9974-15	220266	0.25 LOCKWASHER (SST)
2	14	EA	9963-75	220266	0.25-20UNCx0.75LG HHCS (SST)
2	13	EA	36165-22	220266	LOCTITE
1	12	EA	207911	220266	DRY MOLY LUBRICANT
1	11	EA	9963-97	220266	0.312-18UNCx1.50LG HHCS (SST)
3	10	EA	9974-17	220266	0.312 LOCKWASHER (SST)
2	9	EA	9999-59	220266	0.312 HEX NUT (SST)
20	8	EA	9997-227	220266	0.625 FLATWASHER
8	7	EA	45980-15	220266	0.75-10UNCx1.75LG BOLT & NUT ASSY
20	6	EA	45980-7	220266	0.625-11UNCx2.25LG BOLT & NUT ASSY
20	5	EA	9997-228	220266	0.50 FLATWASHER
4	4	EA	9963-771	220266	0.50-13UNCx1.00LG HHCS
1	3	EA	204737	208800	AZ TILLER ARM WELDMENT
1	2	EA	204754	208800	EL SPT ANGLE ASSY
1	1	EA	208800	—	3.7/4.6 MOTORIZABLE MT ASSY

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES

TOLERANCES

1 PLACE DECIMALS ± .1
2 PLACE DECIMALS ± .03
3 PLACE DECIMALS ± .010
ANGLE ± 0.5°

ALL SURFACES
CONC. TOL. APPLY TO STOCK SIZES
SIMILAR TO
SUPERSEDES DWG OF

208374

NEXT ASSY

USED ON

APPLICATION

DATE

CHKD

APPROV

APPROV

APPROV

APPROV

FINISH

SCALE

PREP. OR

DATE

DATE

DATE

ANDREW CORPORATION
10500 W. 153rd Street
Orland Park, Illinois U.S.A. 60462

3.7/4.5/4.6 METRE
MANUAL JACK
INSTALLATION INSTRUCTIONS

SIZE

PREP. NO.

PREP. NO.

84147

239318

SCALE

1 of 3

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except to the extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used in the manufacture or sale of apparatus without written permission.

CAD FILE NO:
ES05QN1

MFG PROCESSES

INSPECTION PROCEDURES

TEST PROCEDURES

AUSA SPECIFICATIONS

NOTES: (UNLESS OTHERWISE SPECIFIED)
 1. REMOVE ALL BURRS AND SHARP EDGES
 2. DIMENSIONS APPLY BEFORE PLATING
 3. INTERPRET DRAWING PER AMS Y14.5M-1982

REVIEWS				DATE	APPROVED
MF	ZONE	REV	DESCRIPTION		
			REL TO PRODUCTION	26AUG89	VF

D

C

B


A

D

C

B

A

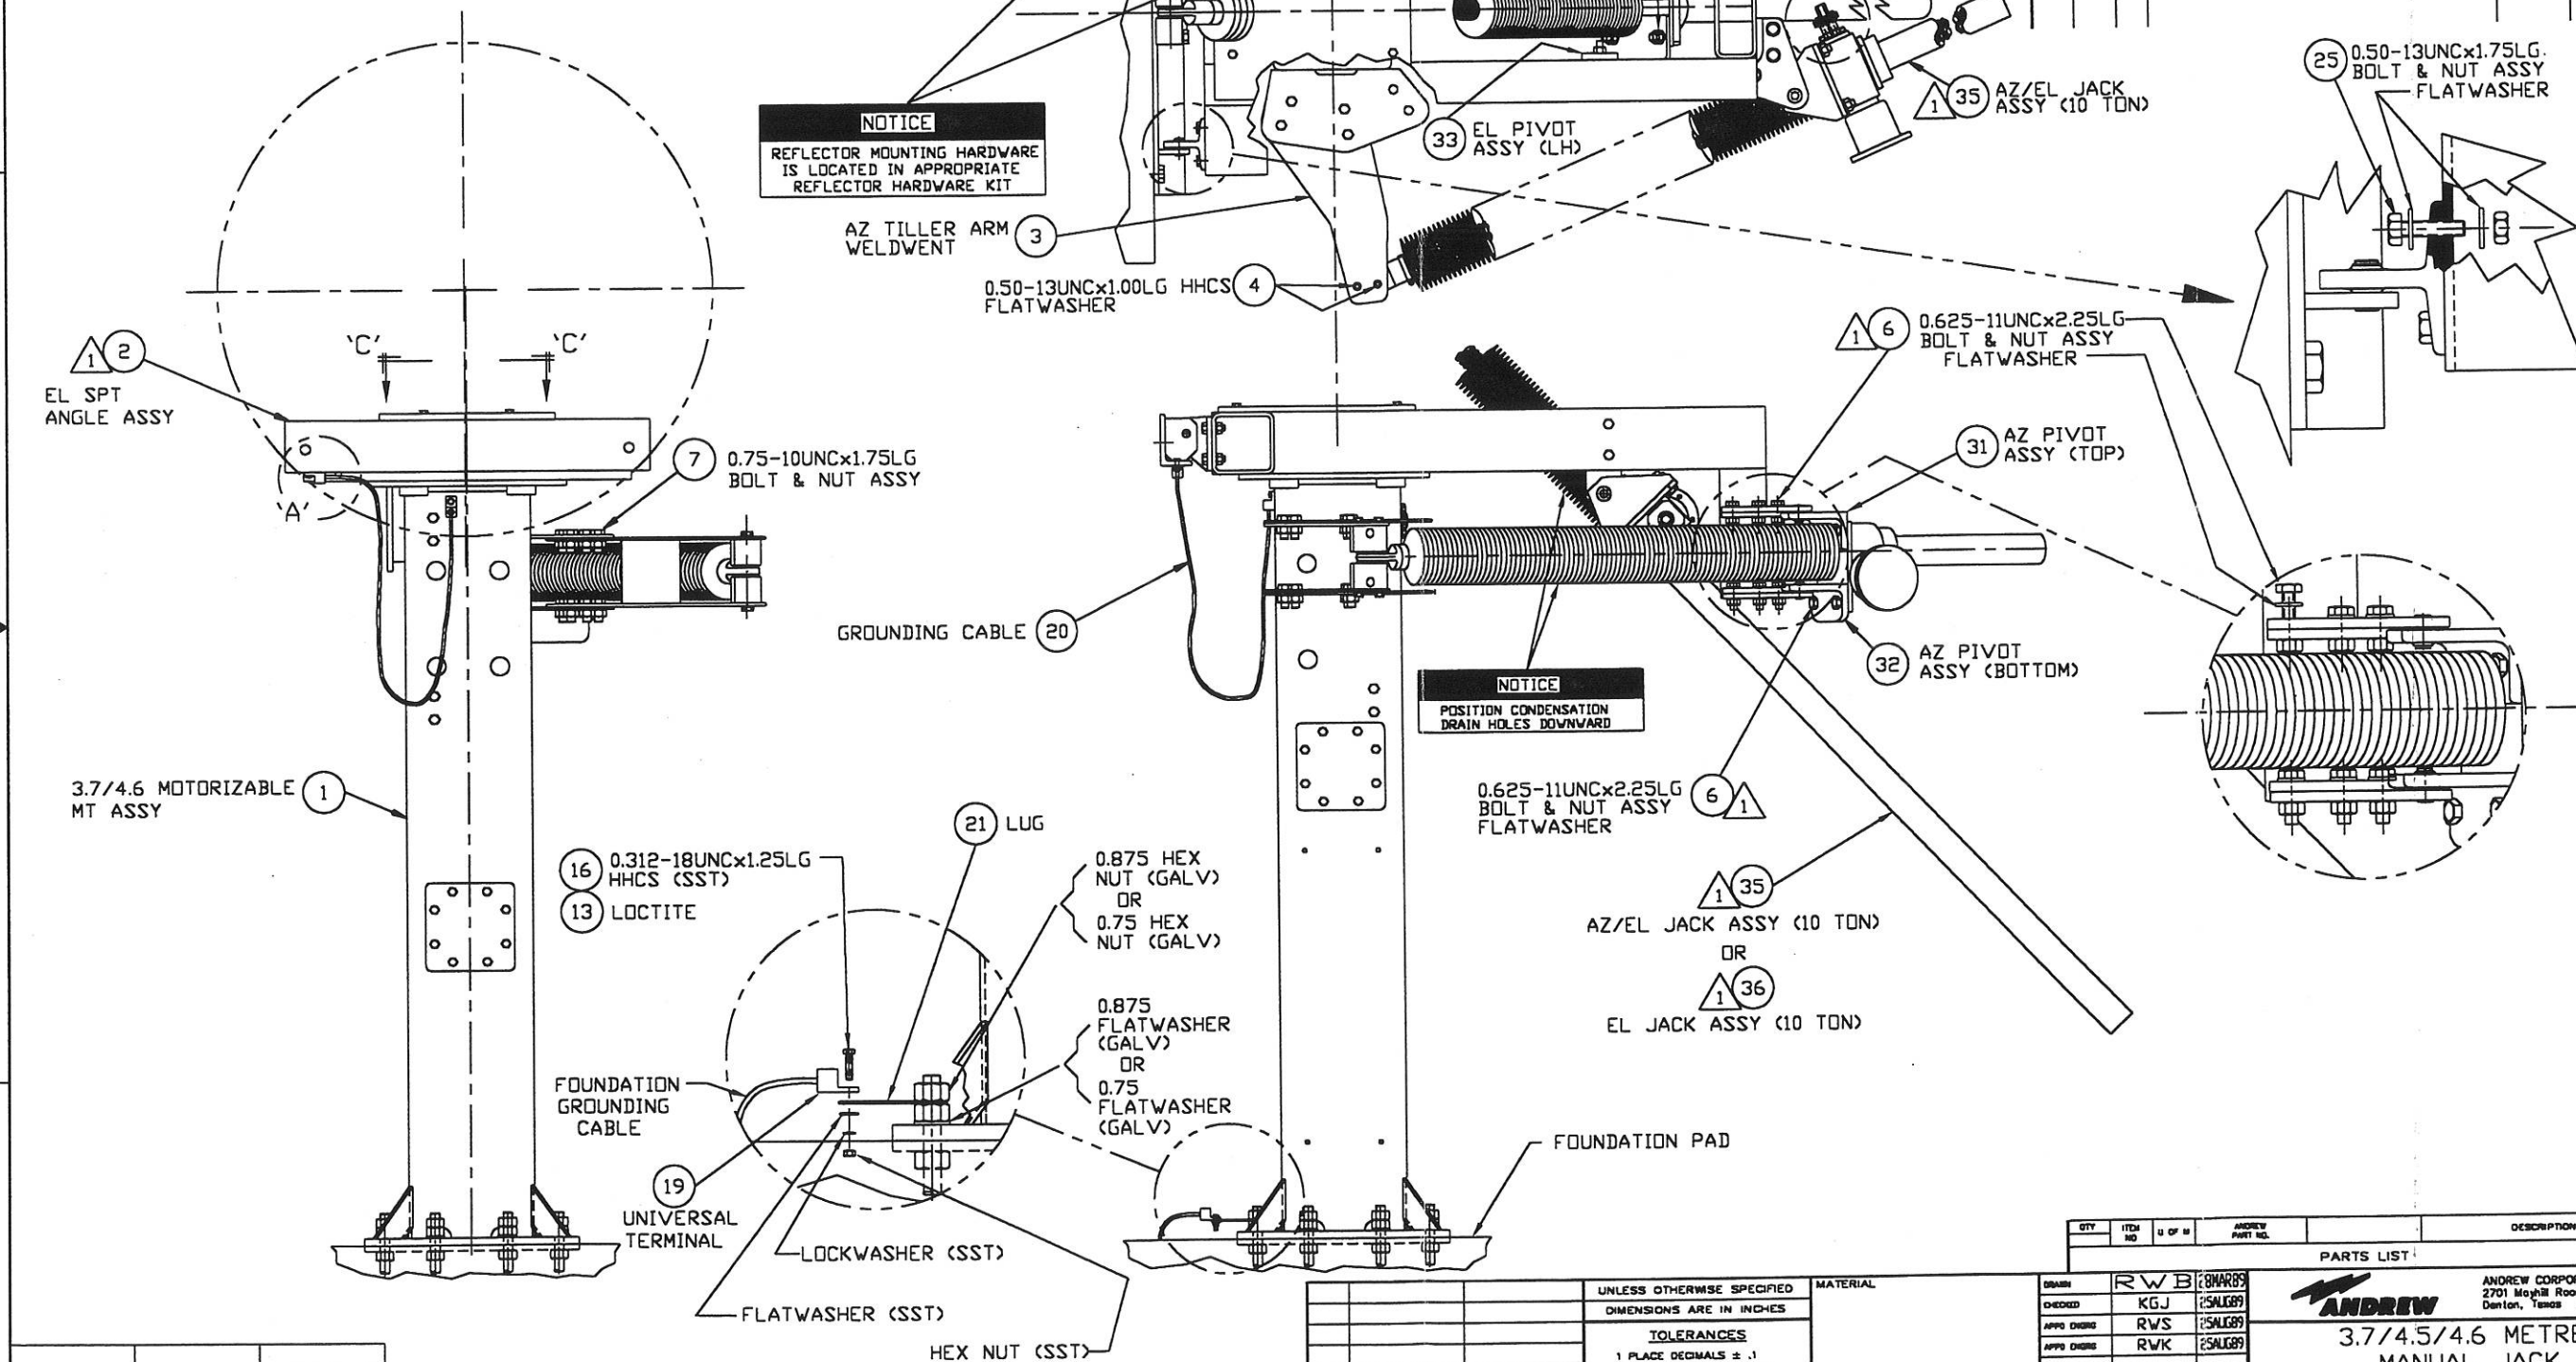

MFG	INSPECTION	TEST
PROCESSES	PROCEDURES	PROCEDURES

AUSA SPECIFICATIONS

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except to any extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used as the basis for the manufacture or sale of apparatus without written permission.

CAD FILE NO:
 ES05QN2


UNLESS OTHERWISE SPECIFIED	
DIMENSIONS ARE IN INCHES	
TOLERANCES	
1 PLACE DECIMALS ± .1	
2 PLACE DECIMALS ± .03	
3 PLACE DECIMALS ± .010	
ANGLE ± 0.5°	
ALL SURFACES	
COMM. TOL. APPLY TO STOCK SIZES	
SIMILAR TO	
SUPERSEDES ORG. OF	
NEXT ASSY	USED ON
APPLICATION	

QTY	ITEM NO	U OF M	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
1	1	1	3.7/4.5/4.6 METRE	MANUAL JACK
1	2	1	EL SPT ANGLE ASSY	
1	3	1	AZ TILLER ARM WELDMENT	
1	4	1	0.50-13UNCx1.00LG HHCS	FLATWASHER
1	5	1	EL PIVOT ASSY (RH)	
1	6	1	0.625-11UNCx2.25LG BOLT & NUT ASSY	FLATWASHER
1	7	1	0.75-10UNCx1.75LG BOLT & NUT ASSY	
1	8	1	0.312-18UNCx1.25LG HHCS (SST)	
1	9	1	LOCTITE	
1	10	1	LUG	
1	11	1	0.875 HEX NUT (GALV) OR 0.75 HEX NUT (GALV)	
1	12	1	0.875 FLATWASHER (GALV) OR 0.75 FLATWASHER (GALV)	
1	13	1	FOUNDATION GROUNDING CABLE	
1	14	1	UNIVERSAL TERMINAL	
1	15	1	LOCKWASHER (SST)	
1	16	1	FLATWASHER (SST)	
1	17	1	HEX NUT (SST)	
1	18	1	FOUNDATION PAD	
1	19	1	AZ/EL JACK ASSY (10 TON) OR EL JACK ASSY (10 TON)	
1	20	1	GROUNDING CABLE	
1	21	1	AZ PIVOT ASSY (TOP)	
1	22	1	AZ PIVOT ASSY (BOTTOM)	
1	23	1	0.50-13UNCx1.75LG BOLT & NUT ASSY	FLATWASHER
1	24	1	0.625-11UNCx2.25LG BOLT & NUT ASSY	FLATWASHER


ANDREW CORPORATION	
2701 Mayhill Road	
Denton, Texas U.S.A. 76208	
3.7/4.5/4.6 METRE	
MANUAL JACK	
INSTALLATION INSTRUCTIONS	
SIZE TECH NO.	ORG. NO.
D 84147	239318
SCALE 1/8	SHEET 2
FIG. OR	6114
DSTR	A

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING PER AMS Y14.5M-1982


Dwg No. 239318			3	1
REVISIONS				
MF	ZONE	REV	DESCRIPTION	DATE
			REL TO PRODUCTION	26AUG89
				WF

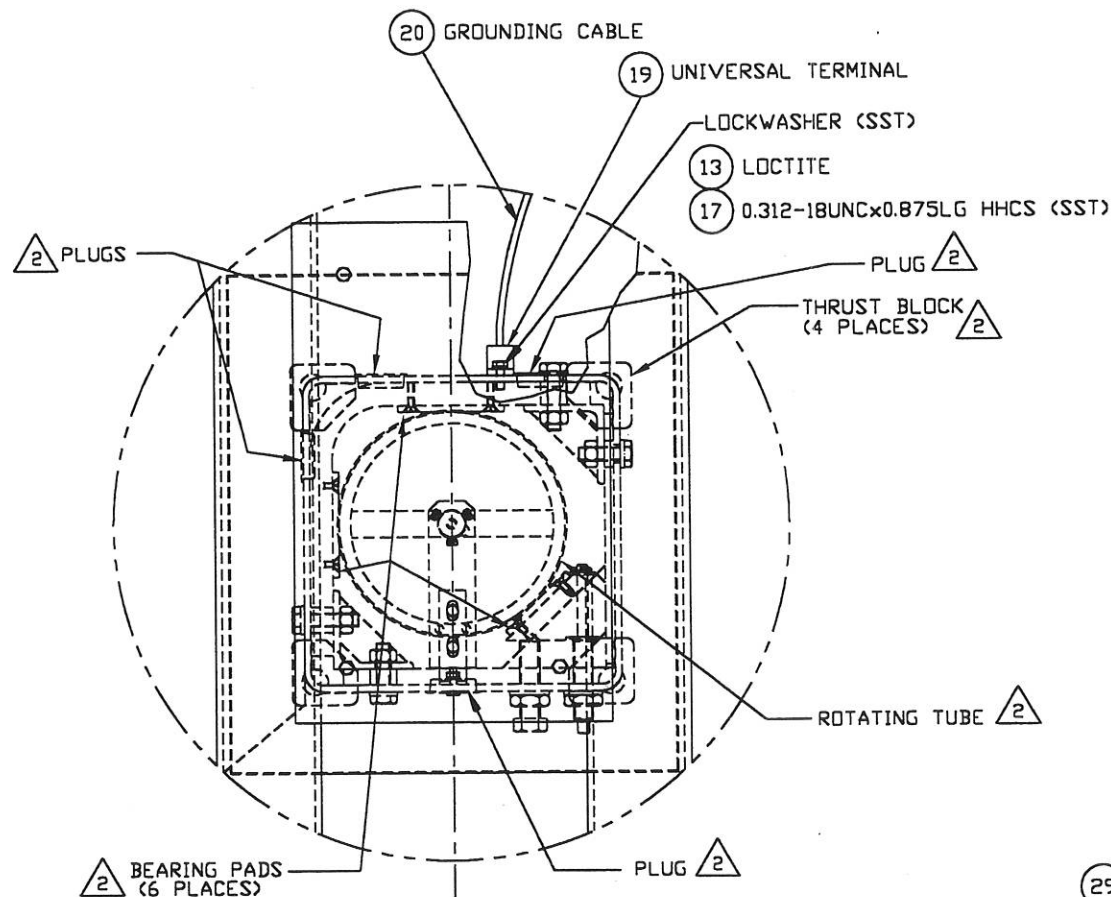

VIEW 'C'
ROTATED

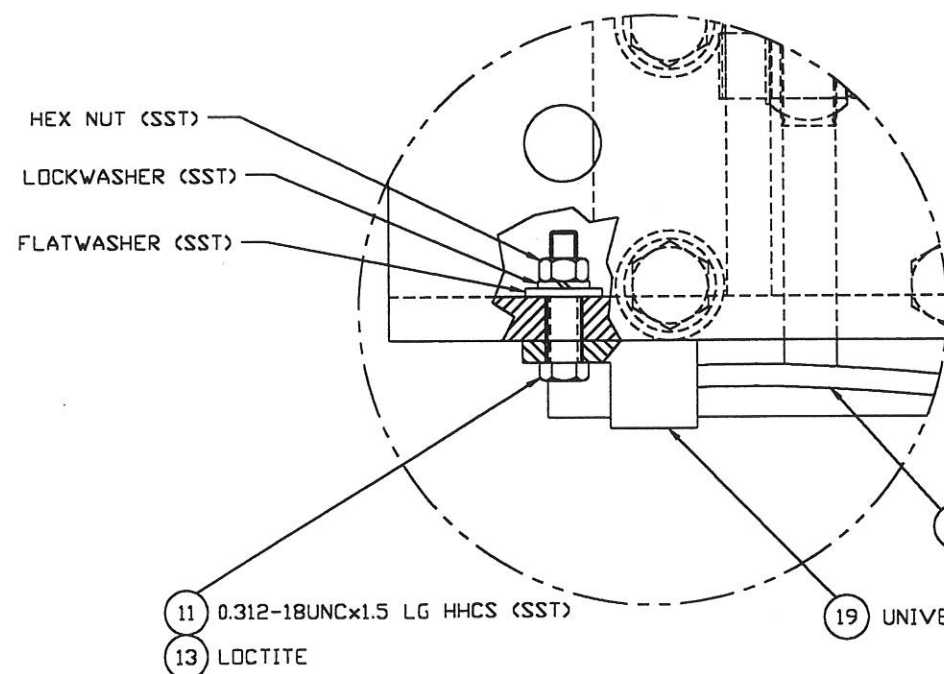

VIEW 'A'

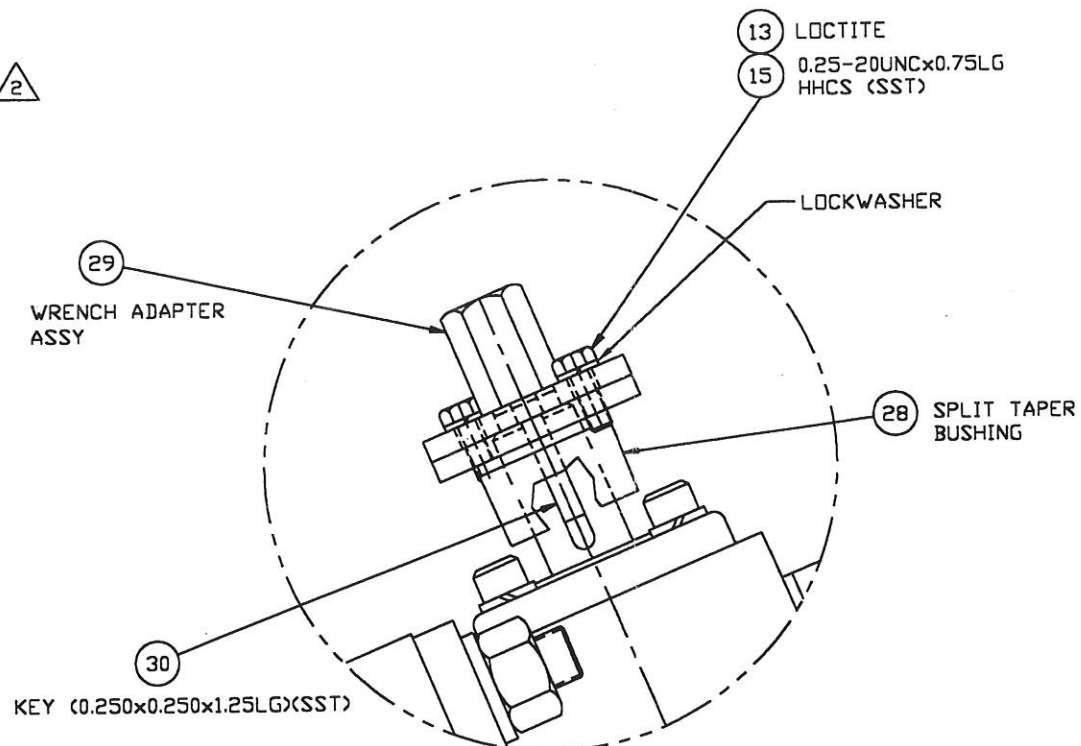

VIEW 'B'

MFG PROCESSES	INSPECTION PROCEDURES	TEST PROCEDURES
AUSA SPECIFICATIONS		

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except in any event in which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used as the basis for the manufacture or sale of apparatus without written permission.

CAD FILE NO:
ES05QN3

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	
TOLERANCES	
1 PLACE DECIMALS ± .1	
2 PLACE DECIMALS ± .03	
3 PLACE DECIMALS ± .010	
ANGLE ± 0.5°	
ALL SURFACES CON. TOL. APPLY TO STOCK SIZES	
FINISH	
NEXT ASSY	USED ON
APPLICATION	

MATERIAL	
FINISH	

QTY	ITEM	U OF M	ANDREW PART NO.	DESCRIPTION
PARTS LIST				
DESIGN	RWB	23MAR89	ANDREW ANDREW CORPORATION 2701 Mayhill Road Denton, Texas U.S.A. 76208	
CHECKED	KGJ	25AUG89		
APPROV. ENGINEER	RWS	25AUG89		
APPROV. MFG	RWK	25AUG89		
APPROV. Q.C.			3.7/4.5/4.6 METRE MANUAL JACK INSTALLATION INSTRUCTIONS	
SIZE	FROM NO.	D 84147	DWG. NO.	239318
SCALE	6:1	1:1	SHEET	3

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES
2. DIMENSIONS APPLY BEFORE PLATING
3. INTERPRET DRAWING PER AMS Y14.5M-1982

GENERAL

READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW THE SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.



THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE ANTENNA AND/OR OTHER PROPERTY AND POSSIBLE INJURY TO PERSONNEL.

NOTICE

THIS INDICATES INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.

UNPACKING

CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENTS SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR SHORTAGE WILL PREVENT SATISFACTORY ASSEMBLY, INSTALLATION AND OPERATION OF THE ANTENNA.

NOTICE

THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA REQUIRES QUALIFIED, EXPERIENCED PERSONNEL. ANDREW INSTALLATION INSTRUCTIONS HAVE BEEN WRITTEN AND ILLUSTRATED FOR SUCH INSTALLATION PERSONNEL. ANTENNA SYSTEMS SHOULD BE INSPECTED ONCE A YEAR BY QUALIFIED PERSONNEL TO VERIFY PROPER INSTALLATION, MAINTENANCE AND CONDITION OF EQUIPMENT. ANDREW DISCLAIMS ANY LIABILITY OR RESPONSIBILITY FOR THE RESULTS OF IMPROPER OR UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.

TOOLS RECOMMENDED FOR PROPER INSTALLATION

QTY	DESCRIPTION
2	7/16" OPEN END OR COMBINATION WRENCH
2	9/16" OPEN END OR COMBINATION WRENCH
2	3/4" OPEN END OR COMBINATION WRENCH

TYPE 207885-2 ESA ADJUSTMENT KIT IS UTILIZED IN CONJUNCTION WITH 4.5 METRE EARTH STATION ANTENNAS TO ENABLE CONTINUOUS FINE ADJUSTMENT OF AT LEAST 15 DEGREES IN BOTH AZIMUTH AND ELEVATION AXES.

STEP 1: ATTACH BASE HALF CLAMPS TO AZIMUTH OR ELEVATION STRUT IN POSITION SHOWN USING 0.50-13UNCx6.5 LONG THREADED ROD (ITEM 17), 0.50 LOCKWASHER (ITEM 3) AND 0.50 HEX NUT (ITEM 10).

STEP 2: ATTACH CLAMP SEGMENTS (ITEM 5) AND SPACER PLATE (ITEM 11) ONTO MANUAL ACTUATOR IN POSITION SHOWN USING ITEMS 8, 9 AND 12.

STEP 3: LOOSELY ATTACH BASE ANGLE (ITEM 13) TO MANUAL ACTUATOR USING ITEMS 2, 3 AND 4.

STEP 4: ATTACH HEX ADAPTER (ITEM 6) TO END SHAFT OF MANUAL ACTUATOR USING ITEMS 7, 8 AND 9.

STEP 5: MOUNT MANUAL ACTUATOR (ITEM 1) ONTO 0.50-13UNCx6.5 LONG THREADED ROD AND SECURE WITH ITEMS 3 AND 10.

STEP 6: INSTALL U-BOLT (ITEM 14) AROUND ADJACENT STRUT SEGMENT AND ATTACH TO BASE ANGLE USING 0.375 LOCKWASHER (ITEM 16) AND HEX NUT (ITEM 15).


STEP 7: SECURELY TIGHTEN ALL REMAINING HARDWARE.



ENSURE STRUT SET SCREWS AND NUTS ON U-BOLTS ON MAIN SUPPORT TUBES ARE LOOSENED BEFORE ATTEMPTING TO PERFORM ANTENNA AZIMUTH/ELEVATION ADJUSTMENTS AND TIGHTENED UPON COMPLETION OF AZIMUTH/ELEVATION ADJUSTMENTS.

STEP 8: UPON COMPLETION OF ANTENNA AZIMUTH/ELEVATION ADJUSTMENTS, REMOVE MANUAL ACTUATOR OPPOSITE ASSEMBLY AND STORE IN A DRY AREA FOR FUTURE USE.

MFG	INSPECTION	TEST
PROCESSES	PROCEDURES	PROCEDURES
AUSA SPECIFICATIONS		

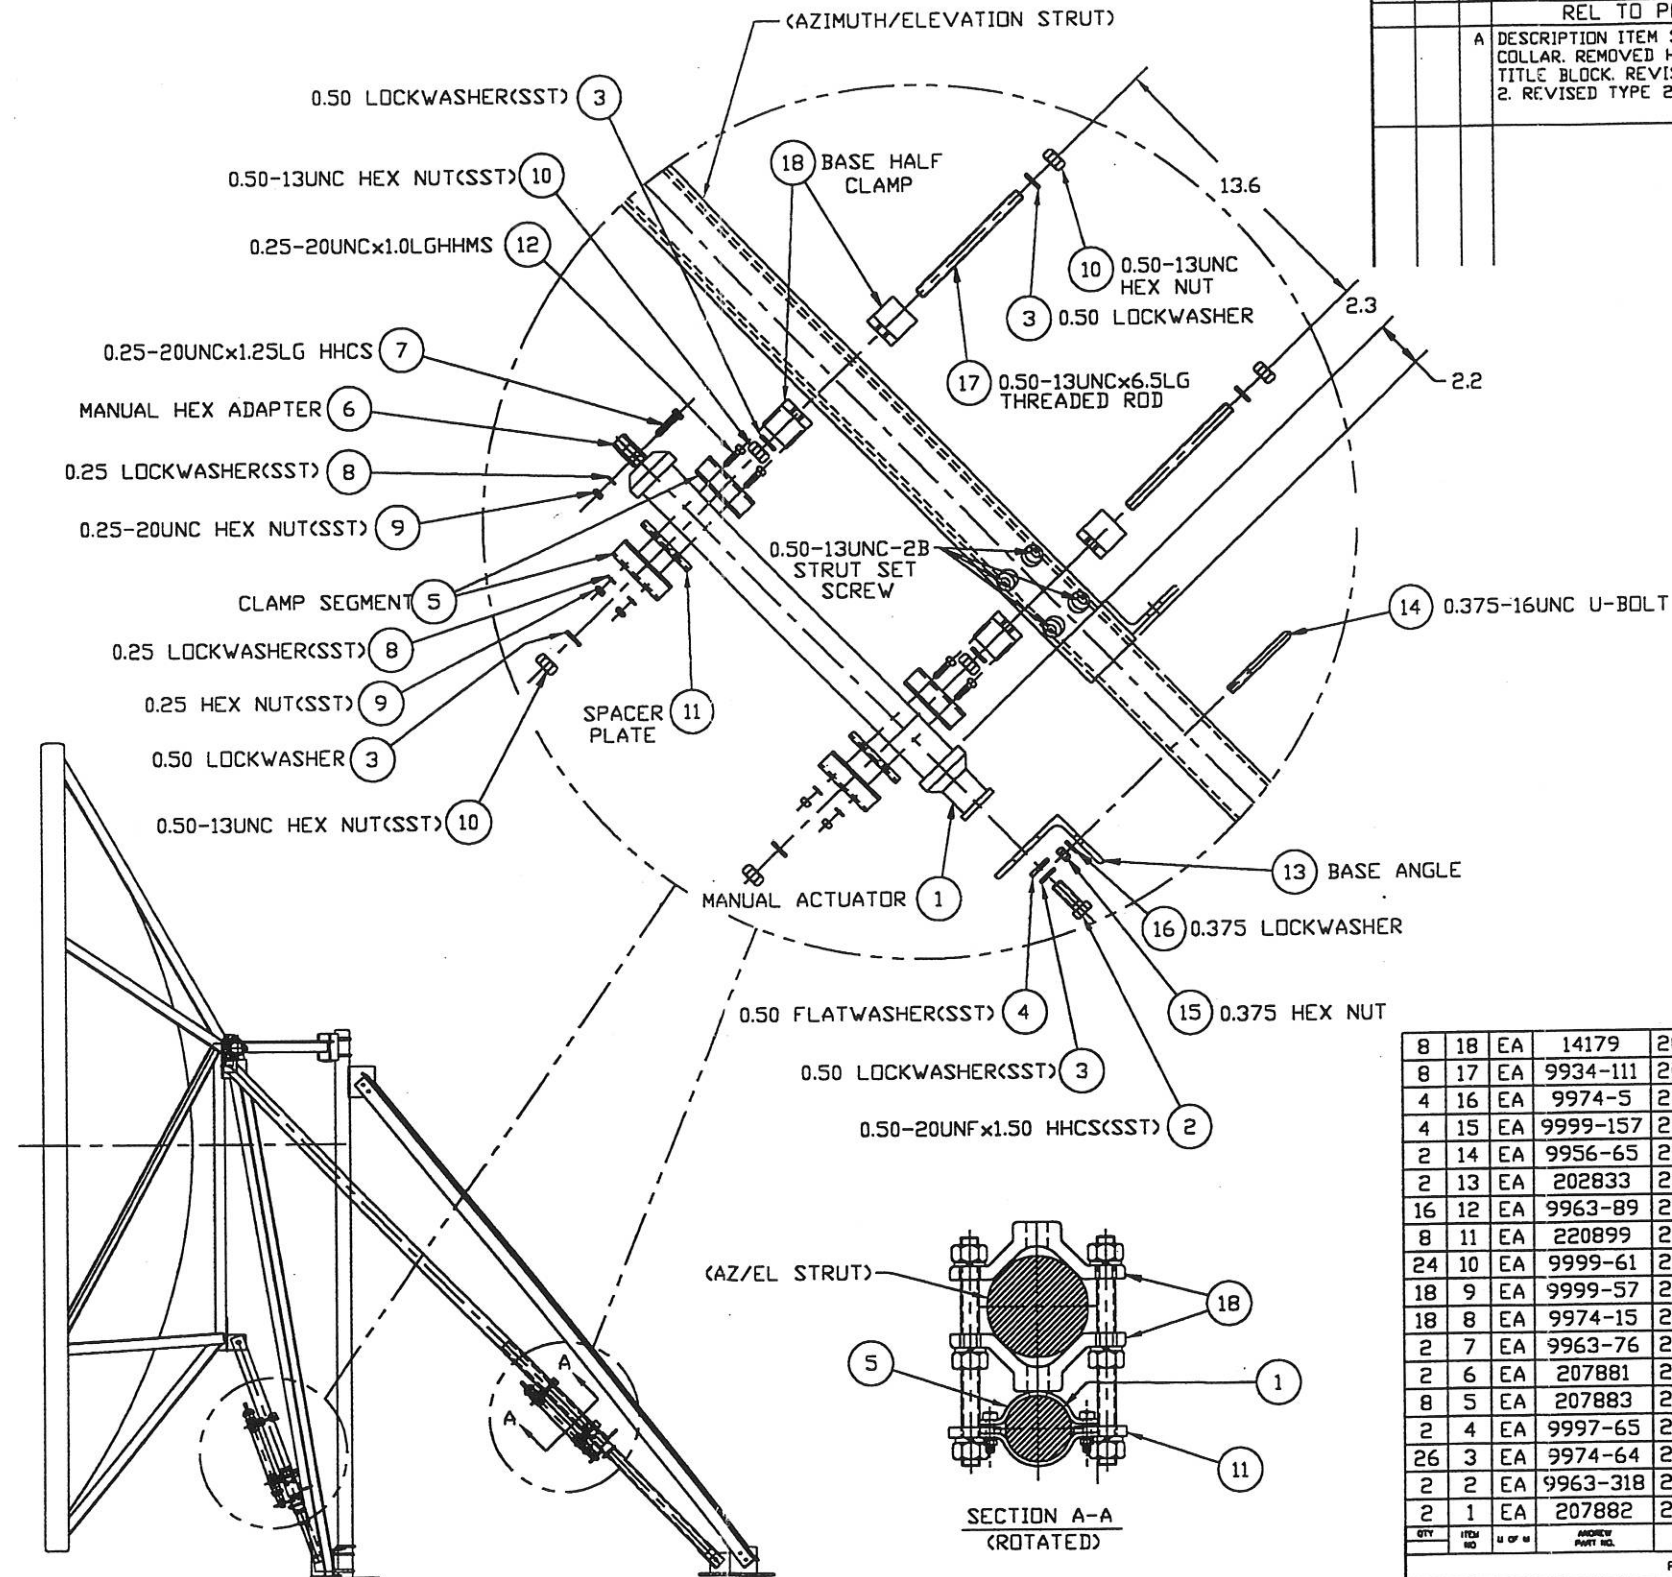

REVISIONS				
REV	DATE	DESCRIPTION	APPROVED	BY
1	14SEP89	REL TO PRODUCTION	WF	
A	18JAN91	DESCRIPTION ITEM 5 WAS MOUNT COLLAR. REMOVED HAND CRANK FROM TITLE BLOCK. REVISED NOTE IN STEP 2. REVISED TYPE 207885-2 NOTE. DCN 358.33(B)	VR	

QTY	ITEM NO	U OF U	ANDREW PART NO.	PART OF	DESCRIPTION
8	18	EA	14179	207885-2	BASE HALF CLAMP
8	17	EA	9934-111	207885-2	0.50-13UNCx6.5LG THREADED ROD(SST)
4	16	EA	9974-5	207885-2	0.375 LOCKWASHER
4	15	EA	9999-157	207885-2	0.375 HEX NUT
2	14	EA	9956-65	207885-2	0.375-16UNC U-BOLT
2	13	EA	202833	207885-2	BASE ANGLE
16	12	EA	9963-89	207885-2	0.25-20UNCx1.0LG HHMS(SST)
8	11	EA	220899	207885-2	SPACER PLATE
24	10	EA	9999-61	207885-2	0.50-13UNC HEX NUT(SST)
18	9	EA	9999-57	207885-2	0.25 HEX NUT(SST)
18	8	EA	9974-15	207885-2	0.25 LOCKWASHER(SST)
2	7	EA	9963-76	207885-2	0.25-20UNCx1.25LG HHMS
2	6	EA	207881	207885-2	0.75 HEX ADAPTER
8	5	EA	207883	207885-2	CLAMP SEGMENT
2	4	EA	9997-65	207885-2	0.50 FLATWASHER(SST)
26	3	EA	9974-64	207885-2	0.50 LOCKWASHER(SST)
2	2	EA	9963-318	207885-2	0.50-20UNF x 1.50LG HHMS(SST)
2	1	EA	207882	207885-2	MANUAL ACTUATOR

ANDREW CORPORATION
2701 Mopac Road
Denton, Texas U.S.A. 76208

4.5 METRE ESA ADJUSTMENT KIT

SIZE FROM NO. D 84147

QTY NO. 239344

SCALE 1=20

PROD. OR 6117

DISTR A

1

CAD FILE NO:
ES067G1A

NOTES: (UNLESS OTHERWISE SPECIFIED)
1. REMOVE ALL BURRS AND SHARP EDGES.
2. DIMENSIONS APPLY BEFORE PLATING.
3. INTERPRET DRAWING PER ANSI Y14.5M-1982.

4. GENERAL

READ THE INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY. FOLLOW SPECIFIED SEQUENCES FOR PROPER ASSEMBLY AND OPERATION.



THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE EQUIPMENT AND/OR OTHER PROPERTY AND POSSIBLE INJURY TO PERSONNEL.



THIS WARNING INDICATES THAT FAILURE TO FOLLOW THE PROPER PROCEDURE AT THIS POINT COULD RESULT IN DAMAGE TO THE EQUIPMENT AND/OR OTHER PROPERTY AND RISK OF ELECTRICAL SHOCK, INJURY OR DEATH.

NOTICE

THIS REPRESENTS INFORMATION THAT SHOULD BE READ BEFORE PROCEEDING.

UNPACKING

CAREFULLY REMOVE ALL PARTS FROM SHIPPING BOXES. THE CONTENTS SHOULD CORRESPOND WITH THE PARTS LIST. ANY DAMAGE OR SHORTAGE WILL PREVENT SATISFACTORY ASSEMBLY, INSTALLATION AND OPERATION OF THE EQUIPMENT.

NOTICE

THE INSTALLATION, MAINTENANCE OR REMOVAL OF AN ANTENNA REQUIRES QUALIFIED, EXPERIENCED PERSONNEL. ANDREW INSTALLATION INSTRUCTIONS HAVE BEEN WRITTEN AND ILLUSTRATED FOR SUCH INSTALLATION PERSONNEL. ANTENNA SYSTEMS SHOULD BE INSPECTED ONCE A YEAR BY QUALIFIED PERSONNEL TO VERIFY PROPER INSTALLATION, MAINTENANCE AND CONDITION OF EQUIPMENT. ANDREW DISCLAIMS ANY LIABILITY OR RESPONSIBILITY FOR THE RESULTS OF IMPROPER OR UNSAFE INSTALLATION OR MAINTENANCE PRACTICES.

5. TOOLS RECOMMENDED FOR PROPER INSTALLATION

QTY	DESCRIPTION
1	3/8" OPEN END OR COMBINATION WRENCH
2	9/16" OPEN END OR COMBINATION WRENCH
2	FLAT BLADE SCREWDRIVERS, SMALL AND MEDIUM
1	PHILLIPS SCREWDRIVER, MEDIUM
1	DIAGONAL CUTTERS OR EQUIVALENT

13. THE ADDITION OF MOTORIZATION REQUIRES SPECIAL SAFETY CONSIDERATIONS IN CE COUNTRIES. ACCESS TO THIS EQUIPMENT MUST BE LIMITED TO SERVICE ENGINEERS AND TECHNICIANS ONLY, THEREFORE ACCESS CONTROL AND WARNING SIGNS ARE REQUIRED IN CE COUNTRIES. THIS EQUIPMENT MUST BE PROTECTED TO THE RELEVANT CE DIRECTIVES AT TIME OF INSTALLATION.



14. FLEXIBLE TRIM (IT. 12) MUST BE INSTALLED IN CE COUNTRIES TO COMPLY WITH MACHINERY DIRECTIVE ESSENTIAL HEALTH & SAFETY REQUIREMENTS.



15. ITEM QUANTITY SHOWN IS SPECIFIC FOR THE 3.6-9.3M LOCAL MOTOR CONTROLLER MOUNTING AND CABLE ROUTING INSTALLATION. THE INSTALLATION KIT, 300501, INCLUDES SPARES OF VARIOUS HARDWARE ITEMS.

3.6 - 4.6M ANTENNA CABLE SUMMARY

CABLE FUNCTION	ESTIMATED LENGTH (FT)	QTY REQ'D
AZ MOTOR	20	2
AZ LIMIT SWITCH	8	1
AZ RESOLVER	8	1
EL MOTOR	20	2
EL LIMIT SWITCH	10	1
EL RESOLVER	15	1
POL MOTOR/LIM SW	8	1
POL RESOLVER	8	1

5.6 - 9.3M ANTENNA CABLE SUMMARY



CABLE FUNCTION	ESTIMATED LENGTH (FT)	QTY REQ'D
AZ MOTOR	25	2
AZ LIMIT SWITCH	20	1
AZ RESOLVER	20	1
EL MOTOR	20	2
EL LIMIT SWITCH	25	1
EL RESOLVER	20	1
POL MOTOR/LIM SW	8	1
POL RESOLVER	8	1

FOR REFERENCE ONLY

4	15	EA	300938	300501	1.625 SQUARE WASHER
4	14	EA	9997-131	300501	.25 FLAT WASHER,SST
4	13	EA	EWSHL-11060	300501	WASHER, LOCK,1/4,SST
1	12	EA	206049	300501	FLEXIBLE TRIM
20	11	EA	ECLAT-12137	300501	CABLE TIE, 120 LBS
3	10	EA	36719	300501	INSULATED HANGER KIT
2	9	EA	31768A-2	300501	ANGLE ADAPTOR KIT
5	8	EA	ECLMP-18164	300501	CLMP,WORM DR,4.1-7.0 DIA
4	7	EA	ENUTS-11090	300501	NUT,HEX,3/8-16UNC SST
4	6	EA	9963-416	300501	SCR,HEX CAP,1/4-20X.75 LG,SST
4	5	EA	204905-2	300501	.250-20UNC SLIDING NUT
4	4	EA	EWSHL-11080	300501	WSHR,LOCK,3/8 SST
4	3	EA	EWSHF-20806	300501	WSHR,FLAT,3/8 X 1.0 SST
4	2	EA	ESCRS-73818	300501	SCR,HEX CAP,3/8-16X1.25 LG SST
2	1	EA	AE01M-C0151	300501	CHANNEL,MOD-LMC MTG


QTY	ITEM NO.	U OF M	ANDREW PART NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	REF. DESIGNATOR	NOTES

DASH NO./DETAIL	PARTS LIST



DIMENSIONS (MILLIMETERS). SINGLE DIMENSIONED DIMENSIONS ARE IN INCHES.		DRN: FORRISTAL 05/13/93	ANDREW CORPORATION Electronic Technology Center Richardson, TX U.S.A.	
METRIC []		CHECKED: TFN 5/27/93	3.6-9.3M LMC MOUNTING AND CABLE ROUTING INSTALL	
TOL. ON (METRIC) DIM: .005-.010, .010-.020		APPRO. PWD: PTF 5/27/93		
HOLE DIMENSIONS: UNDER .010 = +.005-.005 OVER .010 = +.005-.005		APPRO. ENG: GC 5/27/93		
UNDER .010 = +.005-.005 OVER .010 = +.005-.005		APPRO. QC: SLI 5/27/93		
ANGLES: .010 CONCENTRICITY BETWEEN DIA. ON A COMMON AXIS TO BE WITHIN .010 A.		APPRO. MFG: SJA 5/27/93	THIRD ANGLE PROJECTION	
				
		SIZE: FROM NO. D 84147	DWG. NO. 239971	REV. C
		SCALE: 1/1	DS00KB1	SHEET 1 OF 4

NOTICE: These drawings and specifications are the property of ANDREW CORPORATION. All information contained herein which is not known generally in the field of ANDREW shall be confidential except to any extent to which it is established to have been known previously from sources other than ANDREW. These drawings and specifications may not be reproduced, copied or used as the basis for the manufacture or sale of apparatus without written permission.


APPLICATION

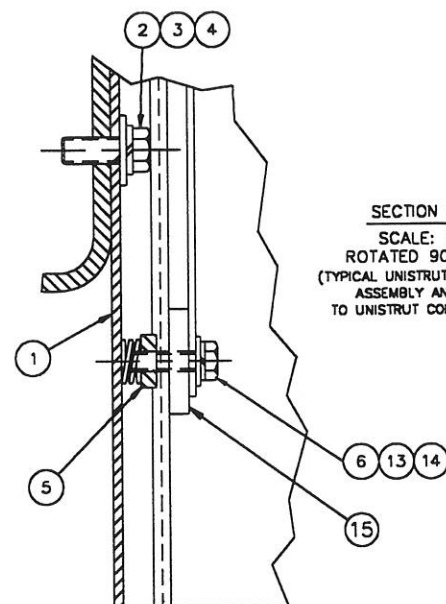

SECTION A-A
SCALE: NONE
ROTATED 90° CCW
(TYPICAL UNISTRUT TO MOUNT
ASSEMBLY AND LMC
TO UNISTRUT CONNECTIONS)

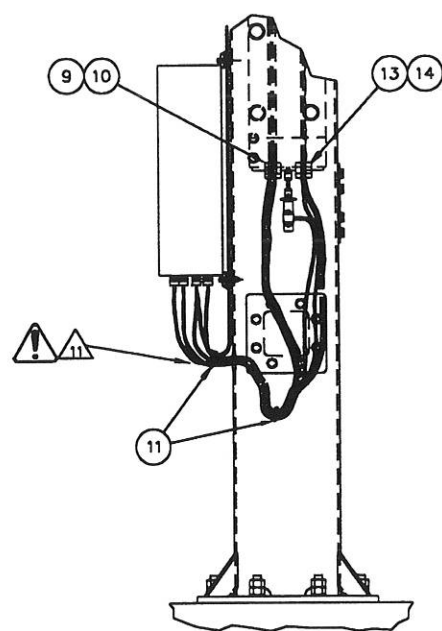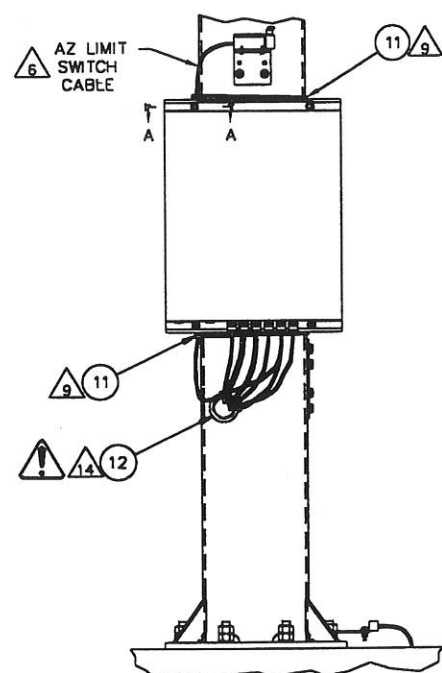

FRONT VIEW

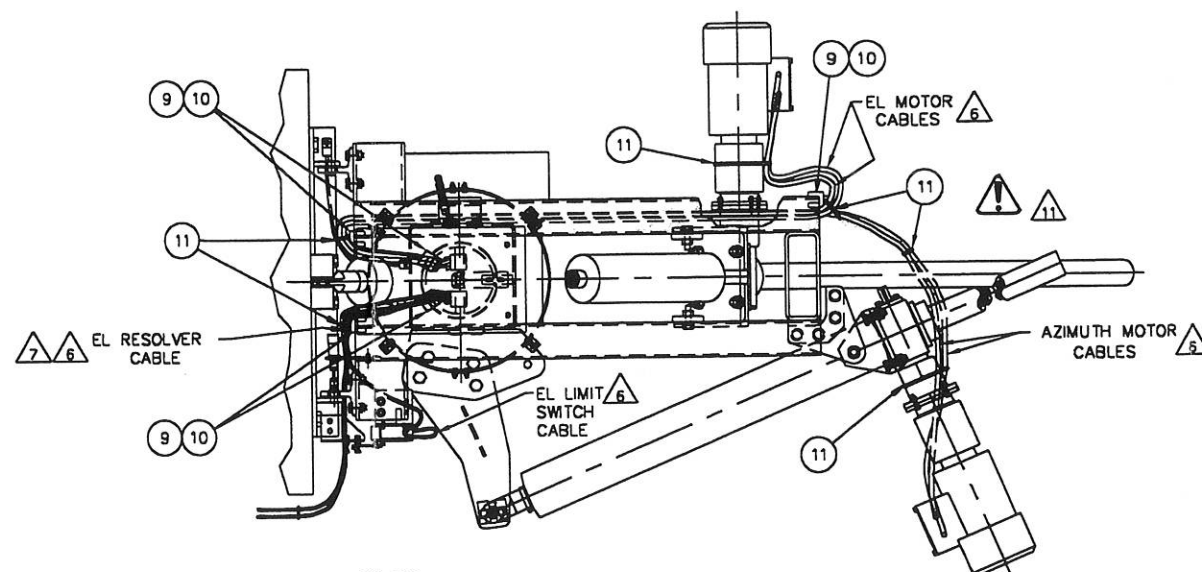

TO POLARIZATION
DRIVE

POLARIZATION
RESOLVER &
POLARIZATION MOTOR /
LIMIT SWITCH CABLES

AZ RESOLVER
CABLE

EL MOTOR
CABLES

AZIMUTH MOTOR
CABLES

EL LIMIT
SWITCH
CABLE

EL RESOLVER
CABLE

3.6 - 4.6M ANTENNA INSTALLATIONS

